

Tools required:

Jack and jackstands Ratchet Sockets –13mm deep, 15mm deep Extension

10mm wrench Pliers or cutoff tool

- 1. Disconnect battery using 10mm wrench.
- 2. Using 15mm socket and extension, remove driver and passenger upper motor mount nuts as shown in **IMAGE 1**.
- 3. Lift vehicle and support securely with jack stands. Using an engine support bar or jack, support the engine.
- 4. Remove four 13mm bolts from passenger side engine stand as shown in **IMAGE 2**.





5. Install passenger side motor mount using supplied 15mm hardware as shown in **IMAGE 3**. **NOTE: Tabs on ground strap need to be flattened as shown in IMAGE 4**. Alternatively, you can cut the tabs off the strap, or cut the OEM stud and reuse it in the original mounting location. See **IMAGE 5** and 6.



continued









- 6. Remove four 13mm bolts from drivers side engine stand as shown in **IMAGE 7**.
- 7. Install drivers side engine stand using supplied 15mm hardware as shown in **IMAGE 8**.



continued

- 8. Lower engine until it sits on new motor mounts.
- 9. Install upper motor mount nuts.
- 10. Lower vehicle and connect battery.

Torque Specs: Bolts to Block: 41ft-lb Stand to mount nut: 46ft-lb



WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.

