 


SEAT COVERS
BY

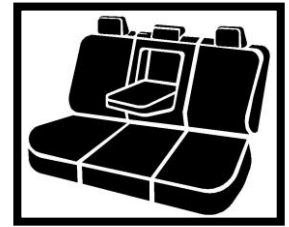

FEATURING
SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR

NP92-69/ Oe32-69/ SL62-69/ SP82-69/ TR42-69/ TRS42-69

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVERS 40 SECTION

1. Move seat forward and center cover on seat
2. Tuck flap through crevice under backrest
3. Pass all straps under seat and buckle to back flap
4. Adjust straps and buckles to equalize tension

B) BACKREST COVER 40 SECTION

1. Detach bottom velcro on cover
2. Hold down backrest in $\frac{3}{4}$ position and remove headrest (see note on reverse)
3. Slip cover over backrest
4. Place latch through opening provided
5. Pass bottom flap on cover through crevice and place backrest in fold flat position
6. Pull bottom flap through crevice and attach velcro at back
7. Smooth cover from top to bottom. Adjust velcro if required

C) BACKREST COVER 20 SECTION

1. Open zipper and detach velcro on cover
2. Slipcover over backrest. Headrests are not removable. Cover has allowances for headrests
3. Ensure cover is installed under seat belt
4. Place pull tab latch through opening provided
5. Close zipper and unlatch backrest and hold down in $\frac{3}{4}$ position and pass bottom flap through crevice
6. Place backrest in fold flat position and attach velcro
7. Place backrest in $\frac{3}{4}$ up position and tuck in cover flap around HR post
8. Place backrest in up position and align stretch fabric material with velcro supplied inside the armrest well.
NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.
9. Smooth cover from top to bottom. Adjust velcro if required

D) CUSHION COVER 20 SECTION

1. Center cover on seat
2. Tuck flap through crevice under backrest
3. Pass side straps around the bottom back and buckle to back flap
4. Adjust straps and buckles to equalize tension

 
E) ARMREST COVER

1. Detach velcro on cover, slip cover over armrest and align opening to cup holder
2. Smooth cover and place side velcro wrap around the back of armrest and attach
3. Position stretch material with velcro to bottom back wall of armrest well
4. Place adhesive velcro supply and apply velcro on cover
NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.

Continued on reverse

NOTES:


1) SELF-LOCKING SUPER-GRIP® BUCKLE:

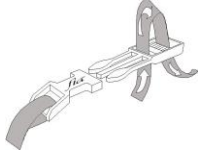

2) HEAD REST REMOVAL:

- Push in side release buttons
- Lift off

 (If unable to remove consult dealership)

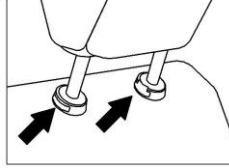

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com