

FEATURING

**SUPER-GRIP®**

*The slip resistant fastening system*

**NP92-70/ SL62-70/ SP82-70/ TR42-70/ TRS42-70**

*Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.*

**A) BACKREST COVER – 40 PORTION:**

- |  |   |
|--|---|
| 1) Unlatch backrest.   | 6) Fold backrest down flat  |
| 2) Remove headrest (see note)  | 7) Bring bottom cover from crevice and velcro to back of seat cover |
| 3) Undo velcro on cover  | 8) Adjust all velcro to equalize tension                            |
| 4) Slip cover over backrest and place latch through opening provided | 9) Replace headrest (see note)                                      |
| 5) Pull down firmly and tuck bottom of cover through crevice         |   |

**B) BACKREST COVER – 60 PORTION:**

- |  |   |
|--|---|
| 1) Unlatch backrest  | 7) Pull down firmly and tuck bottom of cover through crevice                          |
| 2) Remove headrest (see note)  | 8) Fold backrest down flat  |
| 3) Undo zipper and velcro on cover   | 9) Apply side velcro behind the backrest carpeting                                    |
| 4) Slip cover over backrest and place latch through opening provided.                      | 10) Close zipper and bring bottom cover from crevice and velcro to back of seat cover |
| 5) Ensure cover is under center seat belt strap and place armrest through opening on cover | 11) Adjust all velcro to equalize tension   |
| 6) Tuck flap on cover behind armrest and velcro  | 12) Replace headrest (see note)   |

**C) ARMREST COVER:**

- |                         |   |
|-------------------------|---|
| 1) Undo velcro on cover | 2) Slip cover over armrest and velcro. Cover has opening for pull tab |
|-------------------------|---|

**D) CUSHION COVER – 40 PORTION:**

 
- |  |   |
|--|---|
| 1) Center cover over cushion                           | 4) Pass the side straps and buckle to other side (See note) |
| 2) Tuck back flap through crevice                      | 5) Adjust all straps to equalize tension                    |
| 3) Pass the back straps under seat to front and buckle |   |

**E) CUSHION COVER – 60 PORTION:**

- |  |   |
|--|---|
| 1) Center cover over cushion                       | 4) Pass the back straps under seat to front and buckle      |
| 2) Place seat belt buckle through opening provided | 5) Pass the side straps and buckle to other side (See note) |
| 3) Tuck back flap through crevice                  | 6) Adjust all straps to equalize tension                    |

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

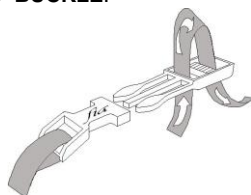


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

OR

- B) - Push in side release buttons  
- Lift off

 (If unable to remove consult dealership)

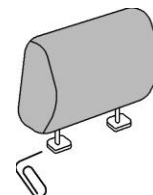

**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.  
B) Replace headrests

**4) ZIPPERS**

For ease in installation the zipper is longer than the cover.  
Tuck excess zipper under cover

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

