 


If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia

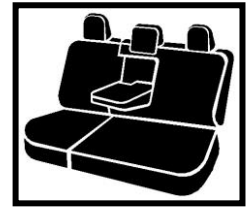

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

NP92-63/ Oe32-63/ SL62-63/ SP82-63/ TR42-63/ TRS42-63

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) CUSHION COVER – 40 PORTION:

1. Center cushions cover on seat. Cover has allowances for child restrain anchor
2. Place seatbelt buckle through elastic on the side of cover
3. Pass front straps under cushion
4. Lift cushion up in vertical position, pull front straps and buckle to back of cover
5. Pull side strap under cushion and buckle to other side
6. Adjust straps and buckle to equalize tension

B) CUSHION COVER – 60 PORTION:

1. Center cushions cover on seat. Cover has allowances for child restrain anchor
2. Pass front straps under cushion
3. Lift cushion up in vertical position, pull front straps and buckle to back of cover
4. Place side strap (door side) through metal bar under cushion and buckle to back cover
5. Buckle other side strap to back of cover
6. Adjust straps and buckle to equalize tension

C) BACKREST COVER - 60 PORTION:

1. Remove headrests (see note on reverse)
2. Release velcro attached at bottom of backrest cover, open zipper
3. Slip cover over backrest and pull down firmly. Ensure cover is installed under seat belt
4. Fold down backrest. Tuck cover through crevice
5. Slip pouch attached to stretch fabric on backrest, over lower section of armrest
6. Close zipper and attached all velcro at back cover (see note on reverse)
7. With backrest in up position tuck excess material on lower portion of armrest into the crevice
8. Install adhesive back velcro (included) on inside edge of armrest well to align with velcro on seat cover. **NOTE: BEFORE SECURING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
9. Adjust all velcro to equalized tension
10. Replace headrests (see note on reverse)

D) BACKREST COVER - 40 PORTION:

 
1. Remove headrest (see note on reverse)
2. Release velcro attached at the bottom of backrest cover
3. Slip cover over backrest and pull down firmly
4. Fold down backrest. Tuck cover through crevice and attached to all velcro at back cover
5. Adjust velcro to equalized tension
6. Replace headrest (see note on reverse)

E) ARMREST COVER:

1. Fold down armrest
2. Slip cover over armrest and attached velcro


Notes:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

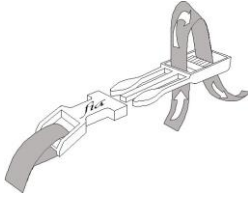

2) HEAD REST REMOVAL:

 Push in side release buttons
- Lift off
(If unable to remove consult dealership)

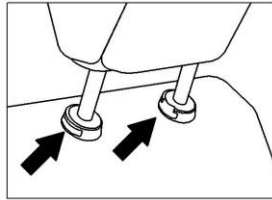

3) ZIPPERS:

- A) For ease in installation the zipper is longer than the cover.
- B) Tuck excess zipper under cover

4) RE-INSTALLATION OF HEADRESTS:

- A) Headrest covers must be installed before replacing headrests.
- B) Ensure pre-cut holes in seat cover align with holes in base.
- C) Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

9-25-17