 


SEAT COVERS
BY

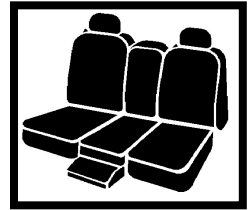

FEATURING

SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS
FOR**

NP99-47/ OE39-47/ SL69-47/ SP89-47/ TR49-47/ TRS49-47

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVER – BUCKET/ “40” PORTION

- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing the plastic clip underneath the seat cushion
- 3) Place cover on seat cushion ensuring long side strap is on the door side
- 4) Pass back flap of cover through crevice
- 5) Feed straps under seat and buckle to back of cushion cover
- 6) Pass the side strap through the opening between the seat and the molded plastic and under the seat
- 7) Buckle to the other side strap
- 8) Adjust straps to equalize tension

B) BACKREST COVER - BUCKET/“40” PORTION

- 1) Remove headrest (see note below)
- 2) Slip cover over backrest and pull down firmly (see air bag warning below)
- 3) Pass attached velcro strips through crevice and apply to back of seat cushion
- 4) Pass back flap of backrest (previously released) through opening on cover
- 5) Adjust straps and velcro to equalize tension
- 6) Re-install the plastic clip under the cushion
- 7) Replace headrest (see note below)

C) CUSHION COVER “20” PORTION

- 1) Undo seat belt buckle from the elastic loop on seat
- 2) Center cover on the seat
- 3) Place front elastic on cover between cushion and front compartment starting from one corner of cushion to another
- 4) Pull elastic down making sure it's under the cushion at front
- 5) Tuck the side panels of cover between the seat and pull to back. For easy access move both passenger and driver seat to most forward position
- 6) Apply the velcro on cover to carpet at back of seat. Repeat on other side
- 7) Snug cover from front to back and apply velcro on cover to carpet on back of cushion
- 8) Position seat belt buckle through elastic loop on seat cover
- 9) Tuck excess material at front between cushion and front compartment
- 10) Adjust for better fit if needed

D) BACKREST COVER/ARMREST – “20” PORTION

 
- 1) Place the armrest/storage compartment in up position and center cover
- 2) Position adhesive velcro supplied to align with velcro on cover around the edge of cup holder. **NOTE: BEFORE PLACING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 3) Snug the cover from top and bottom and place armrest into down position
- 4) Open the lid and position the velcro tab on back through the crevice where lid and armrest are hinged
- 5) Position adhesive velcro supplied inside the storage compartment to align with velcro on cover **NOTE: BEFORE PLACING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 6) Adjust all velcro to equalize tension

E) ARMREST / STORAGE COMPARTMENT LID COVER

- 1) Open armrest / storage compartment
- 2) Slip cover over lid

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

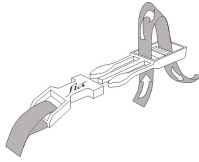


3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base.
- Replace headrests

2) HEAD REST REMOVAL:

 - Press in side release buttons
- Lift off

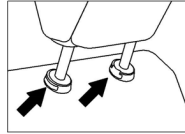

WARNING: DO NOT BLOCK AIR BAGS WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com