


HUSKY WeatherBEATER™ Custom Vehicle Floor Protection

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford Super Duty SuperCab or Crew Cab truck with vinyl floors. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F250/F350/F450 SUPER DUTY CREW CAB & SUPERCAB FRONT FLOOR LINERS

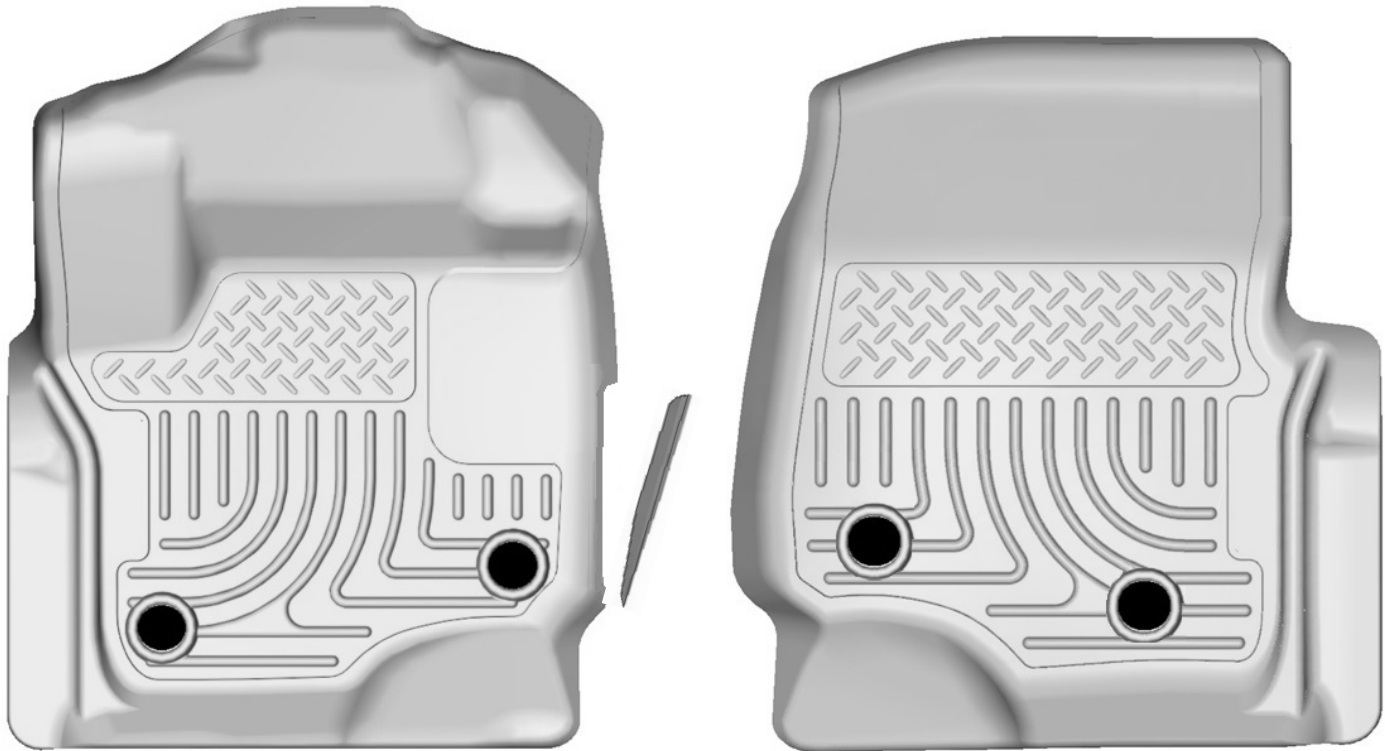

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR SUPER DUTY FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED. TAKE CARE THAT BOTH LINERS ARE SECURELY ATTACHED TO (SNAPPED OVER) THE FACTORY FLOOR MAT POSTS.

THE DRIVER'S SIDE LINER WILL ACCOMMODATE A FACTORY FLOOR MOUNT 4X4 SHIFTER VIA TRIMMING. TO TRIM, USE THE STEP CREATED BY THE LOWERED AREA ON THE PART THAT CORRESPONDS WITH THE SHIFTER. SEE THE BACK OF THIS PAGE FOR MORE DETAIL.

IMAGE SHOWING LINER TRIMMED FOR MANUAL TRANSFER CASE SHIFTER HOUSING. USE THE STEP CREATED BY THE RECESSED SECTION OF LINER AS YOUR TRIMMING GUIDE.

