



OMIX-ADA, Inc.

13552.71

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 4 Door

Components:

1. Top Net	(1)	7. Short No-Velcro Straps	(3)
2. Back Net	(1)	8. Long No-Velcro Straps	(11)
3. Side Nets	(2)	9. Footman Loops	(4)
4. Short Velcro Straps	(2)	10. Sheet Metal Screws	(8)
5. Medium Velcro Straps	(8)	11. Plastic Spacers	(8)
6. Long Velcro Straps	(4)		



! WARNING

Cargo Net System not designed to be a proper retraining device. Always wear seat belts. Omix-Ada is not responsible for any lost or damaged items.

Read all instructions thoroughly before installation.

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com



OMIX-ADA, Inc.



13552.71

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 4 Door

NOTE: Installtion of Cargo Net System is easier when factory top has been completely removed.

1. Lower factory soft top, or remove factory hard top.
2. Install short, medium, and long velcro straps around roll bars following guide below. Velcro straps should go around top of roll bar, through plastic loops, and attach back onto themselves.

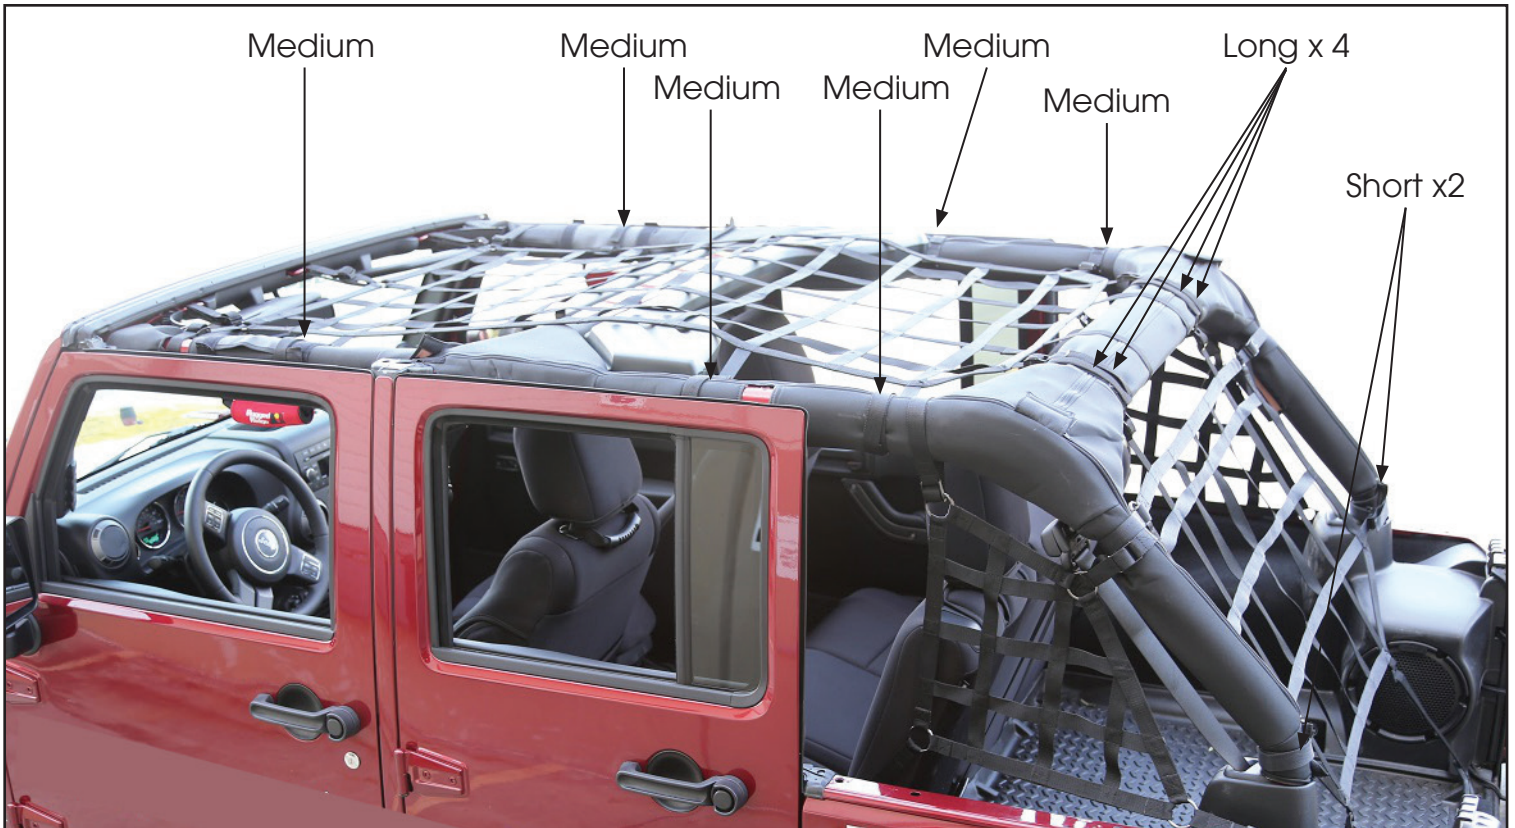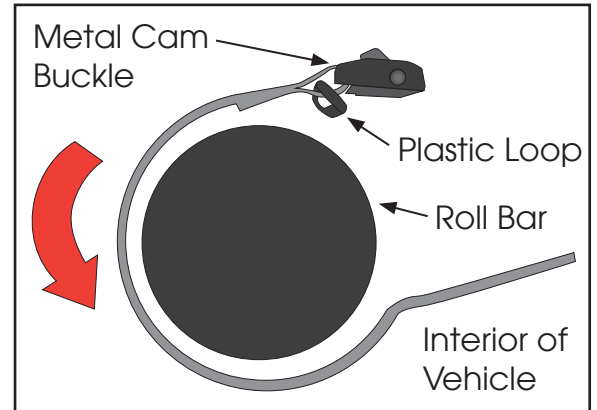



OMIX-ADA, Inc.




13552.71

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 4 Door

3. Install Top Net and Back Net by inserting long portions of polyester straps through metal cam buckles on each Velcro Strap. Do not tighten. Keep Nets centered in their positions.

NOTE: Top Net rings go towards front of vehicle. Plastic strap adjusters on Top Net go on bottom, or toward interior of vehicle.

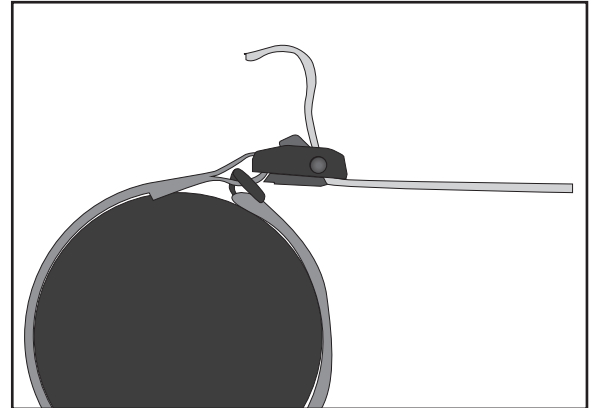

4. Install Side Nets by attaching metal rings to roll bar using Long No-Velcro Straps. Install Top Net corner metal rings by attaching one Long No-Velcro Strap to roll bar and one Short No-Velcro Strap to factory footman loop. Attach Top Net center metal ring to factory footman loop using Short No-Velcro Strap. Attach Back Net metal rings to roll bar using Long No-Velcro Straps.



5. For 2007-2010 model years: lift carpet in rear of cargo area, use supplied footman loops and a marker to mark screw locations. Drill pilot holes at marked locations using a 9/64" drill bit. Attach supplied footman loop using Sheet Metal Screws placing plastic spacers between footman loop and sheet metal. Replace carpet, then cut carpet above footman loop using utility knife. Attach plastic hooks on Back Net to installed footman loops.



6. For 2011+ model years: attach plastic hooks on Back Net to factory footman loops located in rear of cargo area.



OMIX-ADA, Inc.



13552.71

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 4 Door

7. Attached rear plastic hook on Side Nets to slotted hole in fender closest to roll bars.



8. It is recommended to attach front plastic hook of Side Nets to child car seat anchors.

NOTE: this may interfere with raising and lowering back seats.



9. OPTIONAL: lift carpet between rear seat and side fender, use supplied footman loops and a marker to mark screw locations. Drill pilot holes at marked locations using a 9/64" drill bit. Attach supplied footman loop using Sheet Metal Screws placing plastic spacers between footman loop and sheet metal. Replace carpet, then cut carpet above footman loop using utility knife. Attach plastic hook to installed footman loop.





OMIX-ADA, Inc.

13552.71


460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

07+ JK Cargo Net System - 4 Door

10. Tighten all straps evenly keeping Nets centered in their correct positions. Wrap loose polyester strap back through metal cam buckles and back around Velcro Straps attaching polyester strap to velcro.



11. Innermost polyester straps on Top Net, toward back of vehicle, include (2) plastic strap adusters sewn onto bottom of Top Net. Wrap nylon straps around top of roll bar, into strap adjusters, then pull tight. Complete Cargo Net System installation.

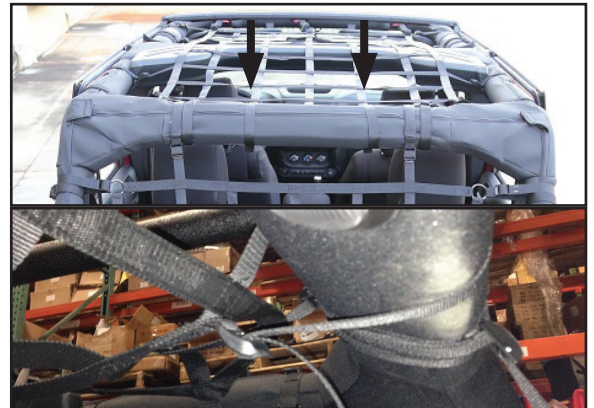

Read all instructions thoroughly before installation.

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | **EMAIL:** techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com