

# Installation & CARE

## 2011 DODGE CHARGER PROJECTOR HEADLIGHTS INSTALLATION

### BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	6" Extension	7 mm socket	8 mm socket
Trim Pad Remover	10 mm socket		

### PRODUCT NUMBER

2LHP-CHG11-TM  
2LHP-CHG11JM-TM  
2LHP-CHG11G-TM



### LET'S START THE INSTALLATIONS



**STEP 1**

Before installation



**STEP 2**

6 7mm bolts location



**STEP 3**

Remove the 6 7mm bolts



**STEP 4**

Remove the 2 plastic clips



**STEP 5**

Pull the fender liner aside



**STEP 6**

Remove the 10mm bolt



**STEP 7**

Remove the plastic covers



**STEP 8**

Remove the plastic covers






**STEP 9**

4 plastic clips location




**STEP 10**

Remove the 4 plastic clips

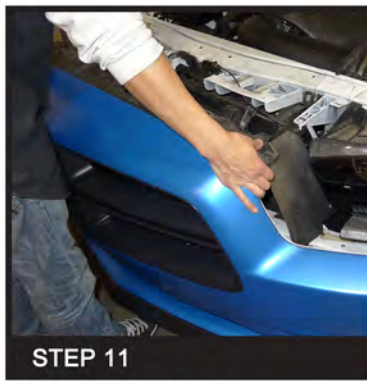

**STEP 11**

Remove the front bumper

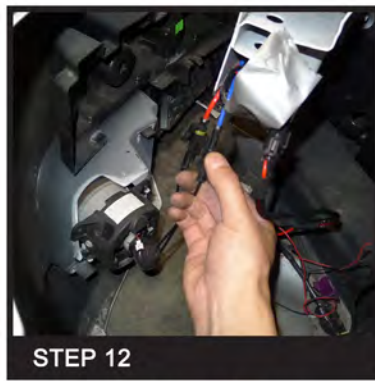


**STEP 12**

Disconnect the fog light harness



**STEP 13**

2 8mm bolts location

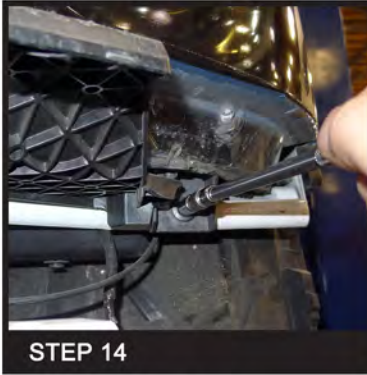

**STEP 14**

Remove the 2 8mm bolts



**STEP 15**

2 8mm bolts



**STEP 16**

Remove the 2 8mm bolts




**STEP 17**

Remove the factory headlight




**STEP 18**

Remove the light sockets

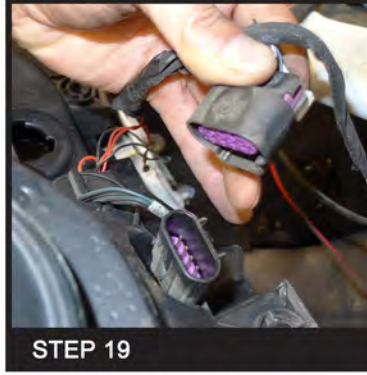

**STEP 19**

Disconnect the headlight harness

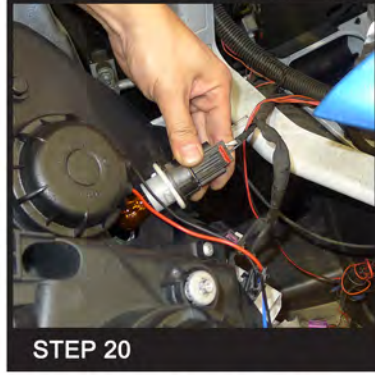


**STEP 20**

Install the light socket into the new headlight




**STEP 21**

Connect the LED harness to the light socket

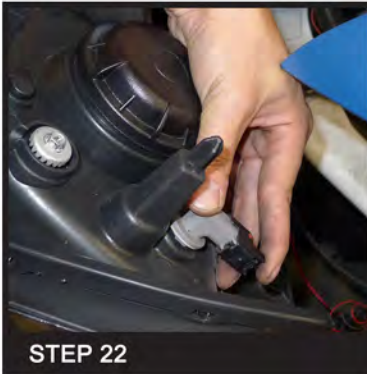

**STEP 22**

Install the light socket

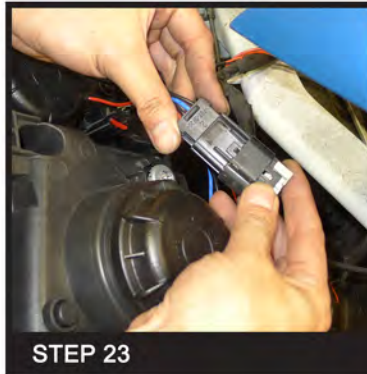

**STEP 23**

Connect the headlight harness



**STEP 24**

Place the new headlight in the stock location






**STEP 25**

Tighten the 2 8mm bolts



**STEP 26**

Tighten the 2 8mm bolts

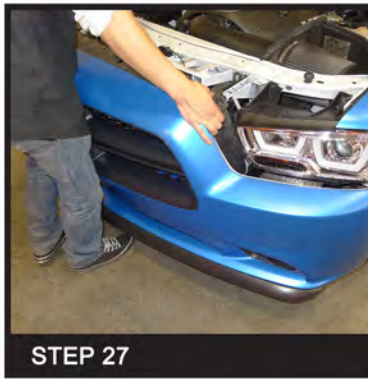

**STEP 27**

Replace the front bumper




**STEP 28**

Replace the 4 plastic clips




**STEP 29**

Replace the plastic covers

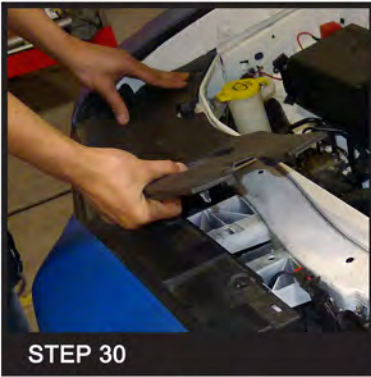


**STEP 30**

Replace the plastic covers

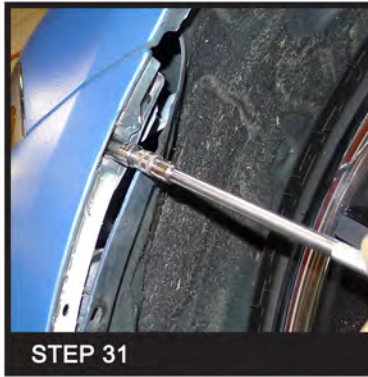


**STEP 31**

Tighten the 10mm bolt

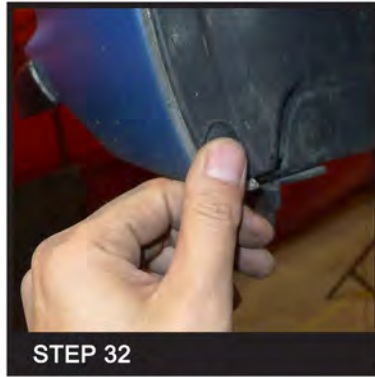

**STEP 32**

Replace the 2 plastic clips

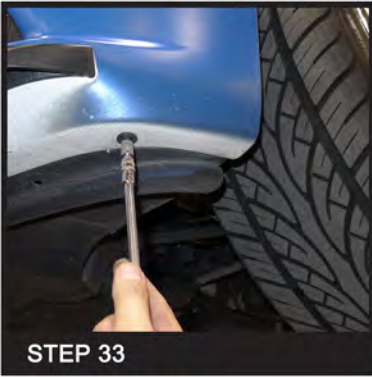


**STEP 33**

Tighten the 6 7mm bolts



**STEP 34**

Please repeat the steps from 1 to 33 for the opposite side

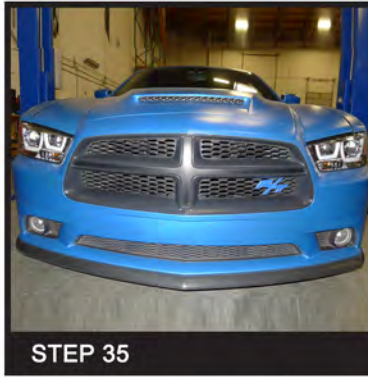

**STEP 35**

The installation now is complete