

Installation & CARE

2014-2015 CHEVY SILVERADO PROJECTOR HEADLIGHTS INSTALLATION

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED


3/8" Ratchet	6" Extension	7 mm socket	10mm Box Wrench
			
Trim Pad Remover	10 mm socket		
			

PRODUCT NUMBER

2LHP-SIV14JM-TM
2LHP-SIV14-TM




LET'S START THE INSTALLATIONS

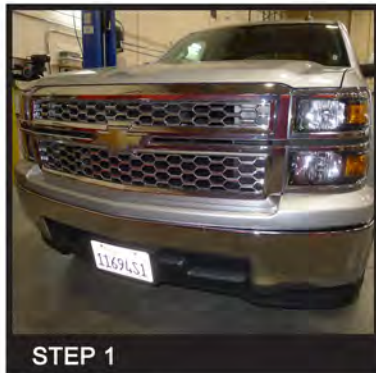

STEP 1

Before installation

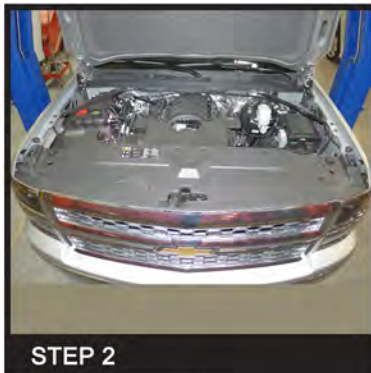


STEP 2

11 plastic clips location



STEP 3

Remove the 11 plastic clips

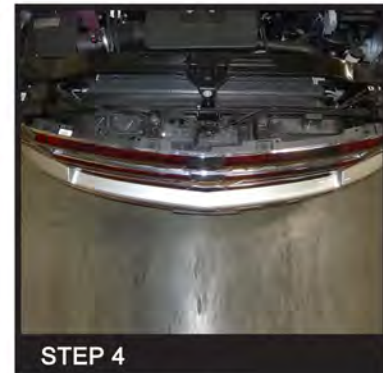

STEP 4

4 10mm bolts location




STEP 5

Remove the 4 10mm bolts




STEP 6

Lower grill bolt hole locations

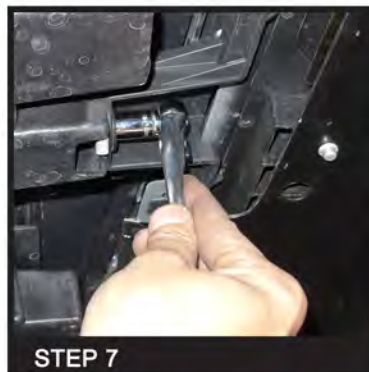

STEP 7

Remove the 4 10mm bolts

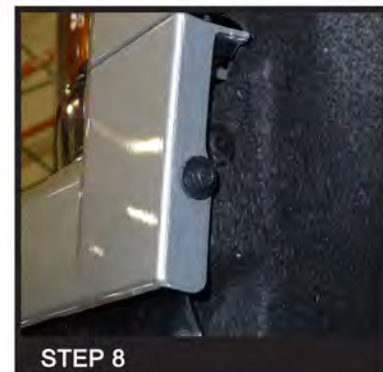

STEP 8

2 7mm bolts location



STEP 9

Remove the 2 7mm bolts



STEP 10

Pull to release the sides of the upper bumper piece



STEP 11

Remove the front bumper




STEP 12

Remove the 10mm bolt



STEP 13

Remove the 10mm bolt

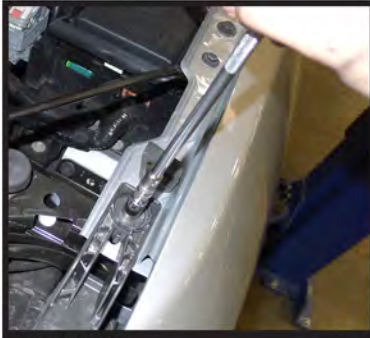

STEP 14

Remove the 2 10mm bolts




STEP 15

Remove the factory headlight



STEP 16

Disconnect the Headlight harness

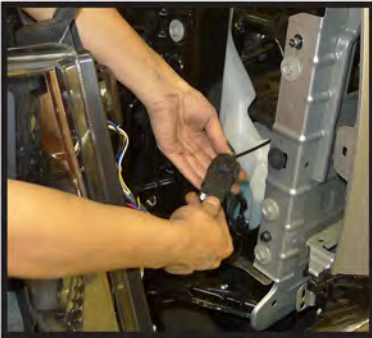

STEP 17

Connect the headlight harness to the new headlight. Please see the HALO & LED headlights installation instructions" If your head lights don't have HALO & LED, You can skip the installation instruction



STEP 18

Place the new headlight in the stock location



STEP 19

Tighten the 2 10mm bolts




STEP 20

Tighten the 10mm bolt



STEP 21

Tighten the 10mm bolt

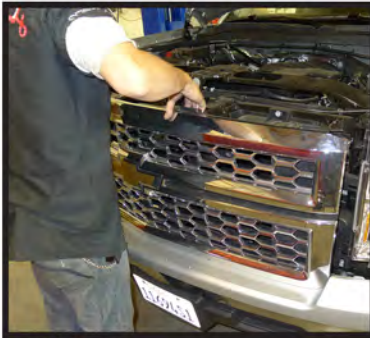

STEP 22

Replace the front bumper




STEP 23

Tighten the 3 10mm bolts



STEP 24

Replace the plastic cover

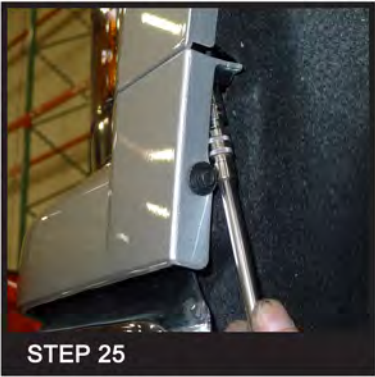

STEP 25

Tighten the 2 7mm bolts




STEP 26

Tighten the 4 10mm bolts



STEP 27

Please repeat the steps from 1 to 26 for the opposite side

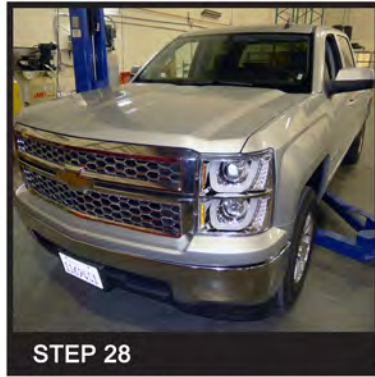

STEP 28

The installation now is complete