

HUSKYLINERS®


weatherBEATER

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Trunk Liner from Winfield Consumer Products. Your new trunk liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR MERCURY MILAN, FORD FUSION, LINCOLN ZEPHYR & LINCOLN MKX TRUNK LINER

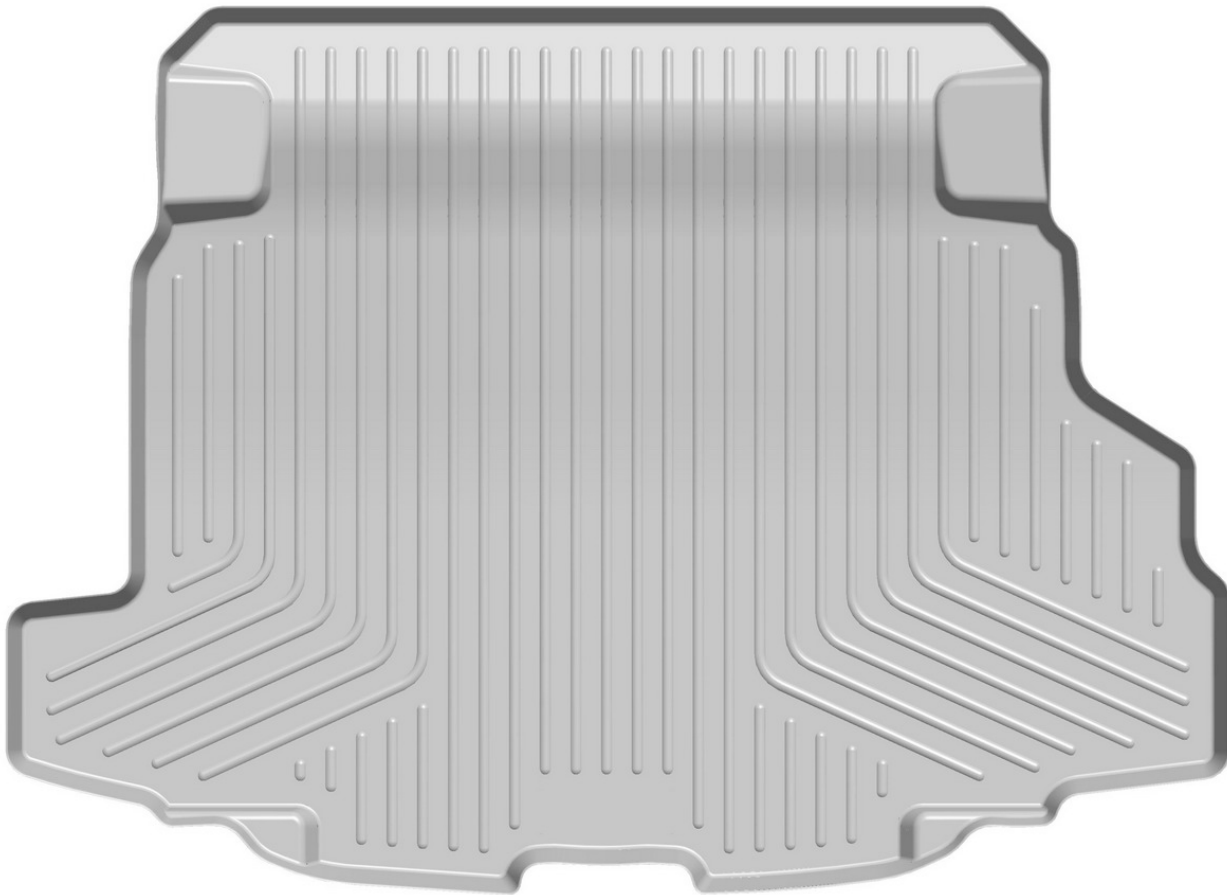

NOTE THAT IF YOUR VEHICLE IS EQUIPPED WITH A FACTORY SUBWOOFER MOUNTED IN THE TRUNK, THERE IS A TRIM AREA THAT MUST BE REMOVED TO ALLOW THE PROPER FIT. SEE DETAILED TRIMMING INSTRUCTIONS ON THE BACK OF THIS SHEET.

THE PHOTO BELOW SHOWS PART #4301 AS BOXED. NOTE THERE IS A STEP MOLDED INTO THE SIDE WALL OF THE PART (SEE DOTTED LINE). THIS STEP WILL GUIDE THE TRIMMING REQUIRED TO ALLOW PART #4301 TO FIT WITH THE OPTIONAL FACTORY SUBWOOFER MOUNTED IN THE TRUNK. TO TRIM, USE A UTILITY KNIFE OR HEAVY SHEARS AND REMOVE THE PORTION OF THE LINER ABOVE THE MOLDED STEP.



THE PHOTO BELOW SHOWS PART #4301 TRIMMED TO ACCOMMODATE THE OPTIONAL FACTORY SUBWOOFER.

