



TOYOTA TACOMA

2016-2017 TOYOTA TACOMA®

**FOG LIGHT MOUNT
INSTALLATION INSTRUCTIONS
FITS (2) D-SERIES® LIGHTS**

*Lights sold separately



KIT INCLUDES

- | | |
|---|--------------------------------|
| (1) Mount #46566 | (8) 8-32 Nylon Spacers |
| (8) 8-32 x 3/4" Long SS Button Head Bolts | (8) 8-32 SS Nyloc Nuts |
| (8) 8-32 SS Flat Washers(6) 5/16" SS Nuts | (4) 1/2" #8 Sheet Metal Screws |

IMPORTANT

Thank you for purchasing Rigid Industries® products for your Toyota Tacoma. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all

of these instructions and tips before proceeding with the installation.

It is strongly recommended that this product be installed by a professional.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

STEP 1

Behind factory fog light unclip factory wire harness, remove and **save** (1) Phillips sheet metal screw, and remove factory fog light. See Figure 1.



Figure 1:

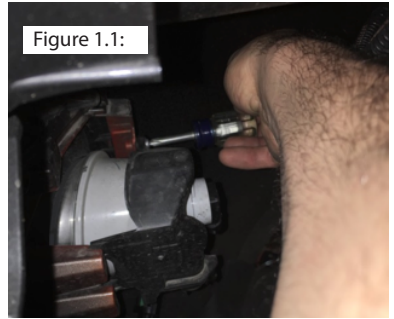


Figure 1.1:

STEP 2

Remove factory vanity plate by decompressing compression tabs from the backside. See Figure 2.



Figure 2:

STEP 3

Hold Rigid Industries front plate in place and using a pick or equivalent mark (4) mounting holes to be drilled using a 13/64th drill bit. See Figure 3.

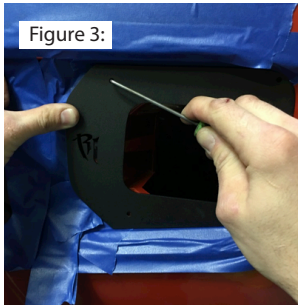


Figure 3:

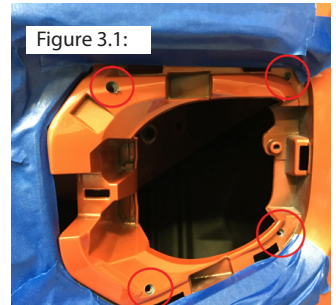


Figure 3.1:

***Note for colored Tacoma trim user may apply black paint to hide visibility See Figure 4.

STEP 4

Step 4: Install Rigid Industries mount using (2) 1/2" #8 Sheet Metal Screws provided from the front side, and (1) saved Phillips sheet metal screw from the backside. See Figure 4.


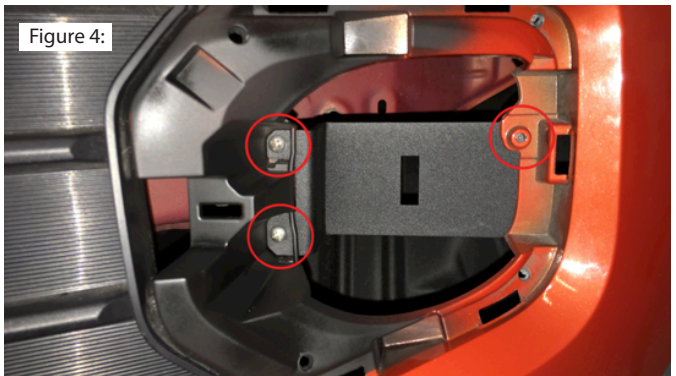


Figure 4:

STEP 5

Install Rigid Industries front plate using (4) 8-32 x 3/4" Long SS Button Head Bolts, (4) 8-32 SS Flat Washers, (4) 8-32 SS Nyloc Nuts, and (2) 8-32 Nylon Spacers. Spacers are to be installed on the (2) outer most mounting holes of the plate. See Figure 5.

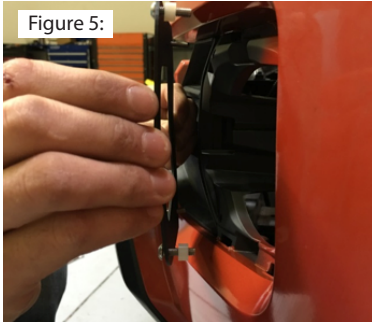


STEP 6

Repeat Steps 1 – 5 for remaining fog light.

STEP 7

Install Rigid Industries lights using hardware provided with the light. See Figure 7.

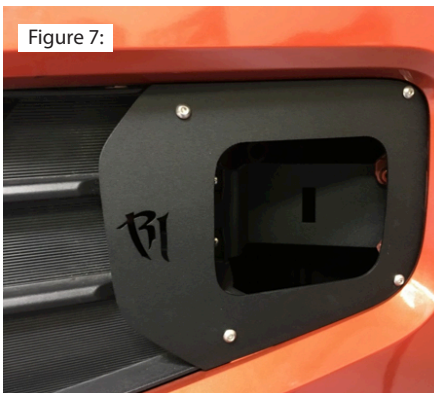

**Wire your lights according to the instructions included with the light.
Take care to avoid any heat sources and sharp or abrasive surfaces.**



**Your installation is now complete.
Welcome to the Rigid Nation!**

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty

Follow us on facebook at
[Facebook.com/RigidIndustries](https://www.facebook.com/RigidIndustries)

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337 • www.rigidindustries.com

PKG-IS-196-A

D-Series and Rigid Industries are registered and/or common law marks owned
by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.