



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-BE5300-LED-(ALL COLORS)

Tools Required
8mm Socket + Ratchet
Panel Popper



Please Note


If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the tailgate.



2) Open the tailgate access panel.

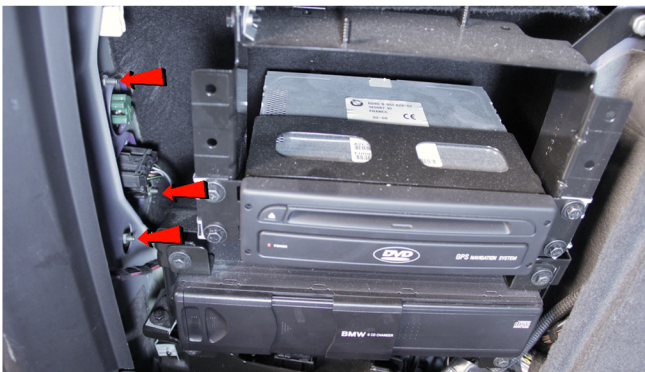

3) Remove [3x] 8mm nuts securing the outer tail light.



4) Unseat the OEM outer tail light.



5) Disconnect the outer tail light wiring harness.



6) Locate the Spyder outer tail light.



7) Connect the Spyder tail light wiring harness to the OEM tail light. Then disconnect the red and green harness clip and remove the turn signal socket from the Spyder tail light.



8) Feed the turn signal socket through the opening in the body as shown to avoid pinching the harness when you seat the tail light.




9) Reconnect the red and green harness clip to the Spyder tail light.



10) Reinstall the turn signal bulb into the Spyder tail light.



11) Seat the Spyder tail light.

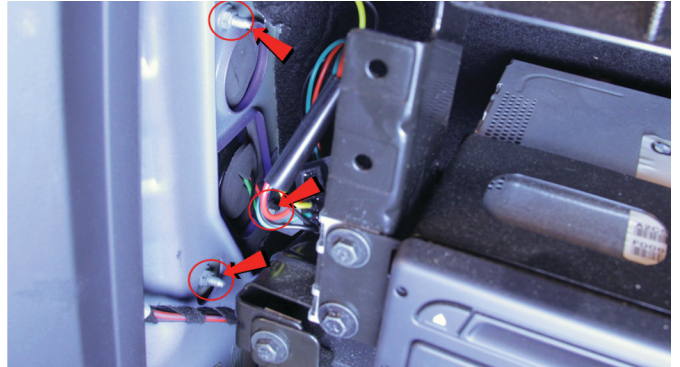

12) Reinstall [3x] 8mm Nuts to secure the tail light.




13) Then close the access panel.



14) Moving on to the inner tails, use a panel popper or flathead to pop the tailgate cover panel free. The panel pops up from the rear and opens forward.



15) Peel back the sound deadening to expose and remove the 8mm bolt hidden beneath it.

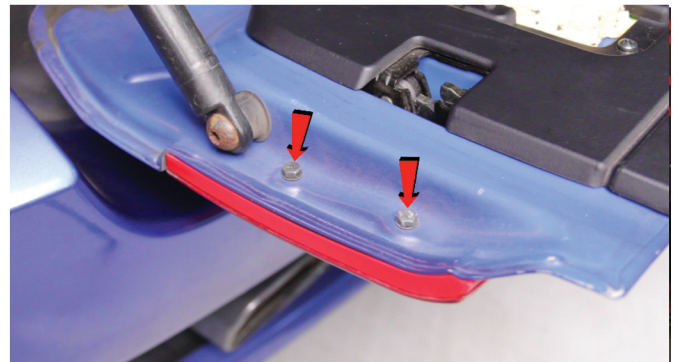


16) Remove the two 8mm bolts along the edge of the tailgate securing the inner tail light.



17) Disconnect the inner tail light harness.



18) Unseat the inner tail light.

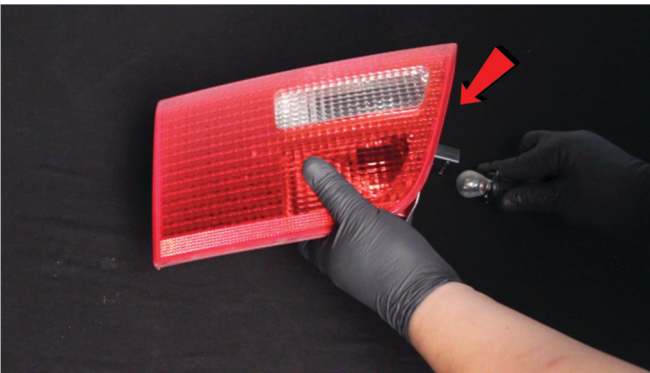

19) Remove the reverse lamp (EU models only: Remove rear fog lamp) from the OEM inner tail light.



20) Transfer the reverse lamp bulb to the white and black wire socket of the Spyder inner tail light. Never touch exposed bulbs with bare hands. (EU models only: Transfer the reverse lamp bulb to the blue and black wire socket)




21) Seat the Spyder inner tail light.




22) Reinstall the [2x] 8mm bolts securing the inner tail light along the edge of the tailgate.



23) Reinstall the 8mm bolt hidden underneath the sound deadening.

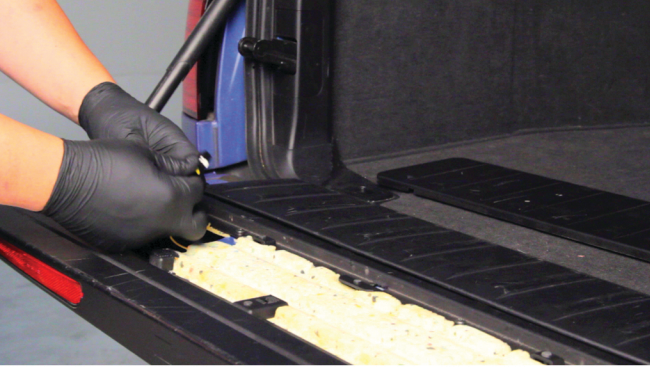

24) Connect the Spyder inner tail light to the inner tail light wiring harness.

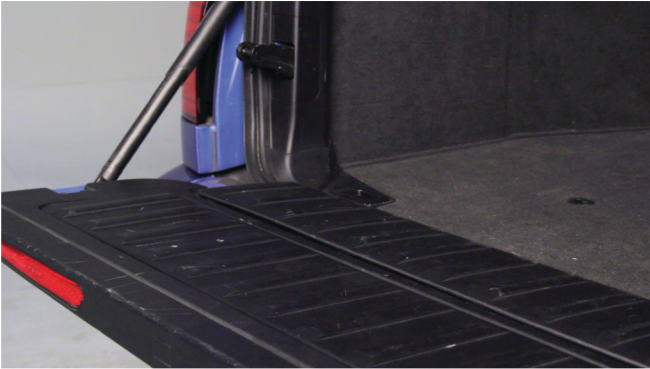

25) Reinstall the tailgate cover panel.



26) Close the tailgate and enjoy your Spyder tail lights!



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://youtu.be/tboAzROXD4>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.