



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

ALT-YD-ME00-LED-(ALL COLORS)

Tools Required

Panel Popper
10mm Socket & Ratchet



Please Note


If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the trunk. Remove the center trunkrim filler panel by simply pulling it free.



2) Peel back the trunk liner and remove the first 10mm nut securing the taillight.

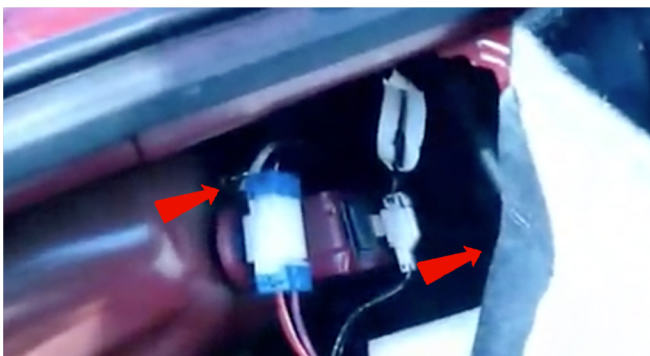

3) Remove the two remaining 10mm nuts securing the tail light just behind the trunk liner.




4) Unseat the tail light.



5) Remove the bulb sockets from your OEM tail light and set it aside.



6) Remove this stud from the SPYDER tail light by twisting it free using a wrench or simply by using your hand.

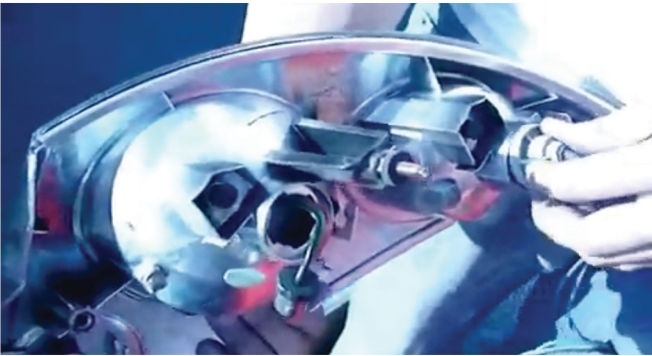

7) Reinstall the turn signal and reverse lamp bulbs and sockets into the SPYDER tail light. Be sure to retain all bulb socket gaskets and that the sockets are securely in place.



8) Remove the brake lamp bulb from its socket. Install the SPYDER socket insert harness in place of the bulb. Then, install the brake lamp socket into the SPYDER LED tail light housing.



9) Seat the SPYDER tail light, then reinstall the three 10mm nuts to secure the tail light. Replace the trunk liner to cover the nuts, then reinstall trunkrim filler panel by pushing it down into place.



10) Enjoy your new SPYDER LED tail lights.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=AMWzm1lCXws>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.