

07-14 Jeep JK Adaptor Mounts (C38)

Install Instructions



Read through all of the instructions completely before beginning the install.



Parts Included:

- A. One set of adaptor mounts (not side specific)
- B. 8, 3/8" x 1 1/2" Hex Bolt
- C. 8, 3/8" Lock nuts
- D. 16, 3/8" Flat Washers

Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.

Time:

Approx 30 minutes.

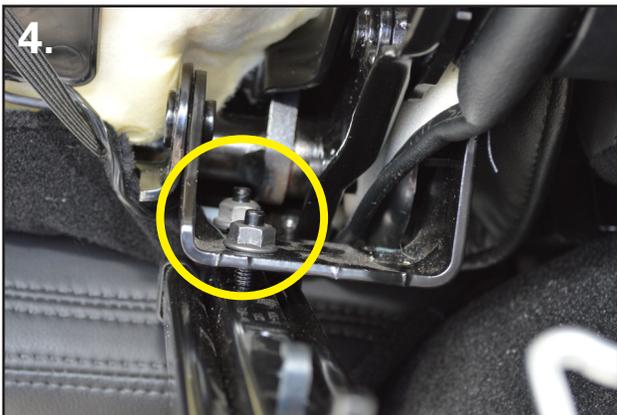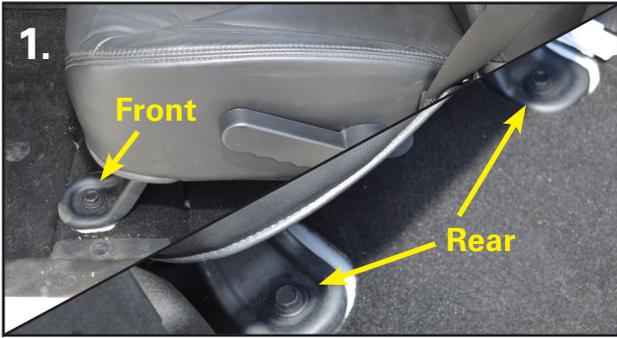

1. Detach your stock seat bases by removing the four bolts that connect your seats to the floor boards. Set this hardware aside to reinstall later.
2. Tilt the seat back and disconnect the wiring harness.
3. Remove the forward nuts connecting the seat to the slider assembly. 4 total. 2 on each side.
4. With the forward bolts removed, the slider assembly will angle away from the front of the seat, allowing easier access to the rear bolts. Remove the rear nuts and set aside. 4 total. 2 on each side.
5. With a T40 torx driver, remove seat belt from the stock seat. Set stock seat aside.
6. Reattach the stock seat base and slider assembly to the floor using the stock bolts removed in the earlier step.
7. Using the stock nuts removed previously, attach your JK Adapter Mounts to the stock slider assembly. The ends with two holes are at the back of the seat with the spacers on the corners facing inward. You will have 2 nuts leftover.
9. Install your PRP Seats to the JK Adapter Mounts using the hardware included. Occupant restraints are to be installed at your discretion.

Congratulations!

Your PRP Seats are now installed in your Jeep JK. Repeat these steps for your passenger seat.

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to help at **1-800-317-6253**.

Thank you! Ride safe!

