




RockJock® Professional OffRoad Products presents:  
**CE-9807FBSK Front Bump Stop Kit**  
Installation Instructions

**Fits**

- Front of '07 & up Jeep JK Wranglers


**Kit Includes**

- 2) CE-9807FBS - Black Urethane Bump Stops
- 2) CE-9807FBSS - 1" Aluminum Spacers
- 2) EE-5040CH5 - 1/2"-13 x 2.5" Bolts
- 2) EE-50WSAEH - 1/2" Flat Washers
- 2) EE-50WS - 1/2" Lock Washers

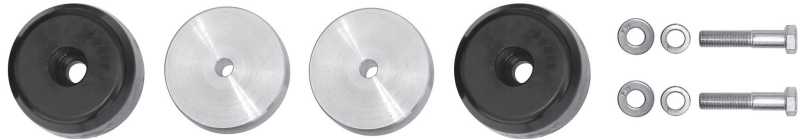

**Instructions**

- 1) Drill center of the lower spring bucket using a 7/16 drill.
- 2) Tap hole with a 1/2"-13 tap.

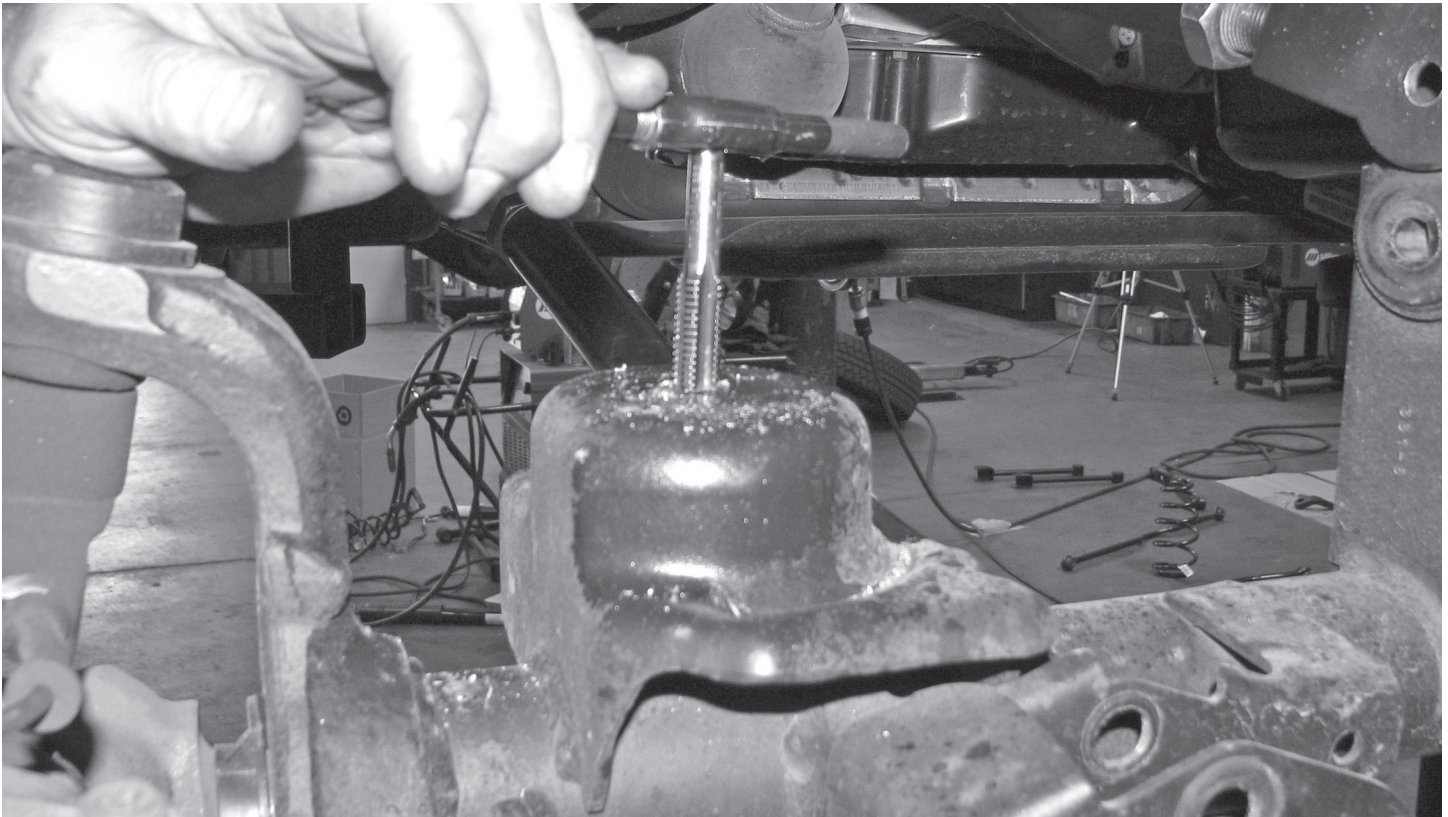

3. When installing springs, insert the bump stop and spacer inside the spring prior to installation. Install spring then insert bolt and washers through spring and bolt bump stop kit down (use red loc-tite).



Currie Enterprises / RockJock Professional Off Road Products  
382 N. Smith Ave., Corona, Ca. 92880  
Ph (714) 528-6957 - F (951) 549-0267  
www.rockjock4x4.com

