



*Driven by Design*

[www.DaystarWeb.com](http://www.DaystarWeb.com)  
Tech Support Contact Info  
[Tech@DaystarWeb.com](mailto:Tech@DaystarWeb.com)  
Phone: 623.907.0081  
Fax: 623.907.0088  
841 South 71<sup>st</sup> Avenue  
Phoenix, AZ 85043


### Cam Can

**"CAREFULLY READ WARNINGS ON ALL SIDES OF CAN"**


| Bill of Materials |   |     |
|-------------------|---|-----|
| Part No.          | Description                                       | Qty |
| M20812            | Cam Can   | 1   |
| S20097            | Alum Center Pole                                  | 1   |
| S20097-C02        | Stud Extenders                                    | 3   |
| S20914            | Cam Can Mounting Plate                            | 1   |
| S11001            | Bolt 1/2-13X1"                                    | 1   |
| S10591            | Lock Washer                                       | 1   |
| S20849            | Dowel Pin   | 1   |
| S20364            | Nut 1/2 -20                                       | 3   |
| P20854            | Cam Can Cap                                       | 1   |
| BU76132           | Cam Kit, Male with H/W for Cam Can Mounting Plate | 1   |
| BU76134           | Cam Kit, Female with H/W for Cam Can              | 1   |
| BU76137           | Cam Kit, Male with H/W for Cam Can                | 1   |



Daystar Cam Can Installed

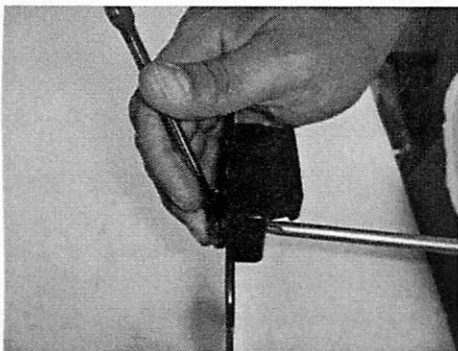

**Step 1:** Install male Cams to the Cam Can mounting plate and tighten down.

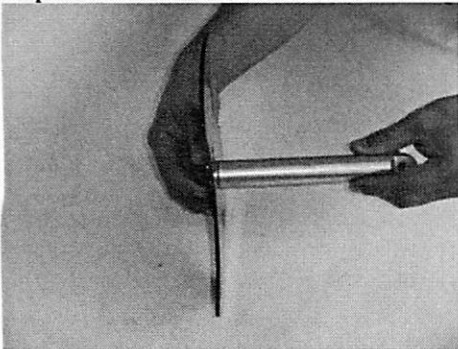


**Step 2:** Line up pre-installed dowel pin on the aluminum center pole to the mounting plate. Secure the aluminum center pole with provided nut and lock washer onto the Cam Can mounting plate, and then tighten down.



*Driven by Design*

[www.DaystarWeb.com](http://www.DaystarWeb.com)  
Tech Support Contact Info  
[Tech@DaystarWeb.com](mailto:Tech@DaystarWeb.com)  
Phone: 623.907.0081  
Fax: 623.907.0088  
841 South 71<sup>st</sup> Avenue  
Phoenix, AZ 85043

## Cam Can

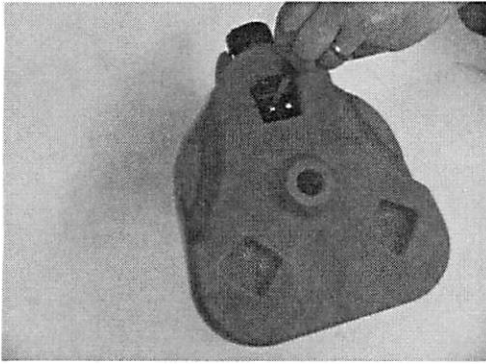

**Step 3:** Place male Cams on the front of the Cam Can, and tighten.



**Step 4:** Place female Cams on the back of the Cam Can, and tighten.




**Step 5:** Replace each factory lug nut one at a time on the spare tire carrier with supplied Daystar Stud Extenders.



*Driven by Design*

[www.DaystarWeb.com](http://www.DaystarWeb.com)  
Tech Support Contact Info  
[Tech@DaystarWeb.com](mailto:Tech@DaystarWeb.com)  
Phone: 623.907.0081  
Fax: 623.907.0088  
841 South 71<sup>st</sup> Avenue  
Phoenix, AZ 85043

### Cam Can

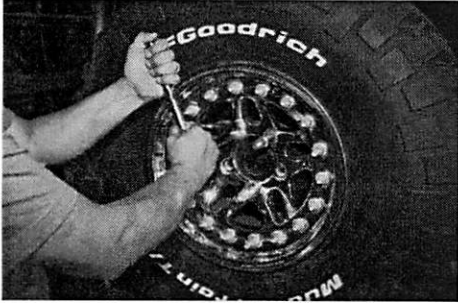


**Step 6:** Tighten all of the Daystar Stud Extenders to 45 ft-lb.



**Step 7:** Slide assembled Cam-Can plate onto the Daystar Stud Extenders



**Step 8:** Place provided nuts onto the stud extenders and tighten down to 45ft lbs.

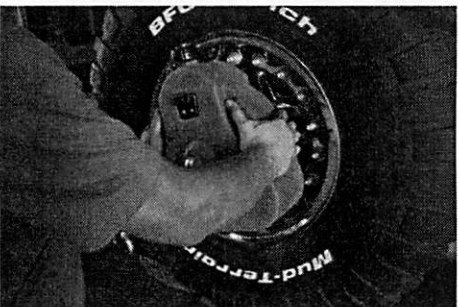

**Step 7:** Slide your assembled cam can onto the shaft and install the can by seating it all the way against the plate and rotate slightly counter clockwise and then clock wise till you feel the cams lock.