



FRONT BED PROTECTORS INSTALLATION SHEET

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at:

1-800-247-3974

Monday-Friday 8:00 a.m.- 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

PUTCO Inc. - 216 West First Street - Story City, Iowa 50248

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION AND BE SURE TO CHECK TO SEE THAT ALL PARTS AND HARDWARE ARE INCLUDED.

Figure 1





Figure 2

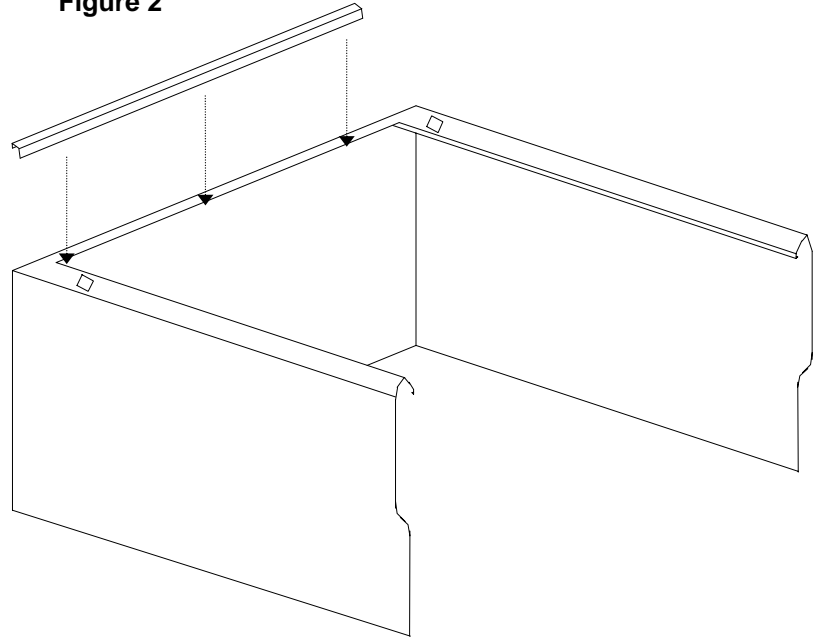

NOTE: Surface temperature at time of installations must be above 12°C / 60°F for proper tape adhesion.

Step 1: Before removing the backing from the tape, place protector on box rail to check fit.

Step 2: Area to be covered must be thoroughly cleaned and free of all waxes and or special coatings. Entire surface must be wiped down with rubbing alcohol. (Do Not substitute alcohol with any other cleaners).

Step 3: Remove backing from tape. Being careful not to touch item to vehicle until positioned correctly. Once attached press firmly with the palm of your hand, working from the center out. **Once protector is in place it cannot be moved without damage to the part.**

Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance on your new front bed protector.

LIMITED WARRANTY

PUTCO guarantees **ALL** its products against defects in workmanship or material for the time period of **ONE YEAR (90 DAYS)** on black products). Any defects resulting from faulty material or workmanship will be warranted by PUTCO with the replacement of defective part.

Damages caused by improper installation, misuse, collision, or neglect will not be warranted by PUTCO. PUTCO will be sole judge of all warranties! Proof of purchase necessary for all warranty claims.