

Hardware included shown on right.

Tools required:


- 1/2" socket
- 7/16" socket
- 1/2" wrench
- 3/8" nut driver
- Drill, 1/2" Drill bit

**NOTICE RISER
HEIGHT IS SHORTER
THAN CAB BOARD
RISER HIGHT.**


DRILLING INTO VEHICLE IS REQUIRED!



Attach the FL185 bracket to the front bed sidewall support, using the factory bed support bolts. Remove them then reinstall. Attach 3124J to FL185 with 5/16 flanged nuts and bolts. Snug but do not tighten yet.

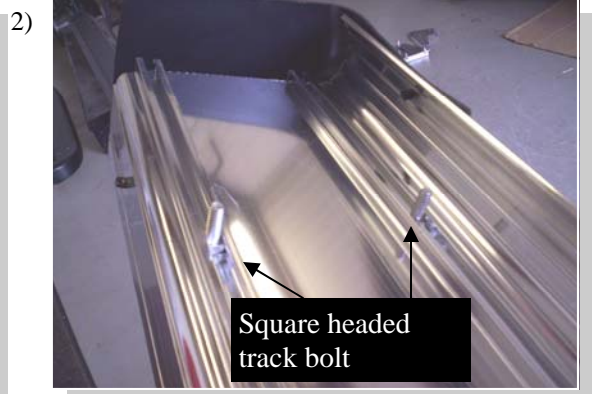

Insert one square headed track bolt into both tracks for each bracket.

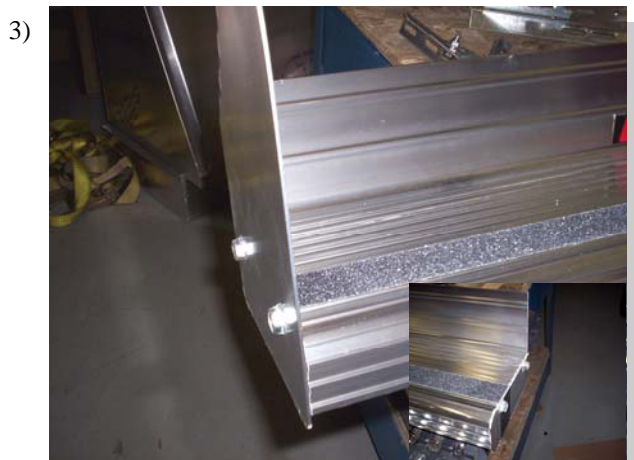

Attach stone guard and end cap to running board using 3/8" self threading bolts.



Place the board on the brackets with the bolts through the slots. Fasten with 1/4" nuts.



5)



Use one self drilling screw to attach the stone guard to the fender lip. Make sure the board is level. Use remaining 2 screws to finish attaching stone guard to fender lip. Tighten any and all loose bolts. Repeat all steps for opposite side.