


2019-2020 Jeep Wrangler JL Rear Fender Liners PART #JL-6101

PARTS LIST:

1	Driver/Left Upper Liner	12	6mm x 18mm OD x 1.6mm Flat Washers
1	Passenger/Right Upper Liner	20	6mm x 12mm OD x 1.6mm Flat Washers
1	Driver/Left Lower Liner	12	6mm Lock Washers
1	Passenger/Right Lower Liner	10	6mm Nylon Lock Nuts
2	6-1.0mm x 30mm Button Head Bolts	6	6mm Clip Nuts
10	6-1.0mm x 25mm Button Head Bolts	2	Spacers
10	6-1.0mm x 15mm Button Head Bolts	1	4mm Hex Wrench

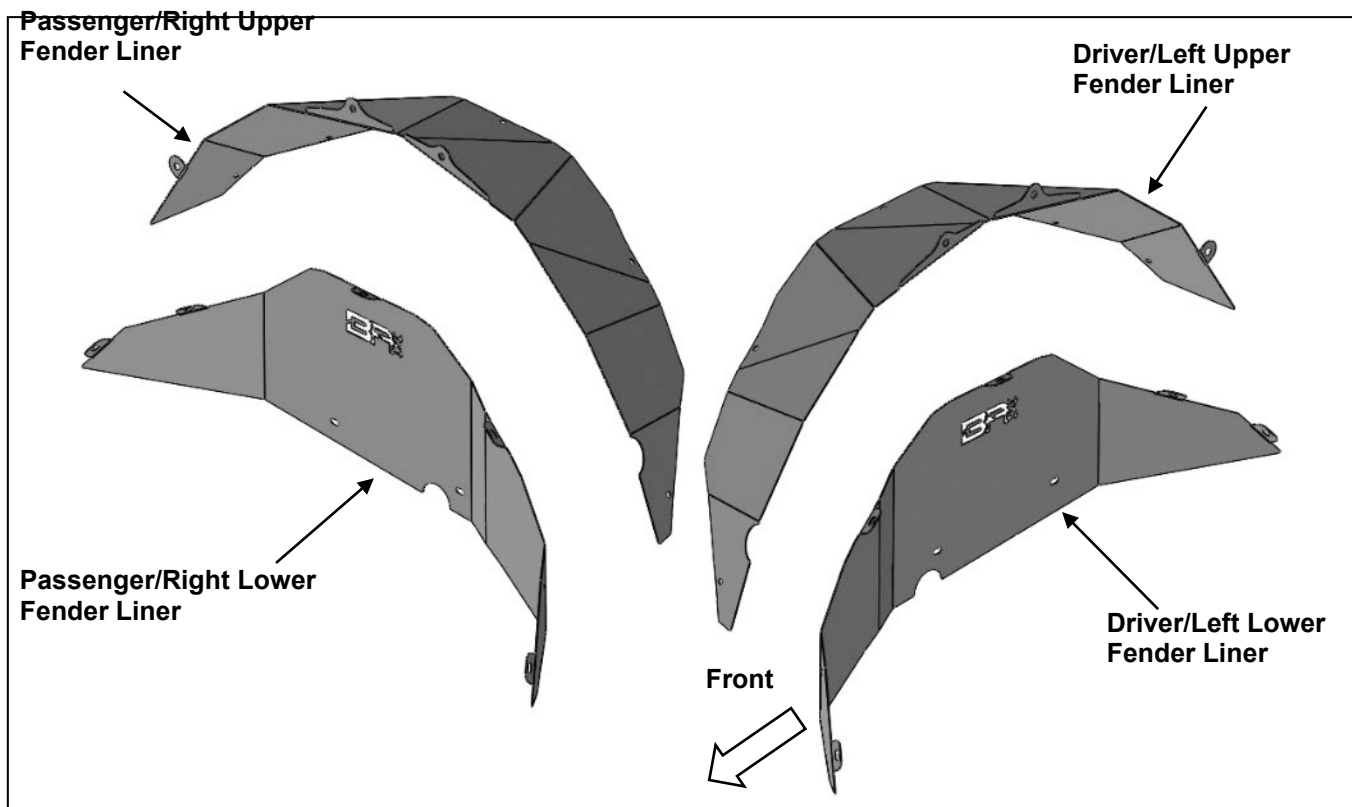

PROCEDURE:


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.

- Start installation on the Passenger/Right side of the vehicle. Locate the tabs along the bottom of the body above the frame, **(Figure 1)**. **NOTE:** The plastic fender liner attached to these tabs.
- Select (3) 6mm Clip Nuts. Slide the Clip Nuts onto the (3) forward mounting tabs, **(Figures 2 & 4)**.
- Select the Passenger/Right Upper Liner and Lower.
 - Attach the Lower Liner to the Upper Liner with (5) 6mm x 15mm Button Head Bolts, (10) 6mm x 12mm Flat Washers and (5) 6mm Nylon Lock Nuts, **(Figure 5)**.
 - Insert the Fender Liner into position up to the back of the inner body panel.
 - Attach the Upper Fender Liner to the top of the wheel well with (3) 6mm x 25mm Button Head Bolts, (3) 6mm Lock Washers and (3) 6mm x 18mm Flat Washers, **(Figures 3, 6 & 8)**. **NOTE:** It may be easier to install the Fender Liner with the vehicle raised up and/or rear tire removed. Line up the mounting holes in the Fender Liner with the back of the body panel.


- d. Attach the Lower Fender Liner to the (3) Clip Nuts with (1) 6mm x 30mm Button Head Bolt, (2) 6mm x 25mm Button head Bolts, (3) 6mm Lock Washers, (3) 6mm x 18mm Flat Washers and (1) Spacer, **(Figures 4, 7 & 8)**
- 4. Repeat **Steps 1—3** to attach the Driver/Left Fender Liners.
- 5. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Fender Liners.


Passenger/Right Side Installation Pictured

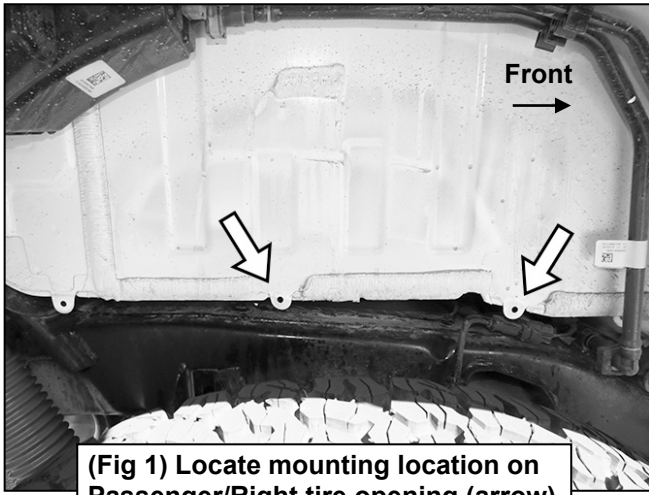


(Fig 1) Locate mounting location on Passenger/Right tire opening (arrow)

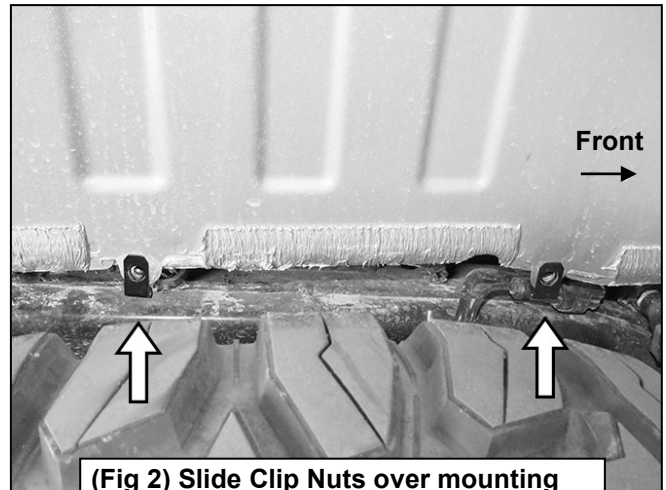

(Fig 2) Slide Clip Nuts over mounting tabs on bottom of inner body panel (arrows-Passenger/Right side pictured)

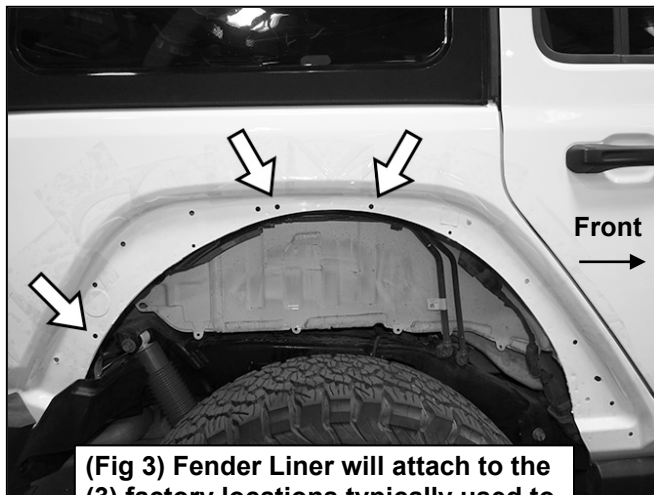


(Fig 3) Fender Liner will attach to the (3) factory locations typically used to attach aftermarket fenders (arrows)

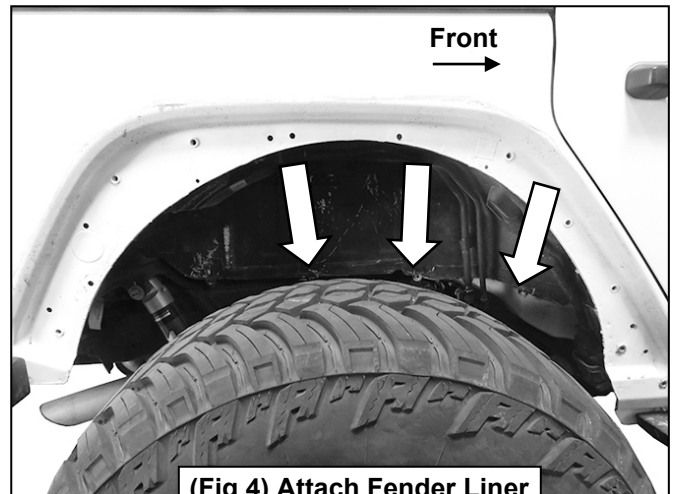

(Fig 4) Attach Fender Liner to the (3) 6mm Clip Nuts


Passenger/Right Side Installation Pictured

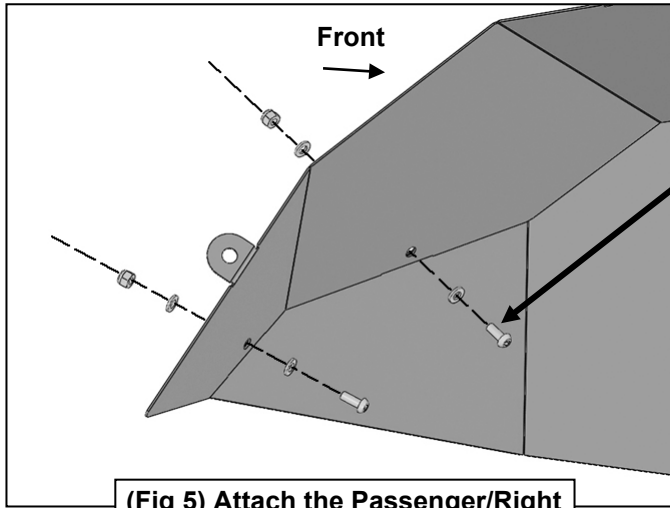

(Fig 5) Attach the Passenger/Right Lower Liner to the Upper Liner


- (2) 6mm x 15mm Button Head Bolts
- (4) 6mm x 12mm Flat Washers
- (2) 6mm Nylon Lock Nuts

- (3) 6mm x 25mm Button Head Bolts
- (3) 6mm Lock Washers
- (3) 6mm x 18mm Flat Washers

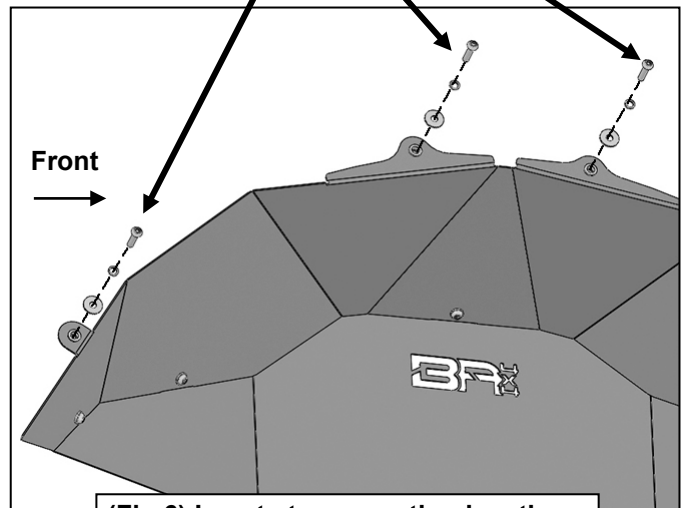


(Fig 6) Locate top mounting locations on bottom of fender supports

- (2) 6mm x 25mm Button Head Bolts
- (2) 6mm Lock Washers
- (2) 6mm x 18mm Flat Washers
- (2) 6mm Clip Nuts

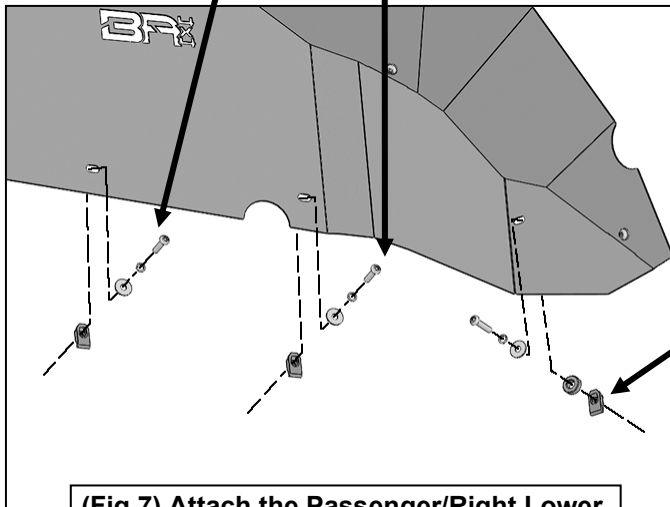

(Fig 7) Attach the Passenger/Right Lower Liner to the frame in the wheel well

- 6mm x 20mm Button Head Bolt
- 6mm Lock Washer
- 6mm x 18mm Flat Washer
- Spacer
- 6mm Clip Nut

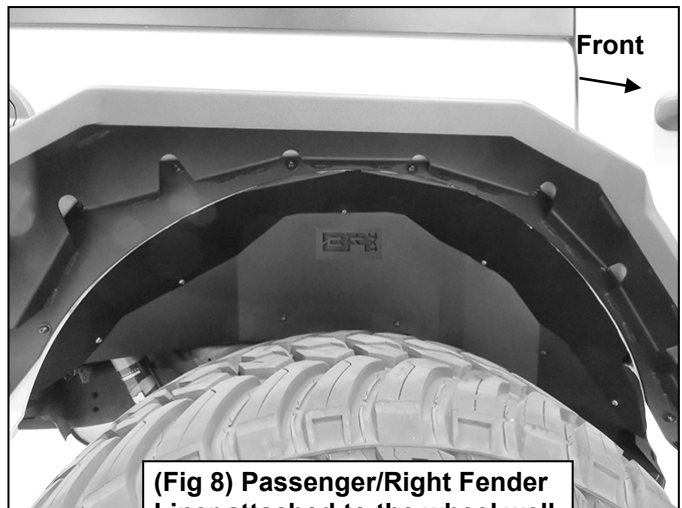

(Fig 8) Passenger/Right Fender Liner attached to the wheel well