

# Installation & CARE

## 2001-2007 MERCEDES BENZ W203 C-CLASS HEADLIGHTS INSTALLATION INSTRUCTION

### BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED


1/4" Ratchet	8 mm socket	10 mm socket	Plastic fastener remover
Socket extension	ST25 torx bit socket	ST15 torx bit socket	Flat head screwdriver

### PRODUCT NUMBER

LHP-BW20301-TM  
LHP-BW20301JM-TM  
LHP-BW20301G-TM  
LHP-BW20301BK-TM



### LET'S START THE INSTALLATIONS

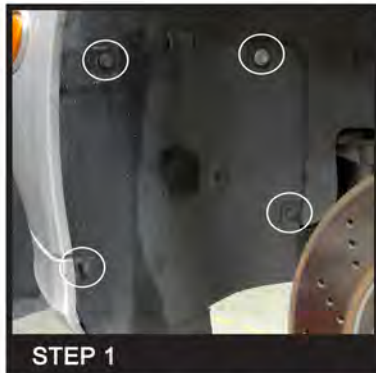


**STEP 1**

Remove three 10 mm bolts and one plastic fastener clip from the wheel well liner




**STEP 2**

Remove two plastic fastener clip under the front bumper

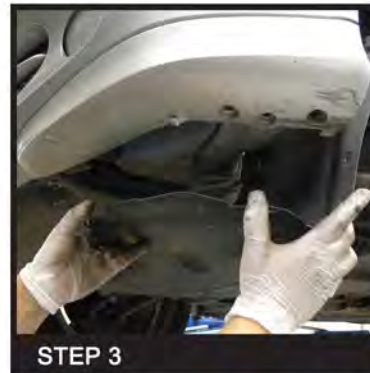


**STEP 3**

Remove the liner cover

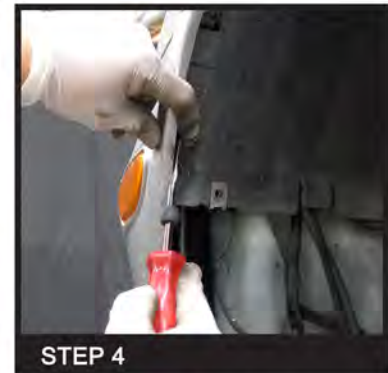


**STEP 4**

Remove one plastic fastener clip

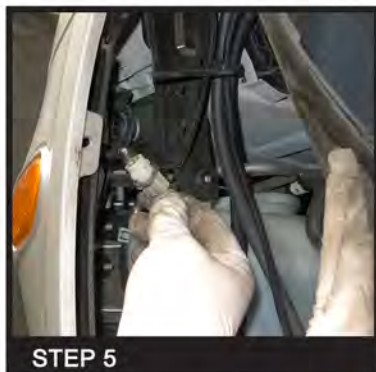


**STEP 5**

Remove side marker lights socket

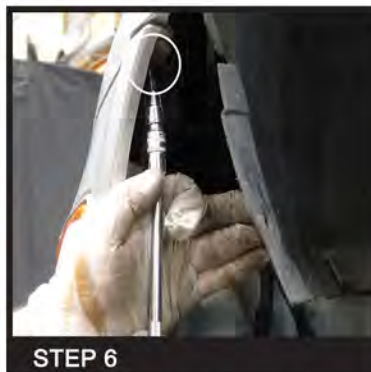


**STEP 6**

Remove one T25 bolt from the side of the bumper

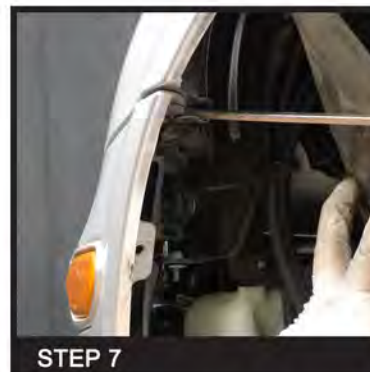

**STEP 7**

Use flat head screwdriver to remove the bumper end bracket

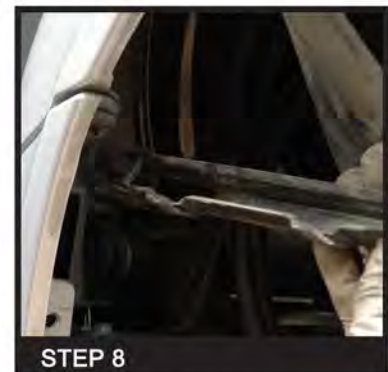

**STEP 8**

Remove bumper end bracket



**STEP 9**

Disconnect fog light harness



**STEP 10**

Remove one 8 mm bolt at the front of the front bumper



**STEP 11**

Remove one 8 mm bolt at the top of the front bumper, and repeat step 1-11 for opposite side



**STEP 12**

Remove the front bumper



**STEP 13**

Remove three 8 mm headlight mounting bolts



**STEP 14**

Remove three 8 mm headlight mounting bolts



**STEP 15**

Disconnect the headlight harness



**STEP 16**

Remove the factory headlight



**STEP 17**

Remove two T15 bolts on the top mounting mantle bracket from the factory headlight



**STEP 18**

Remove top mounting mantle bracket and spacers from the factory headlight



**STEP 19**

Install the spacers and the mantle bracket to the new headlight



**STEP 20**

Reinstall two T15 bolts on the top mounting mantle bracket



**STEP 21**

Remove the headlight sealing ring from the factory headlight



**STEP 22**

Reinstall the headlight sealing ring to the new headlight




**STEP 23**

Connect the headlight harness



**STEP 24**

Install the new headlight

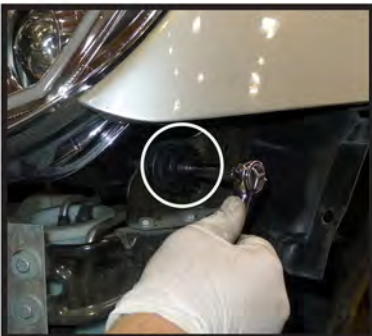


**STEP 25**

Reinstall three 8 mm headlight mounting bolts



**STEP 26**

Reinstall three 8 mm headlight mounting bolts

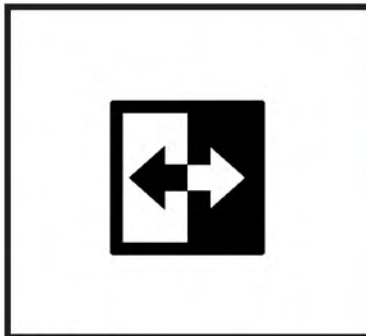

**STEP 27**

Please repeat the steps from 13 to 26 for the opposite side



**STEP 28**

Reinstall the front bumper



**STEP 29**

Reinstall one 8 mm bolt at the top on the front bumper



**STEP 30**

Reinstall one 8 mm bolt at the front of the front bumper




**STEP 31**

Connect the fog light harness



**STEP 32**

Reinstall the bumper end bracket

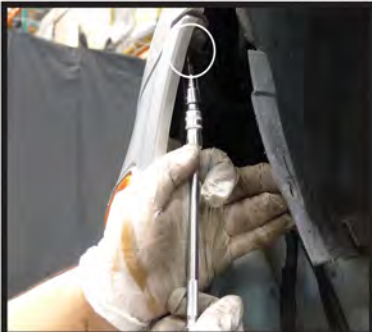

**STEP 33**

Reinstall one T25 bolt from the side of the bumper




**STEP 34**

Reinstall side marker lights socket



**STEP 35**

Reinstall the liner cover

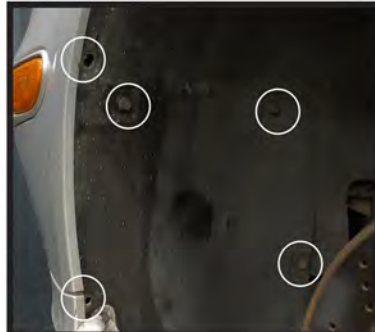

**STEP 36**

Reinstall two plastic fastener clip and three 10 mm bolts



**STEP 37**

Reinstall two plastic fastener clip under the front bumper, and repeat step 26-34 and 36 for opposite side



The installation is now complete

# Installation & CARE

## 2001-2007 MERCEDES BENZ W203 C-CLASS HEADLIGHTS INSTALLATION INSTRUCTION

### BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

## 2001-2007 MERCEDES BENZ W203 C-CLASS HEADLIGHTS BACK VIEW

