

# INSTALLATION INSTRUCTIONS

## Rear Wheel Well Inner Liner

### Ford F150 2015+ And Ford F250/350

#### LIK-61



**List of Contents:**

1 Pc. Passenger's side Inner Wheel Well Liner

1 Pc. Driver's side Inner Wheel Well Liner



**1 Pc. Installation Kit**

4 pc. J Clip

4 pc. Screw

1 pc. Installation Instructions.



**Tools Required**

Ratchet with 10mm socket



**Preparations:**

Clean the interior panels of the rear Wheel house.

**Installation time  
estimated: 15 min.**

**Instructions:**

**PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.**

**NOTE:** One person can do the installation.

**1. Starting at Passenger's side.**

Using a ratchet with 10 mm socket remove the screw located in the rear inner area of the wheel house **(Save the Screw)**





**2. to avoid interference and facilitate the installation:**

Locate the screw on the bottom front area of the fender flair; then loosen the screw half the length.



**2. Locate the 2 holes at the back area of the wheel house and insert one J clip in each hole.**

**"Flat side of J clip visible to you"**

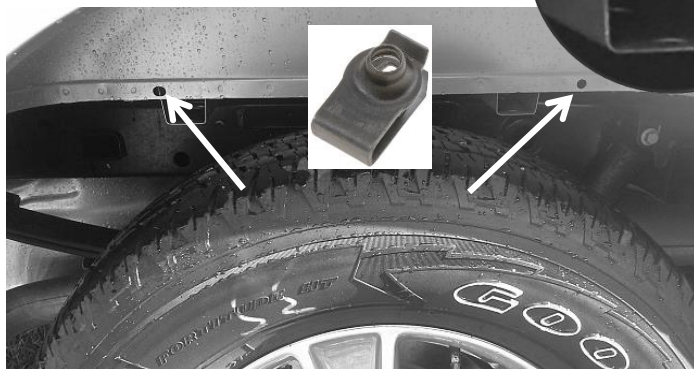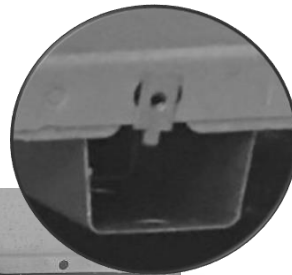

**NOTE: DUE TO VARIATIONS IN  
SOME SUPER DUTY TRUCKS.**

- SOME SUPER DUTY TRUCKS HAVE A RETURN LIP AT THE EDGE OF THE WHEEL HOUSE FLANGE; IN THOSE CASES ONE OF THE J-CLIPS CAN'T BE EASILY INSERTED.

- IN THAT CASE, TO ATTACH THE BOLT; HOLD THE J-CLIP BEHIND THE FLANGE, ALIGNED TO THE HOLES, THEN INSTALL THE BOLTS.

**INSTALLATION INSTRUCTIONS**  
**Rear Wheel Well Inner Liner**  
**Ford F150 2015+ And Ford F250/350**  
**LIK-61**



**4.** Mount the Inner Wheel Well Liner marked as (PS) inside the inner panel of the wheel house.



**5.** Insert the bottom sides behind the metal flange



**6.** Insert the upper section of the plastic liner behind the metal flange.  
Make sure all edges are inside the metal wheel well house edge.



**7.** Locate the 2 pre-drilled holes at the back of the inner wheel well liner, and install 2 of the screws provided



**8.** Re-install the screw saved in step 2;  
Then tighten the loosen screw from step 3



**TO INSTALL DRIVER'S SIDE  
FOLLOW THE SAME  
INSTRUCTIONS AS  
PASSENGER'S SIDE**

**Care and Maintenance Recommendations**

To protect the appearance of this product, wash with soap and water