



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-CCAM98-(ALL COLORS)

Tools Required

8mm & 10mm Socket + Ratchet




Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the hood.

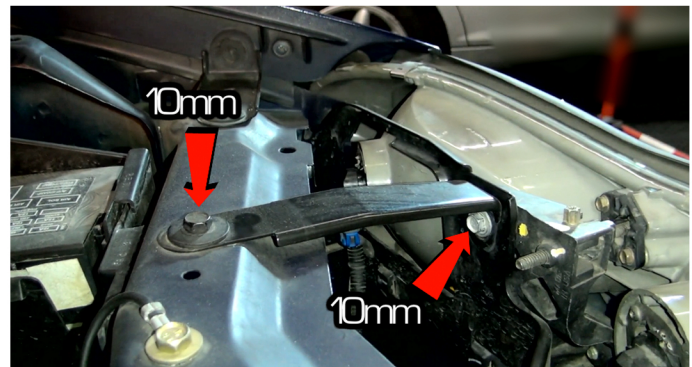


2) Remove [2x] 10mm bolts securing the headlight bracket.




3) Remove the headlight bracket.




4) Unseat the headlight.

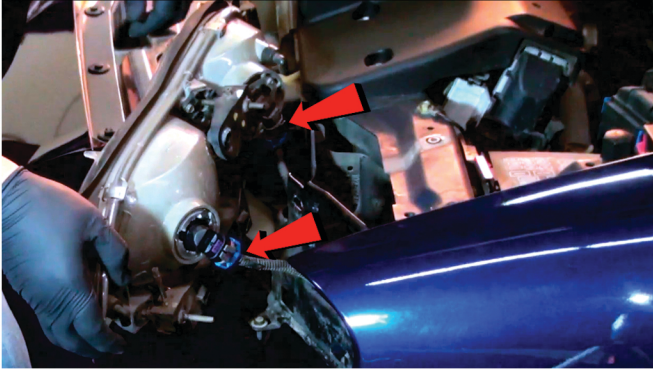


5) Disconnect the high and low beam wiring harnesses, then remove the OEM headlight.

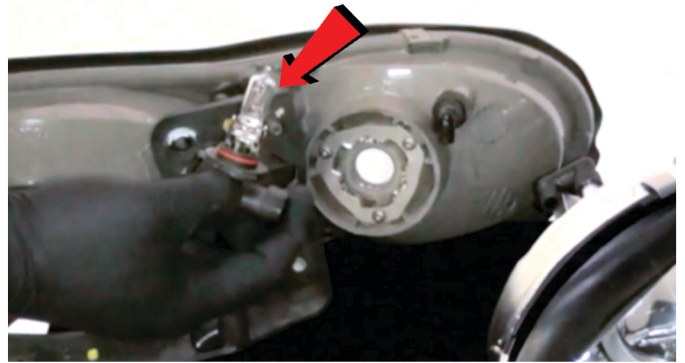

6) Remove the high beam bulb from your OEM headlight. Never touch exposed bulbs with bare hands.

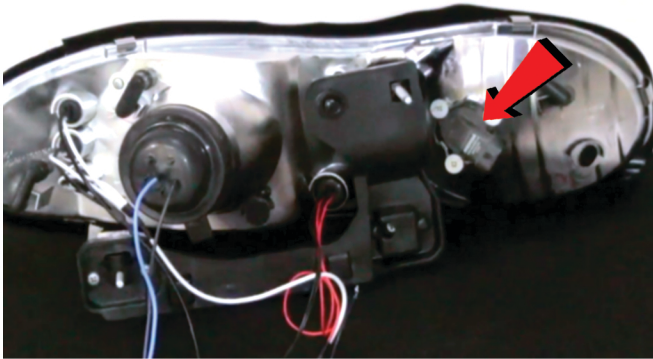

7) Transfer the high beam bulb to your new Spyder headlight.

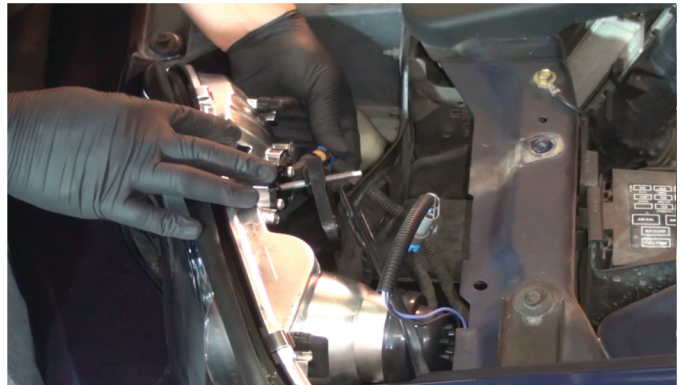

8) Connect the high and low beam harnesses to your Spyder headlight.



9) Seat your Spyder headlight.



10) Replace the headlight bracket and reinstall [2x] 10mm bolts to secure the bracket.



11) Reinstall [2x] 10mm bolts to secure the headlight bracket.



12) Close the hood and enjoy your Spyder headlights.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=Mv0YplgEXwk>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.