



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

PRO-YD-DR02-(ALL COLORS)

### Tools Required

10mm Socket wrench/ratchet

Phillips Head Screwdriver



*\*Please Note\**

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the hood. Remove the two 10mm bolts securing the headlight.




2) Remove the hidden 10mm just below the turn signal area.



3) Remove the single phillips head screw securing the headlight weatherstrip to the body.



4) Unseat the headlight by gently pulling it forward.

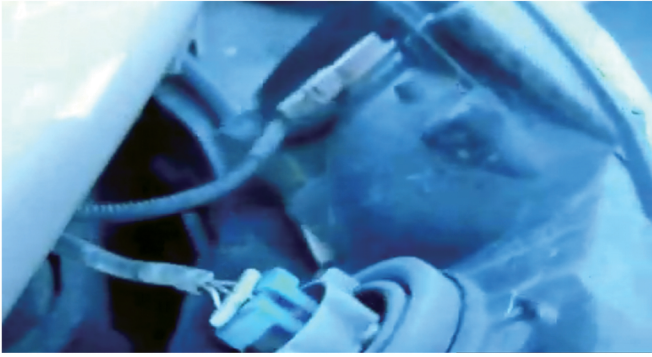

5) Remove the headlight bulb socket and turn signal bulb socket from the OEM headlight assembly. Remove and discard the headlight bulb, but leave the turn signal bulb in place.



6) Locate your SPYDER headlight. Connect the SPYDER headlight harness to the headlight bulb socket. Install the turn signal socket into the SPYDER housing.



7) Seat the SPYDER headlight.



8) Reinstall the three 10mm bolts that secure the headlight and then reinstall the phillips head screw that secures the headlight weatherstrip.



9) Close the hood and enjoy your new SPYDER headlights.



**SPYDER**  
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=QwQ5Tksv0Rk>

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.