



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-FF12-DRL-(ALL COLORS)


Tools Required

10mm Socket & Ratchet



Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.

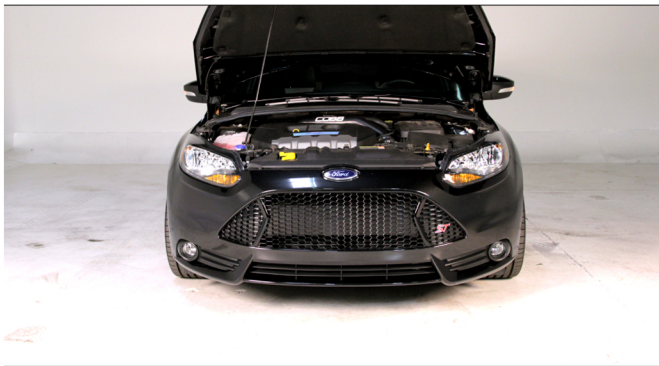


1) Open the hood.




2) Remove [2x] T-30 Torx Screws securing the
headlight.




3) Unseat the headlight by sliding it forwards.

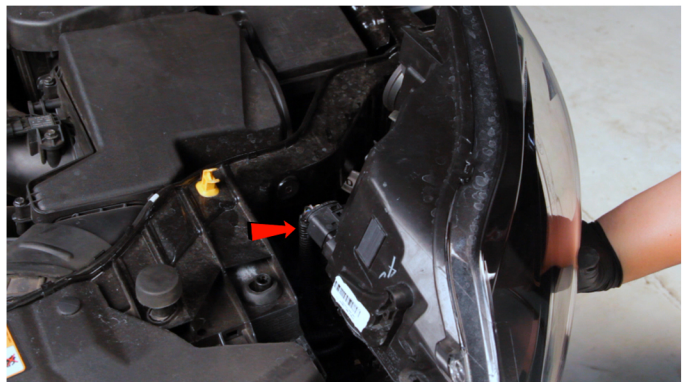

4) Disconnect the headlight wiring harness.

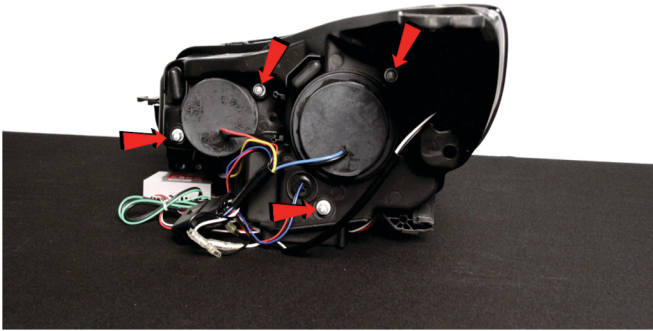

5) The beam adjusters are marked here and are 8mm. No additional wiring is necessary for your light tube DRLs.

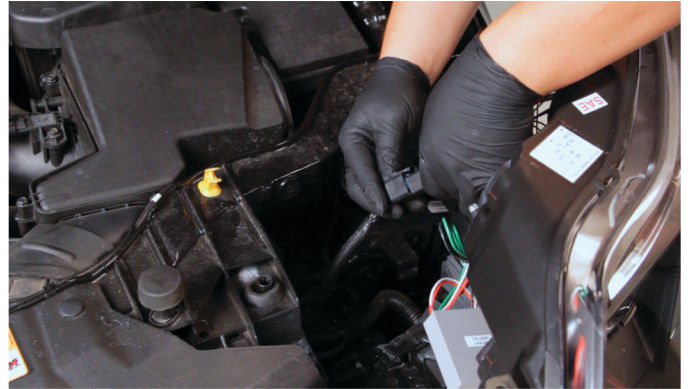

6) Reconnect the wiring harness.



7) Seat the Spyder headlight.



8) Reinstall [2x] T-30 torx screws to secure the headlight.



9) Close the hood and enjoy your new Spyder projector headlights.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=cWOj3w4GYis>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.