



SPYDER

WWW.SPYDERAUTO.COM


INSTALLATION GUIDE: PRO-YD-HC06-2D-HL-(ALL COLORS)

Tools Required

8mm & 10mm Socket wrench/ratchet
Panel Popper or Flat-head Driver
Size 5 Allen Key

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.

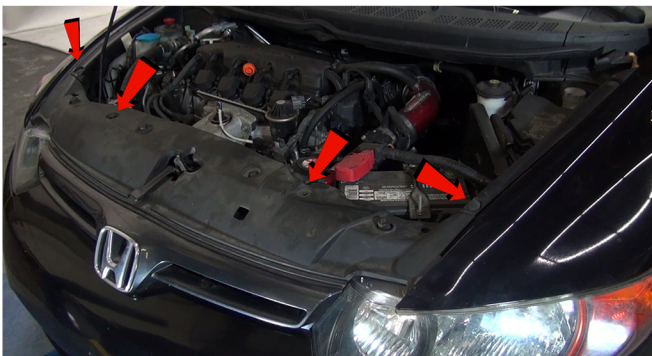

1) Open the hood and remove four Plastic Retainers Securing Cover panel.



2) After removing retainers, remove Radiator Cover Panel.




3) Remove two Size 5 Allen Key bolts securing upper bumper fascia.




4) Remove ten Plastic Retainers Securing Underside of Front Bumper Fascia to body.



5) Apply painter's tape or masking tape to bumper edges to help avoid scratching the paint while working.

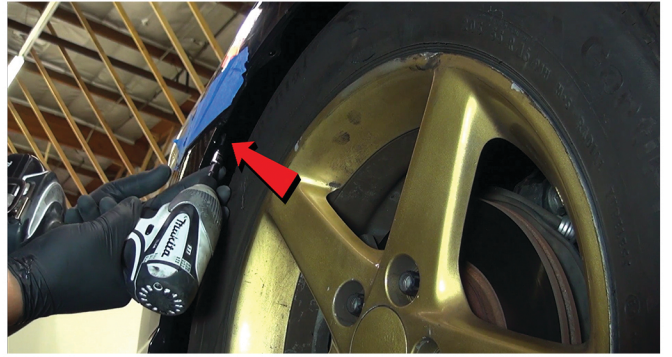

6) Locate & Remove one 8mm Bolt Securing Bumper Fascia To Fender at the wheel well.

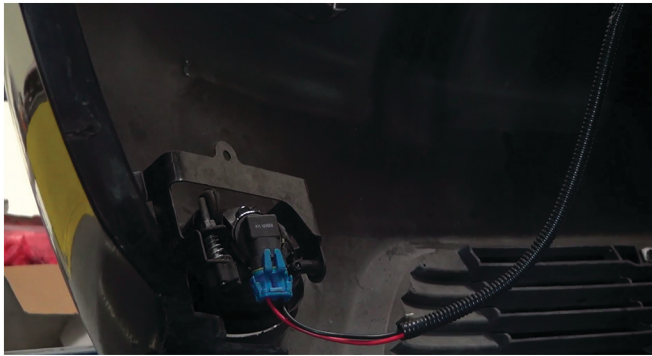

7) Unseat the bumper edges and then disconnect the fog light harnesses, if so equipped.



8) Remove the front bumper fascia and set it aside.




9) There are four 10mm bolts securing the headlight. Remove this bolt.



10) There are four 10mm bolts securing the headlight. Remove this bolt.




11) Remove the third 10mm bolt securing the headlight.

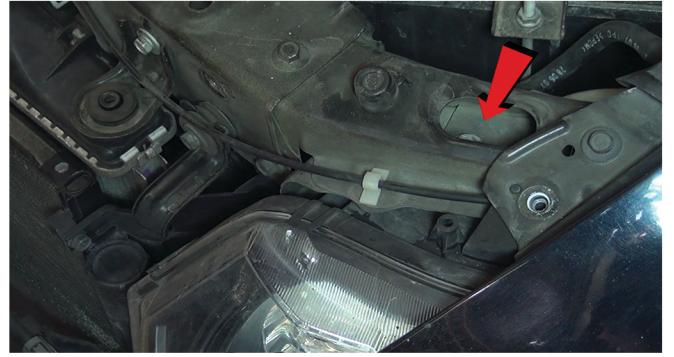

12) The fourth 10mm bolt is located in this recess in the radiator support. Remove the bolt.




13) Unseat the headlight. It may be necessary to remove the bracket for clearance to unseat the headlight. Remove the 10mm bolt securing the bracket to the headlight, if necessary.

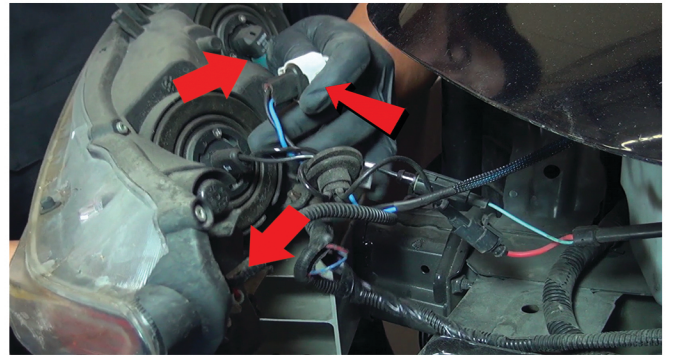


14) Disconnect the high beam and low beam wiring harnesses and remove the turn signal socket. Then remove the headlight and set it aside.



15) Now you must transfer the bracket from the OEM headlight to your SPYDER headlight.

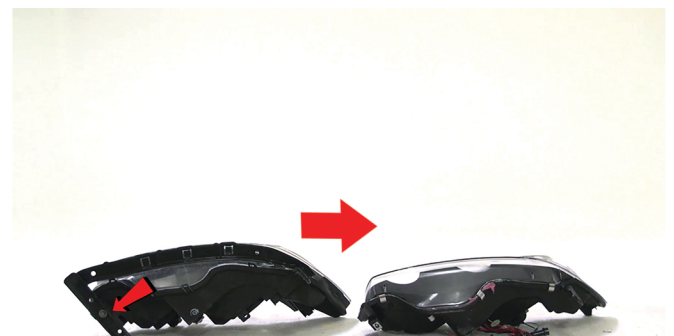


16) Remove the 10mm Bolt Securing Bracket to OEM headlight. Transfer Bracket from OEM headlight to SPYDER headlight. Be sure holes align in both the bracket and the headlight assembly.

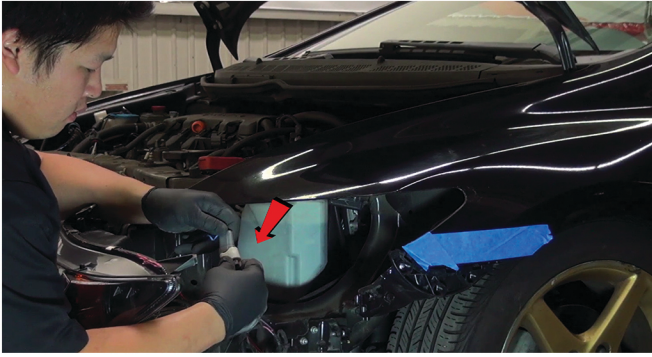

17) Reconnect High Beam & Low Beam Wiring Harnesses to SPYDER headlight and install turn signal bulb socket into SPYDER headlight.



18) Seat the SPYDER headlight.

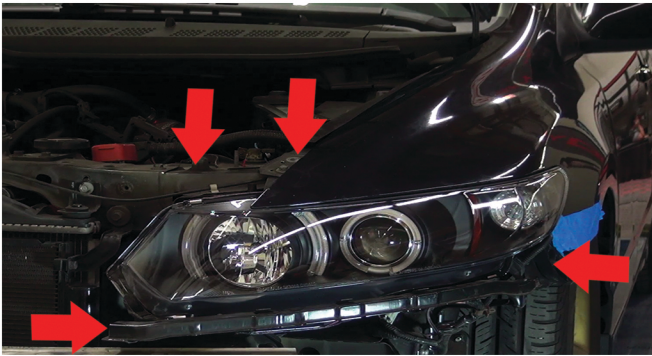


19) Reinstall four 10mm Bolts Securing Headlight




20) Reconnect Fog Light Wiring Harness [if equipped]



21) Seat Front Bumper Fascia.

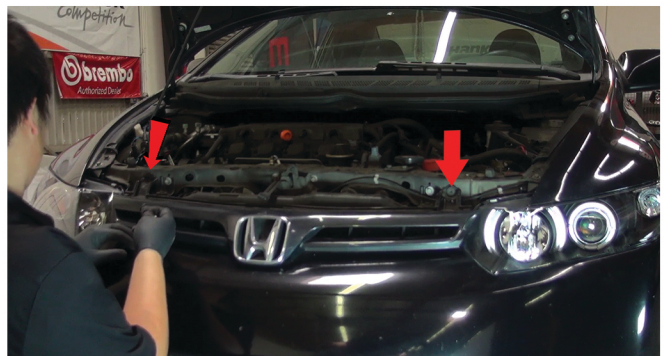

22) Reinstall two Size 5 Allen Key Screws Securing Upper Bumper Fascia.

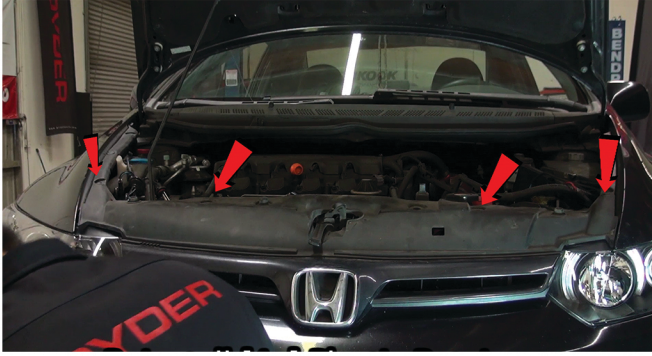

23) Reinstall cover panel and four plastic retainers that secure the radiator filler panel.



24) Reinstall ten Plastic Retainers Securing Underside of Bumper Fascia



25) Close the hood and enjoy your new SPYDER headlights.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=4c1QOptwvpY>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.