



**Read complete instructions
before installation!
Improper installation may
void warranty**

Description: Projector Plank Headlight


Application: GMC Canyon 15-18 headlight installation



Tools required:

Small flat head screwdriver, T15 Torx bit and driver
3/8 drive ratchet, 3/8 extension, 7mm & 10mm sockets

Step 1: Open hood and disconnect
negative lead cable.

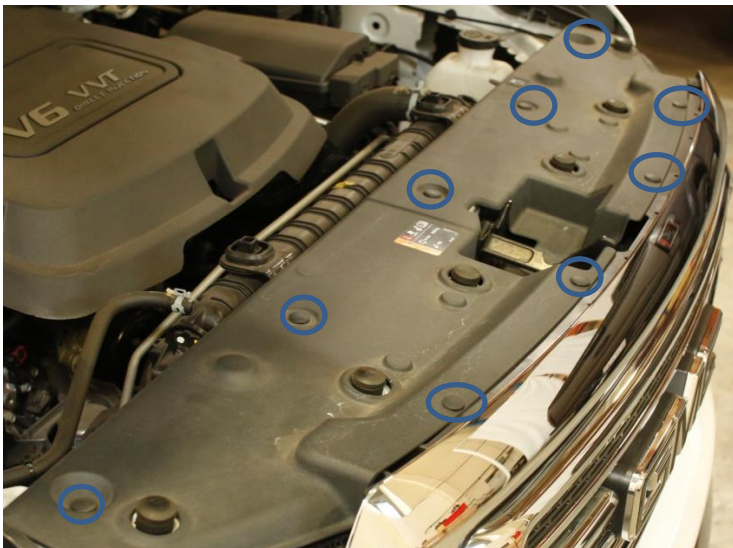


Step 2: Remove fan shroud by removing 9
plastic push tabs.



Close picture of tab removed.



Step 3: With the fan shroud loose, remove fan shroud and place in a safe area.

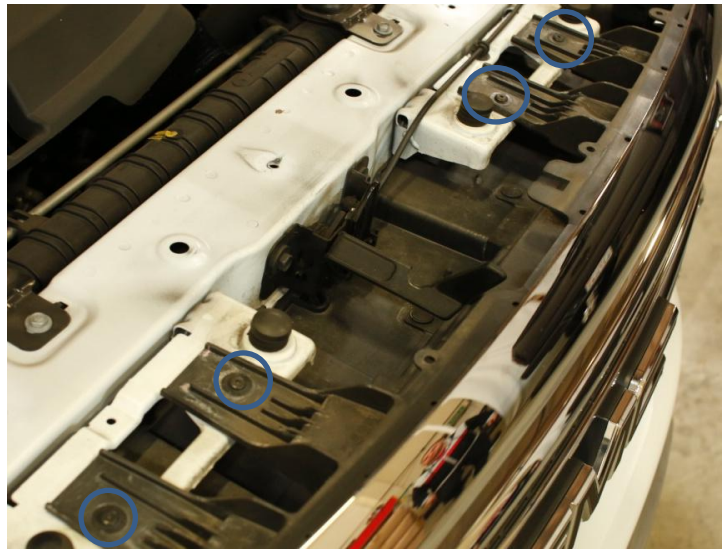

Step 4: Remove four screws with T15 Torx bit to loosen grill.



Step 5: Remove six T15 Torx bit screws to peel back tire shroud, within bumper you will locate three 7mm bolts that must be removed.



Step 5B: Picture of the inside of the bumper and removing of the three 7mm bolts, repeat step 5 on passenger side.



Step 6: Gently pull down on the side of the bumper to detach from fender, repeat process on passenger side.




Step 7: Detach two clips from under grill with panel popper or small flat head screwdriver, repeat process on passenger side.



Step 8: Remove two 10mm bolts located within the air dam, near the front license plate.



Step 9: With the front bumper being fully detached from grill, you can gently detach the grill from the truck. **Tip:** *Once you detach the grill from each headlight, lean the grill forward and pull out.*

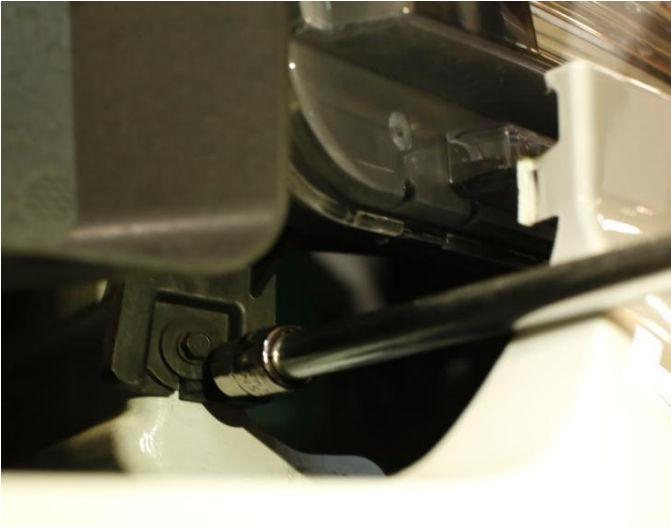


Step 10: Remove OEM headlight by removing four 10mm bolts, one located near radiator.



Step 11: Remove second 10mm bolt located between fender and bumper.



Step 12: Remove two 10mm bolts from on top of headlight.

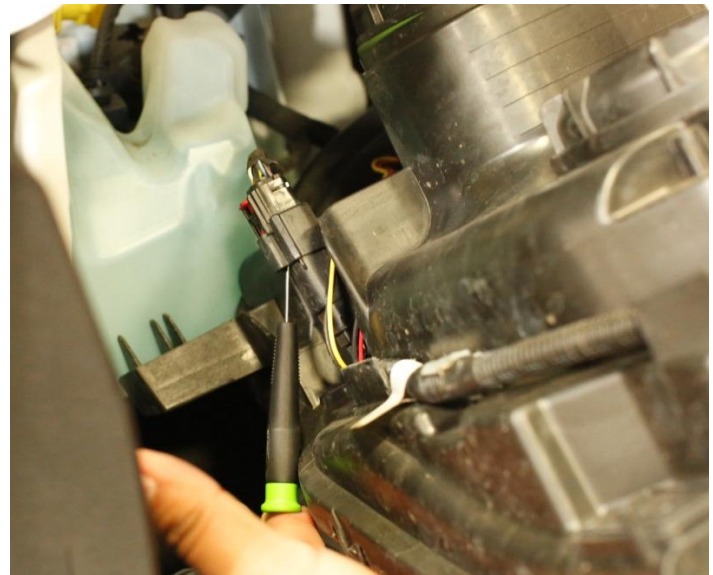

Step 13: Tilt headlight forward to disconnect harness. You might require a small flat head screwdriver to remove connector, then remove headlight.



Step 14: Install the new headlight and connect the one OEM harness to headlight and repeat step 12 thru 10 in reverse to secure the headlight.



Step 15: Repeat steps 10 thru 14 on passenger headlight.

Step 16: Reverse steps 9 thru 1 to reinstall front bumper and grill.

Tip: when reinstalling the grill, have someone help you guide the grill in place, as the bottom fastener can scratch the new headlights.



Step 17: Test all headlight functions before driving on public road.

