

PRODUCT DESCRIPTION: 3rd Brake Light
APPLICATION: 2009-2018 Dodge Ram



INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION
Improper installation may void warranty.



TOOLS NEEDED: Phillip's head screwdriver

STEP 1



Instructions on how to replace the factory 3rd brake light with the Anzo USA brake light.

STEP 2



Use Phillip's head screwdriver to remove 2 screws holding factory 3rd brake light in place.

STEP 3




Remove factory 3rd brake light from vehicle.

STEP 4



Disconnect main harness connector from factory 3rd brake light.

STEP 5

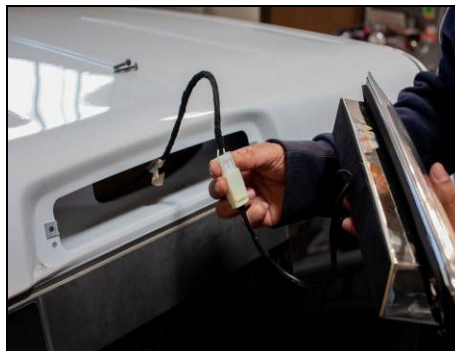


Connect main harness connector from vehicle side to Anzo USA 3rd brake light connector.

STEP 6



Insert resistor and main harness connector into opening.


STEP 7

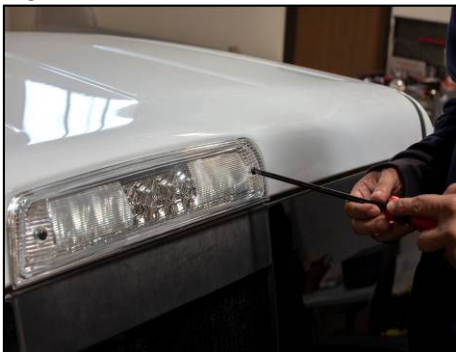

Insert Anzo USA 3rd brake light onto vehicle and screw factory screws into vehicle.

NOTE: To prevent damage to lens hand-tighten Screws so they are not over-tightened.

STEP 9

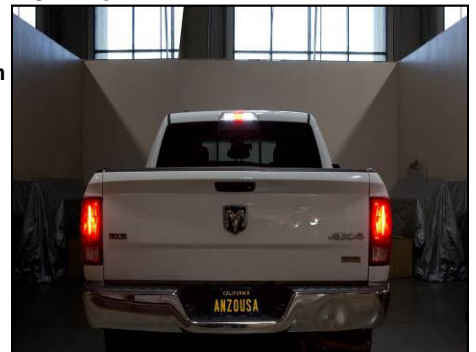

Test cargo and brake light functions on light before operating vehicle.