



TEL ☐ 1-866-XANATOS

INSTALLATION INSTRUCTIONS

PART#: BBH1409-SP\BBH1409A-SP
BULL BAR FOR HONDA PILOT 2009



PARTS LIST:

Qty	Description	Qty	Description
1	Bull Bar	4	12mm Hex Nuts
1	Driver/Left Mounting Bracket	2	10mm x 30mm Hex Bolts
1	Passenger/Right Mounting Bracket	4	10mm x 30.2mm OD x 2.1mm Flat Washers
1	Driver/Left Support Bracket	2	10mm Lock Washers
1	Passenger/Right Support Bracket	2	10mm Hex Nuts
2	8mm x 25mm Bolt Plates	2	8mm x 22mm OD x 1.5mm Flat Washers
4	12mm x 30mm Hex Bolts	2	8mm Lock Washers
8	12mm x 30.1mm OD x 3.1mm Flat Washers	2	8mm Hex Nuts
4	12mm Lock Washers		

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. CUTTING AND DRILLING ARE REQUIRED.**
2. Starting at the underside of the front bumper, carefully remove the center plastic splash guard. **NOTE:** Depending on the model of vehicle, there may be several two-piece plastic push-in clips holding the splash guard up to the vehicle. Pry the center pin of the clip up with a small flat blade screwdriver and remove the entire clip. Pay close attention to the type and location of all factory hardware for reinstallation. Once all clips are removed, move the splash guard to a stable work area.
3. From the driver side of the vehicle, locate and remove the two factory bolts securing the frame bracket to the front cross member, **(Figure 1)**. Firmly pull down on the bracket just enough to slide the driver side Mounting Bracket between the frame bracket and the cross member, **(Figure 2)**. **NOTE:** Do not pull too hard or you may bend the frame bracket. If more room is required to insert the Mounting Bracket, loosen but do not remove the large hex bolt at the end of the frame bracket. Align the mounting holes in the Mounting Bracket with the holes in the frame bracket and reinstall the two factory hex bolts. Snug but do not tighten all hardware at this time.
4. Repeat step 3 for the passenger side Mounting Bracket installation.
5. With assistance, mount the Bull Bar to the outside of the Mounting Brackets. Use the included (4) 12-1.75mm x 30mm Hex Head Bolts, (8) 12mm Flat Washers, (4) 12mm Lock Washers and (4) 12mm Hex Nuts to attach the Bull Bar to both mounting brackets.
6. Once the Bull Bar is fully mounted on the vehicle, level, adjust and tighten all hardware.
7. Next, select the driver side Support Bracket. Bolt the bracket to the bottom of the tab on the Bull Bar using (1) 10mm x 30mm Hex Bolt, (2) 10mm Flat Washers, (1) 10mm Lock Washer and (1) 10mm Hex nut. Move the Support Bracket into position under the cross member behind the front bumper. Mark the location, **(Figure 3A)**. Repeat this step to mark the drill location for the passenger side Support Bracket.
8. Move the Bull Bar and both Support Brackets out of the way and drill two 3/8" holes through the cross member in the previously marked locations, **(Figure 3B)**.
9. Insert the 8mm Bolt Plate down and through the cross member and attach it to the top of the Support Bracket with (1) 8mm Flat Washer, (1) 8mm Lock Washer and (1) 8mm Hex Nut, **(Figure 4)**. Snug but do not tighten at this time.
10. Move the Sport Bar back into position, level, adjust then tighten all hardware, **(Figure 5)**.
11. Next, hold the splash guard up to the original location and mark the area pictured in **Figure 6A & 6B** to cut for clearance. Once trimmed, reinstall the splash guard using the factory hardware.



12. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.





For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

DRIVER SIDE INSTALLATION PICTURED

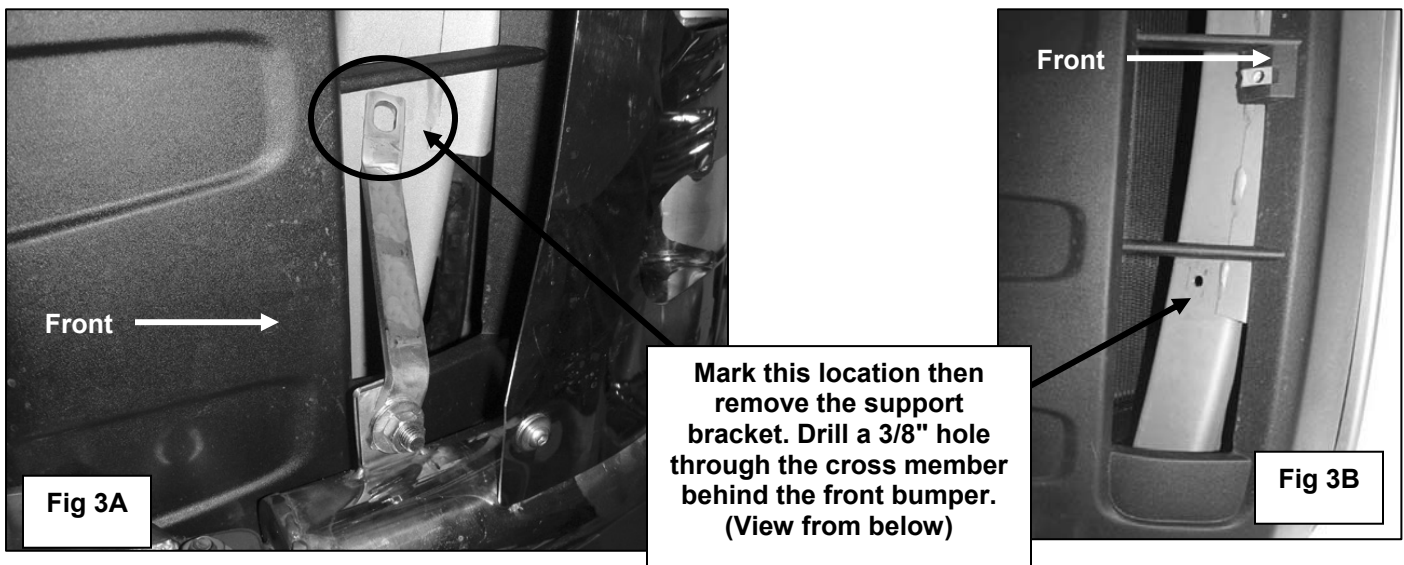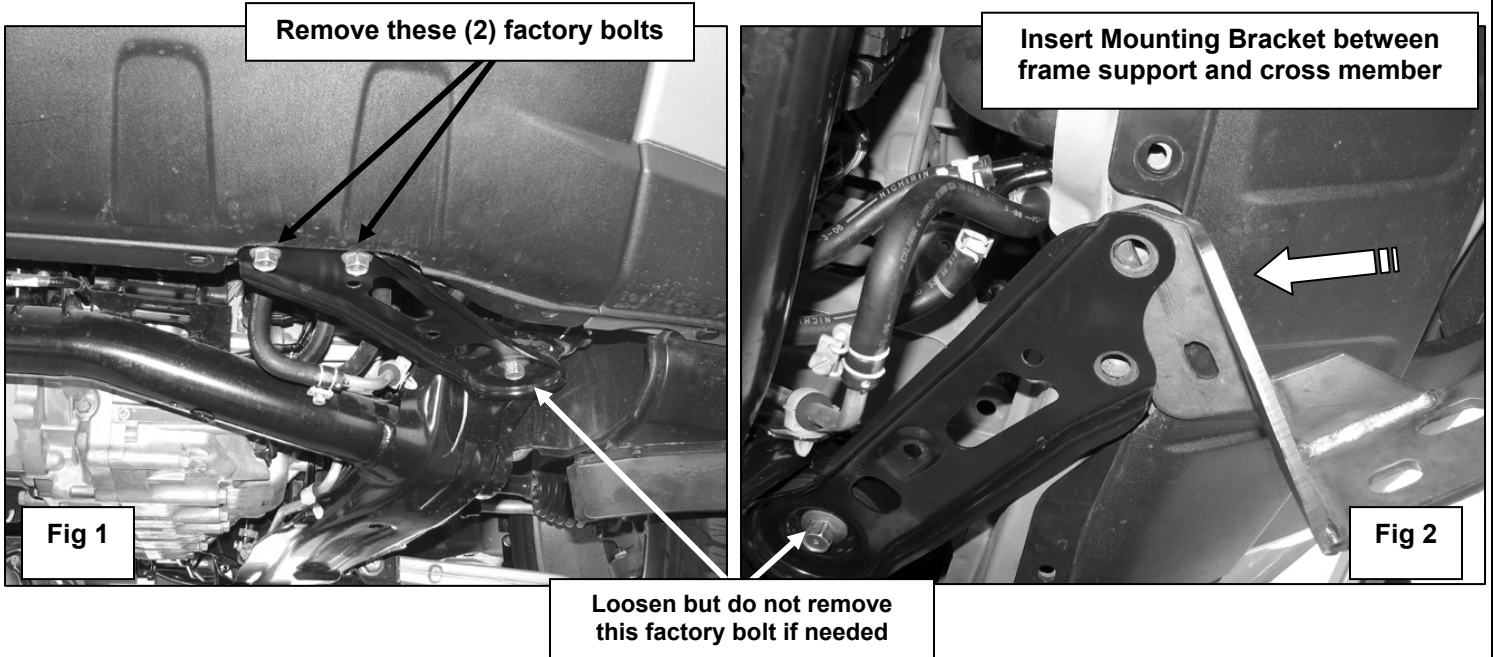

DRIVER SIDE INSTALLATION PICTURED

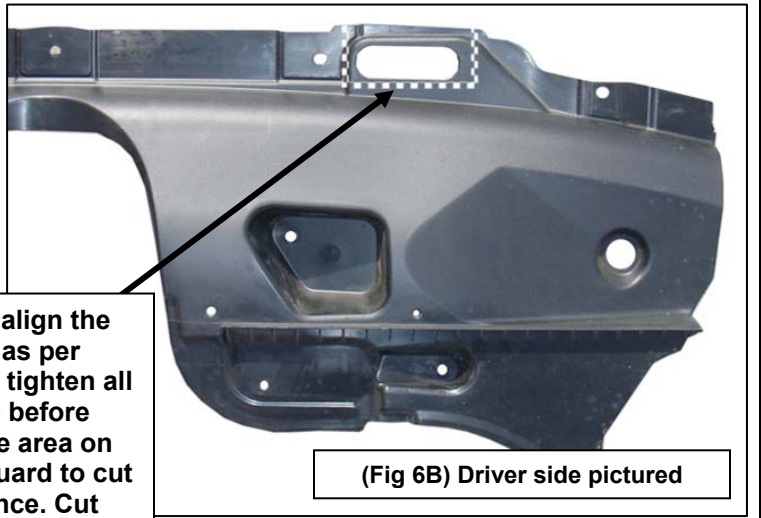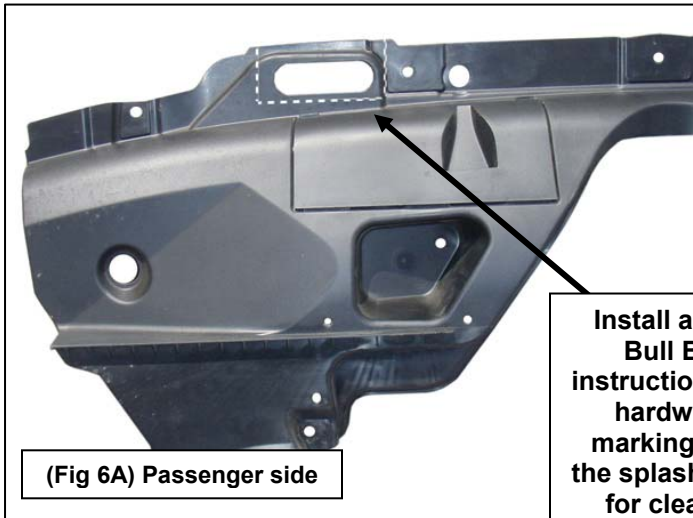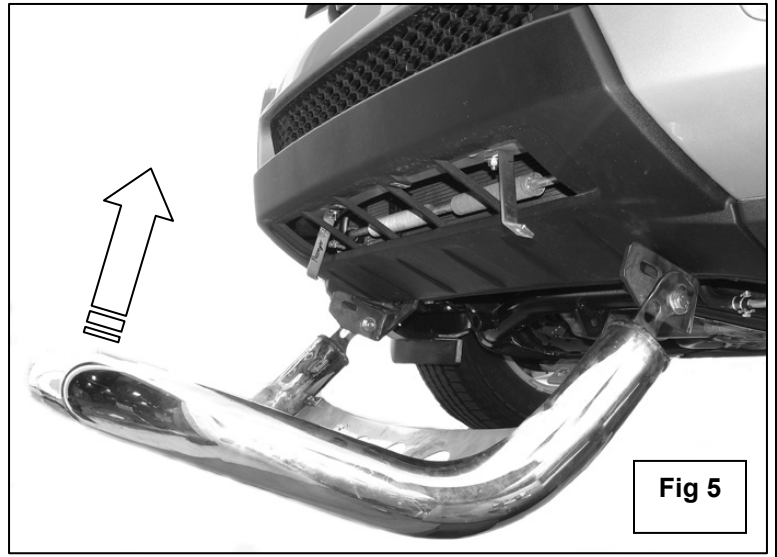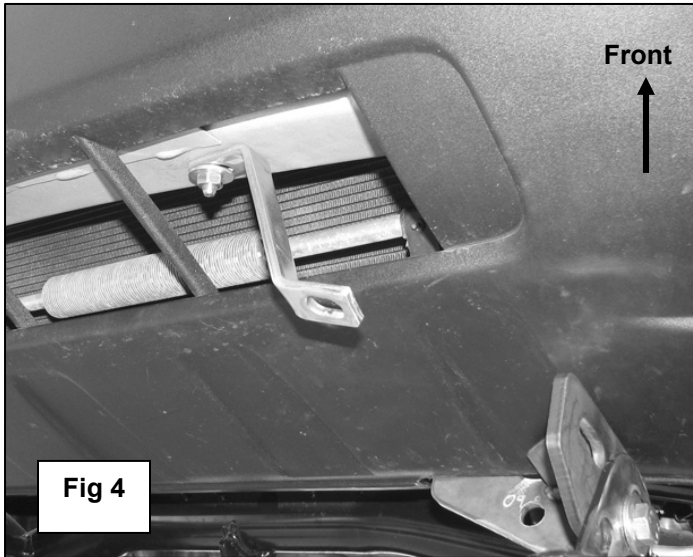

Install and align the Bull Bar as per instructions, tighten all hardware before marking the area on the splash guard to cut for clearance. Cut along dotted line.

