




Differential Mount Bushings – Pontiac G8 and 2010-present Camaro BK001, BK026, BK029, BK046

Required Tools:

- Hydraulic jack and 2 stands (lift optional but recommended)
- Wrenches – 18mm, 21mm
- Sockets – 10mm, 13mm, 18mm, 21mm
- Pry-bar
- Drill with 2” hole saw

Installation:

1. Lift vehicle and support with stands under the rocker jack points shown in **Image 1**.
2. Remove both rear wheels.

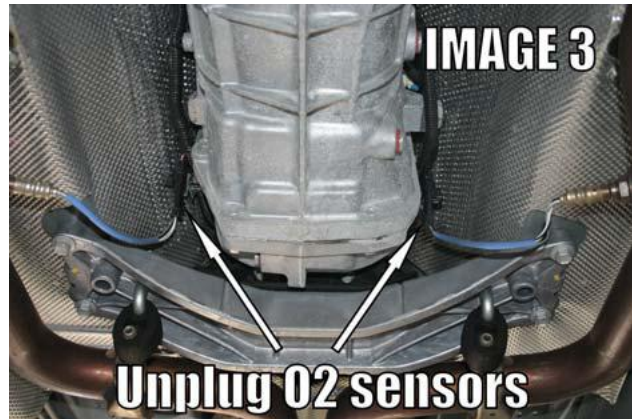

3. Using a 15mm socket, remove the driveshaft tunnel brace. See **Image 2**.
4. Unplug the rear O2 sensors as shown in **Image 3**.

Differential Mount Bushings (Cont.)




5. Using a 13mm socket, remove the two bolts that hold the rear two muffler brackets in place. Remove 4 bolts total, 2 per side. See **Image 4** above.
6. Using a 15mm socket, remove the 4 front flange bolts on the exhaust (2 per side). See **Image 5** above.
7. Remove center 15mm exhaust hanger bolt in rear. See **Image 6** above.
8. Using a helper, remove the entire exhaust assembly.
9. Using a 10mm socket, remove the front driveshaft tunnel exhaust shield. See **Image 7** above.
10. Using an 18mm wrench and socket, remove the 3 bolts that connect the driveshaft flex joint to the differential. See **Image 8**. NOTE: Remove the appropriate bolts so that the rubber flex joint remains attached to the driveshaft, NOT the differential. Using a pry-bar, pry the joint off the alignment dowel allowing the shaft to hang out of the way. (**Image 9**).



Differential Mount Bushings (Cont.)

11. Using a 10mm socket, remove the rear driveshaft tunnel exhaust shield.
12. Place a jack under the rear of the differential.
13. Note the orientation of the differential mounting bolts and make notes for proper re-assembly (**Image 10**). Using an 18mm wrench and socket, remove the (3) mounting bolts.

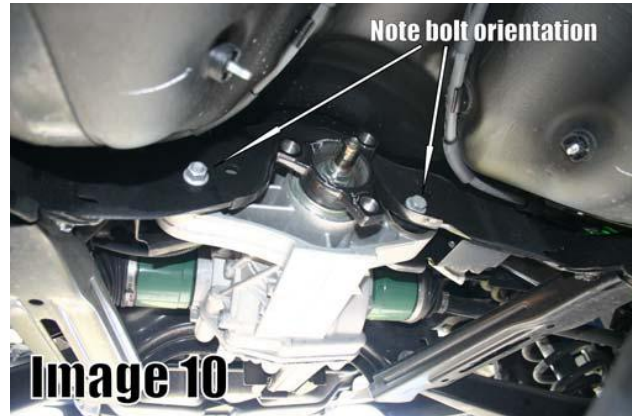

14. Place some rags between the inner CV boots and the cradle to protect the boot then lower the differential to gain access to the front mounting bushings.
15. Using a 2" hole saw, drill the front rubber bushings out of the bushing shells. See **Image 11**.
16. Using a screwdriver, pry the bushing shell out of the differential housing. See **Image 12**.
17. Insert the BMR bushing halves into the housing. Grease the inside of the bushing then knock the sleeves into the bushings.
18. Raise the front back up into the mount and allow the rear to hang until the rear bushing is accessible. Duplicate the above procedure for the rear mount. See **Image 13**.



NOTE: If using BMR part number **BK046**, the Delrin bushing goes in the rear mount.

Differential Mount Bushings (Cont.)

19. Lift the differential back into place and insert the bolts in the same orientation as recorded in step 13. Torque bolts to 85 ft/lbs.
20. Re-install both heat shields.
21. Re-install the driveshaft.
22. Re-install the exhaust.
23. Re-install driveshaft tunnel brace and lower the vehicle.

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product.