




STB019 INSTALATION INSTRUCTIONS

Tools required:

Ratchet
13mm socket

1. Using the 13mm socket, remove the 6 strut tower bolts as shown in **IMAGE 1**.
2. Install STB019 using supplied hardware, placing provided spacers under the STB019 at each bolt as shown in **IMAGE 2**.
3. Tighten all bolts to 35 ft/lbs.

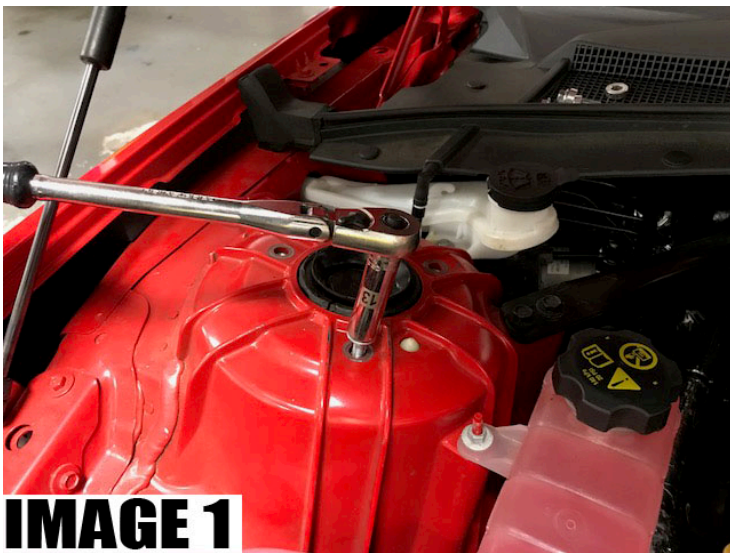

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.