



UTCA021 INSTALLATION INSTRUCTIONS

Tools required:


- 21 mm wrenches and socket

Instructions:

1. Raise vehicle and securely support with jack stands, remove the rear wheels.
2. Using a set of jack stands, support the rear end.
3. Using a 21mm socket and wrench, loosen the front and rear bolts of the stock upper control arm.
4. Remove the upper control arm and replace with new arm.

(NOTE: Position the arm with the 90-degree grease fitting in the front chassis mount, facing down and towards the rear. The straight grease fitting should also face rearward in the mount of the rear end.)

5. Torque bolts to 97 ft-lbs and lower vehicle.

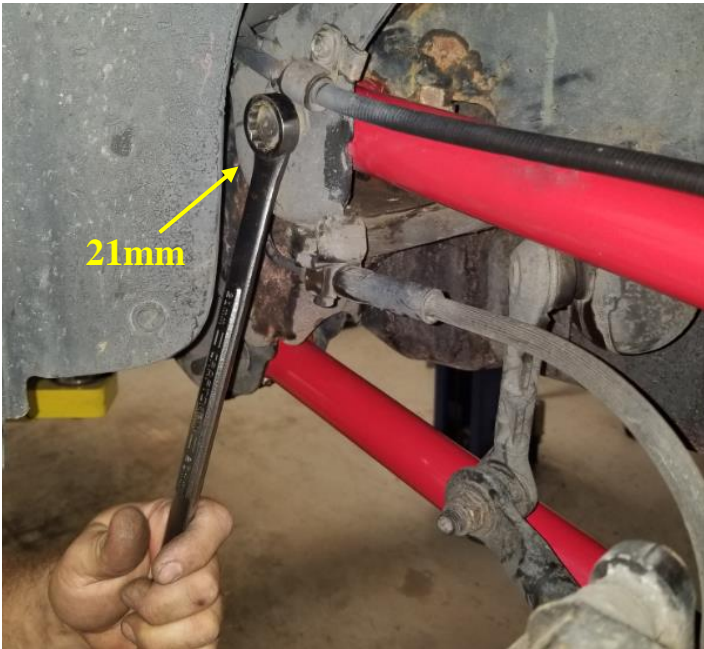

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.