



Strong As An Ox™

**BX3745 Installation Instructions  
2001-04 Toyota Sequoia, 4/WD**

**2003-06 Toyota Tundra, 2WD/ 4WD**

**Serial No.**

Tie down bracket and tow hook is removed and reinstalled for baseplate installation. Some drilling required. The BX8869 bulb and socket kit are recommended for this vehicle. The attachment tabs are 24 inches center to center and at 14 inches height.



1. Remove the two metric bolts from factory tie down brackets with 17MM socket on drivers side.



2. Remove the two metric bolts from factory tow brackets with 17MM socket on passenger side.



**IMPORTANT:** Use only genuine factory replacement parts on your Base Plate. Do not substitute homemade or nontypical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your Base Plate, be sure to use a replacement bolt of the same grade (Usually Grade 5, refer to parts list). Repair parts may be ordered through your nearest **Blue Ox** dealer or distributor.

3. Hold baseplate in place and tighten existing bolts. **Be sure and use loctite on all bolts before tightening.** Using baseplate as a template drill holes with 17/32" drill bit, both sides.
4. Insert item 2 into holes on frame sides to align with drilled holes. Tighten items 3 and 4 into item 2. **Be sure and use loctite on all bolts before tightening.** Baseplate installation is complete.
5. The dimensional variations between otherwise identical cars can be considerable. While the location and size of the holes in the baseplate were designed to allow for easy installation. It may be necessary to file a hole slightly.
6. Install tow bar and safety cables according to the instructions included in their packages. Do not substitute other devices if the tow bar pin or clip is lost.
7. **DEALER OR INSTALLER: BE CERTAIN THE USER RECEIVES THE INSTRUCTION SHEET.**



Strong As An Ox™

## Tools Required


17MM Socket

3/4" Socket  
17/32" Drill Bit

Loctite Red

## Parts List

Ref. No.	Qty.	Part No.	Description
1	1	61-5625	Weldment, Base Plate, BX3745
2	2	61-5496	1/2" Nut Plate, with 18" Wire
3	2	201-0051	1/2-13, Hex Bolt, Grd 5., ZP
4	2	203-0012	1/2 Lock Washer, ZP
5	2	201-0553	1/4-20 x 1/2 Hx. Wshd, Type F Screw
6	2	202-0047	#10-32 Hex Nut
7	2	203-0054	#10 Lock Washer
8	2	201-0192	#10-32 x 1/2 Slot, Rd. Hd. Screw
9	2	101-5822	Adapter, 4 Way Connector
E	4	Existing	Bolts
	2	226-0049	Baseplate Safety Cable, 36" CL IV (Not Shown)
	4	229-0512	Quicklink, 1/2, ZP (Not Shown)

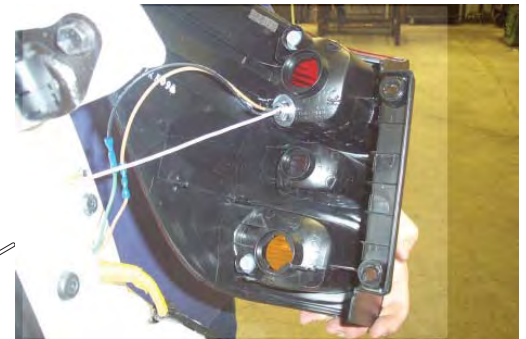

**Location for the BX8869  
on the passenger's side  
taillight assembly, 2004 model.**

