



CARBON KIDNEY GRILL-SET INSTALLATION INSTRUCTIONS

PART NUMBER D980-0026

APPLICATIONS: 2015-18 M3, M4

PARTS LIST

Qty	Part #	Description
1	D982-0008	CARBON KIDNEY GRILLE; RIGHT M3/M4
1	D982-0009	CARBON KIDNEY GRILLE; LEFT M3/M4


Congratulations for being selective enough to use a DINAN Carbon Grill set. We have spent many hours developing this kit to assure that you will receive maximum performance and durability with minimum difficulty in installation. Please take the time to read these instructions and call us if you have any difficulties during the installation.

NOTE: This kit does not fit all configurations of vehicles. Please pay careful attention to the vehicles listed above. Do not install this kit if your specific vehicle configuration is not shown. Please contact your Dinan representative if you have any questions.

INSTALLATION:

1. You will need to remove the front bumper by using the factory instructions.
2. With the bumper removed, remove the grills from the bumper by releasing the tabs that hold the Grills to the bumper. **(It's very important avoid breaking any of the tabs.)**

3. With the Grills removed from the bumper, you will need to release all the tabs to remove the outer Grill-Ring, and set the Ring aside. **(It's very important to not break any of the tabs.)**

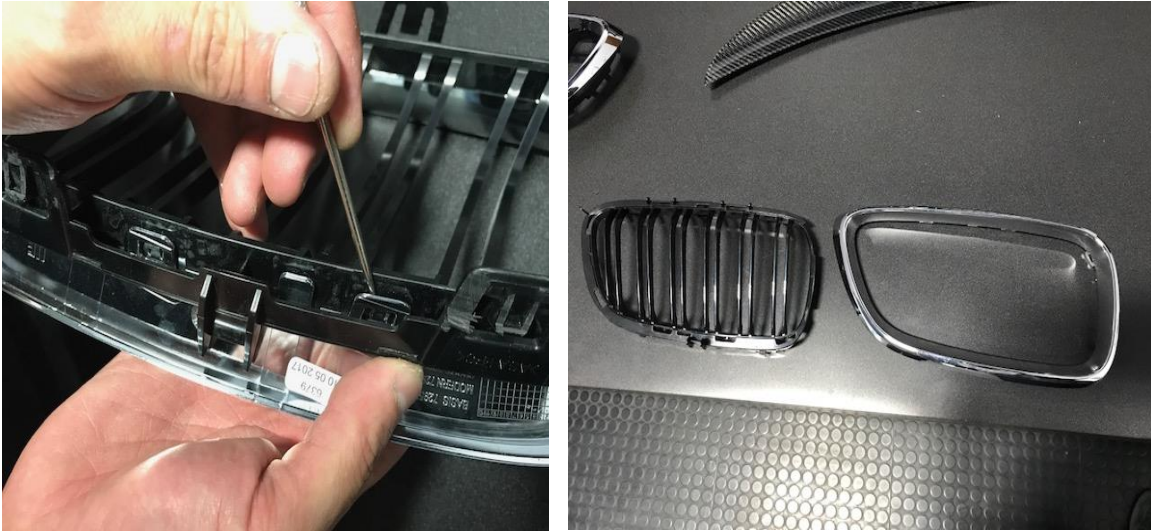

4. Take the Carbon Grill-Ring, and snap it onto the Grill. Afterwards, give them a light pull to ensure they don't come apart.



5. Take the Grills and reinstall them back into the bumper, then reinstall the bumper.

NOTE: Proper care will enhance the appearance of your Dinan carbon grilles. Please keep these parts clean and waxed at all times. Like any surface, poor maintenance will allow deterioration to take hold.