

2018-2021 FORD MUSTANG XB LED HEADLIGHTS INSTALL GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS



2X HEADLIGHT ASSEMBLIES

IMPORTANT: If your vehicle is equipped with anything but OEM turn signals (full assemblies, LED bulbs, or otherwise) in the tail lights or elsewhere: You may experience a hyper flash and/or problem with the sequential signal setting on these headlights. This is not a defect in the headlight, and caused by un-matched impedance with your original vehicle settings.

2018-2021 FORD MUSTANG




REQUIRED TOOLS


- RATCHET
- 5.5MM SOCKET
- 7MM SOCKET
- 10MM SOCKET
- 13mm SOCKET
- FLAT HEAD SCREWDRIVER OR TRIM REMOVAL TOOL
- PHILIPS HEAD SCREWDRIVER

INSTALLATION PROCESS

1. Remove the eight (8) plastic clips holding on the radiator cover.

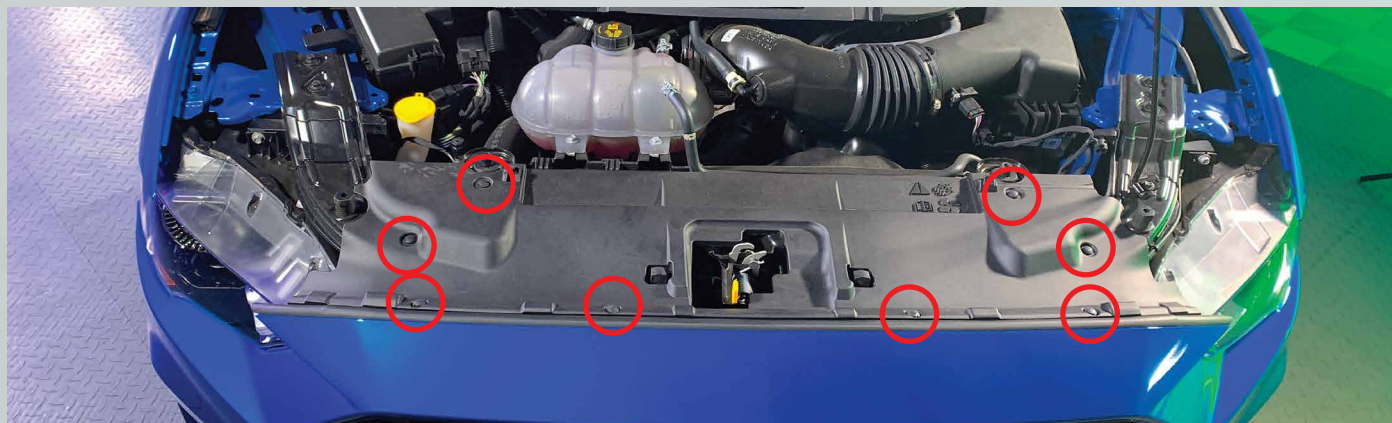


2. Remove six (6) 10mm bolts (red) and two (2) 5.5mm bolts (green) holding on the top of the bumper.

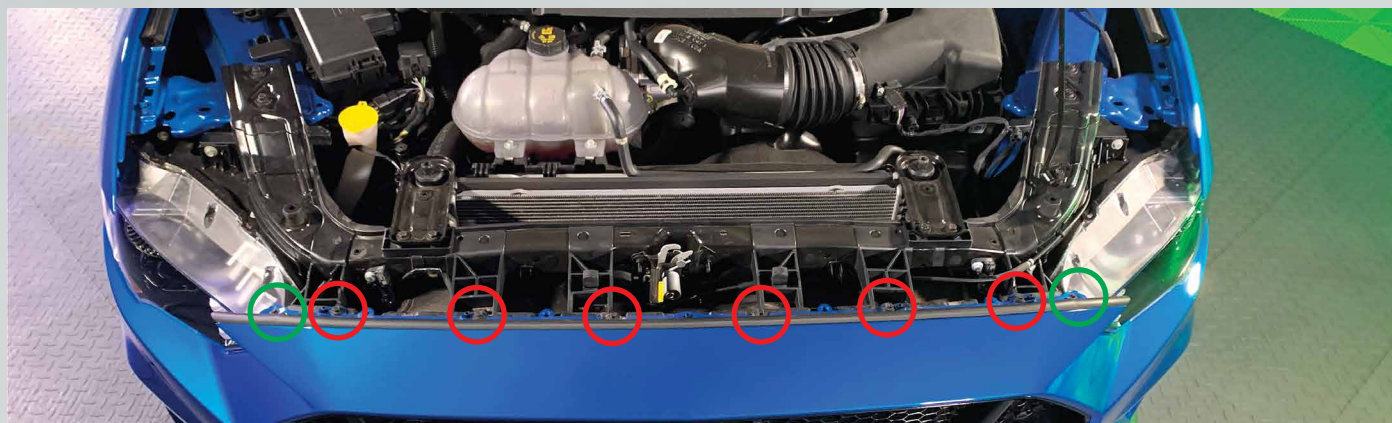

3. Remove these push clips from the fender liner, and pull the fender liner back.



4. Remove these two (2) 10mm nuts.

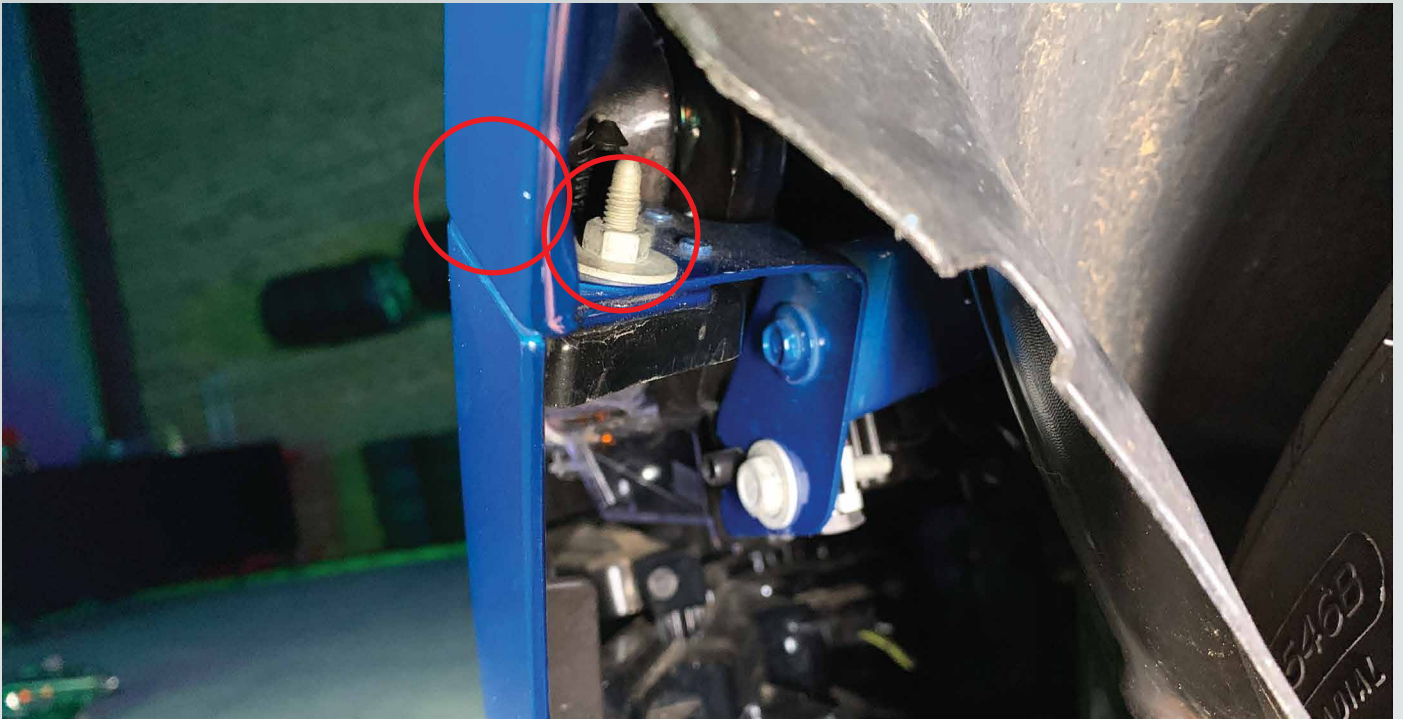


5. Pry down the bracket and remove it off the car.



6. Repeat steps 3-5 on the other side of the car.


7. Remove the thirteen (13) 7mm bolts from the bottom of the bumper.

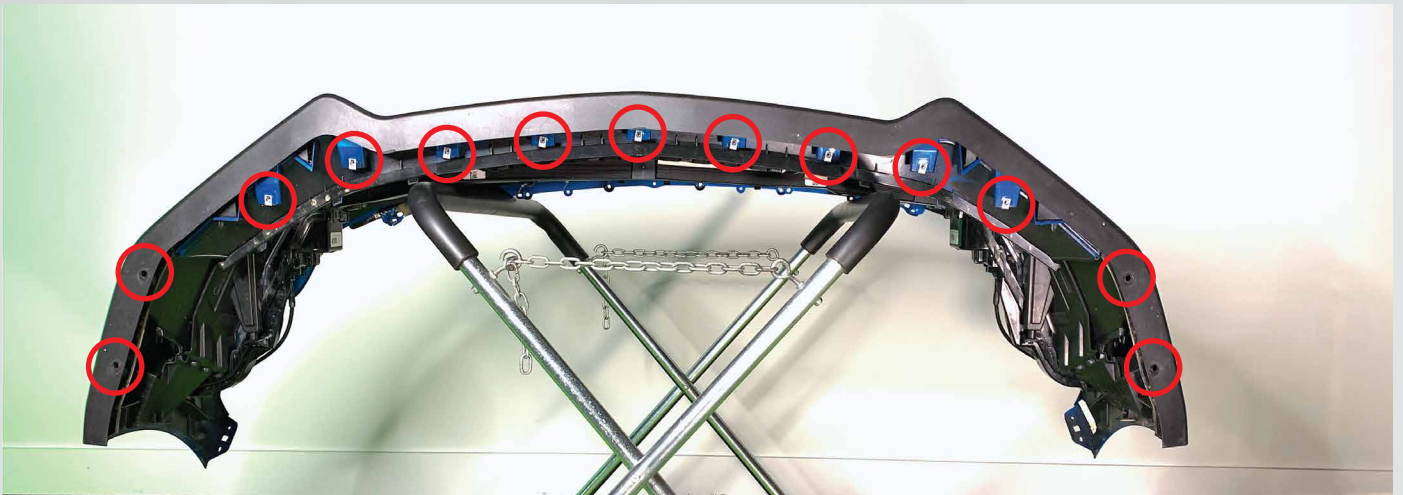

8. Pry up under these five (5) tabs with a flat head screwdriver to release the top of the bumper. Slide bumper off the car.




9. Unplug both fog lights from the car by pressing the release tab and sliding the connector off. Set bumper to the side.

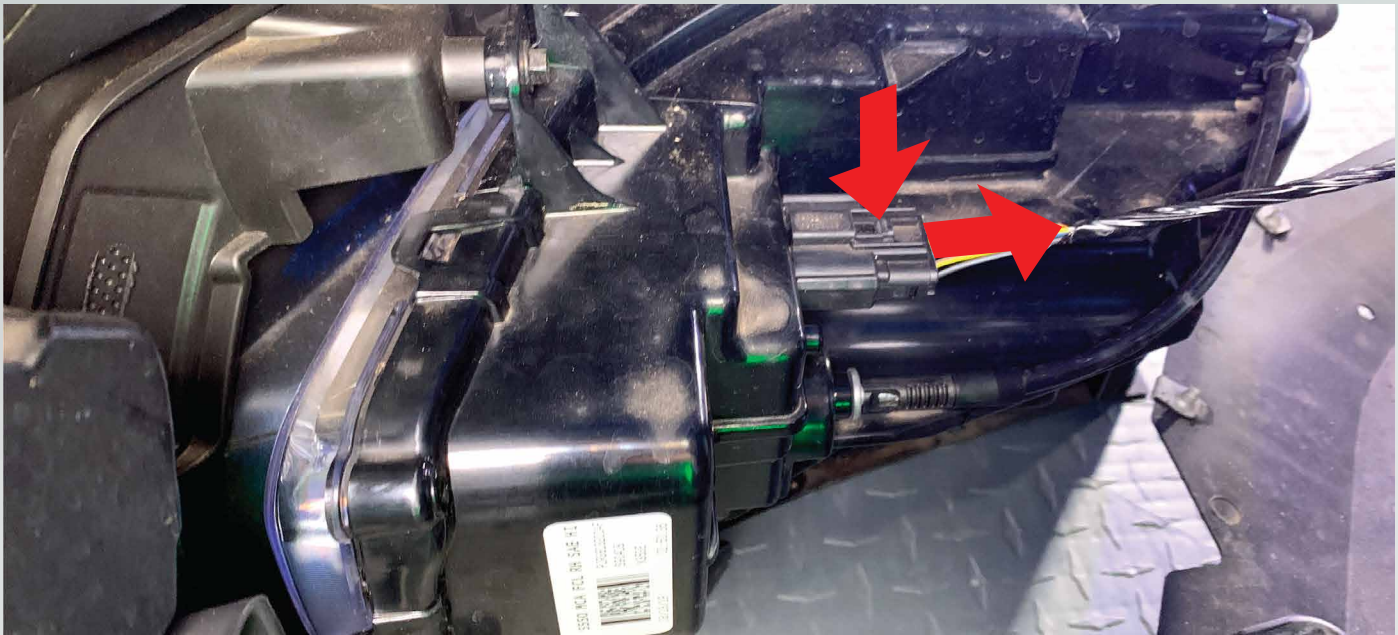


10. Remove one (1) 13mm bolt from the side of the headlight.



11. Remove two (2) 10mm bolts from the bottom and top of the headlight. Slide the headlight forward.

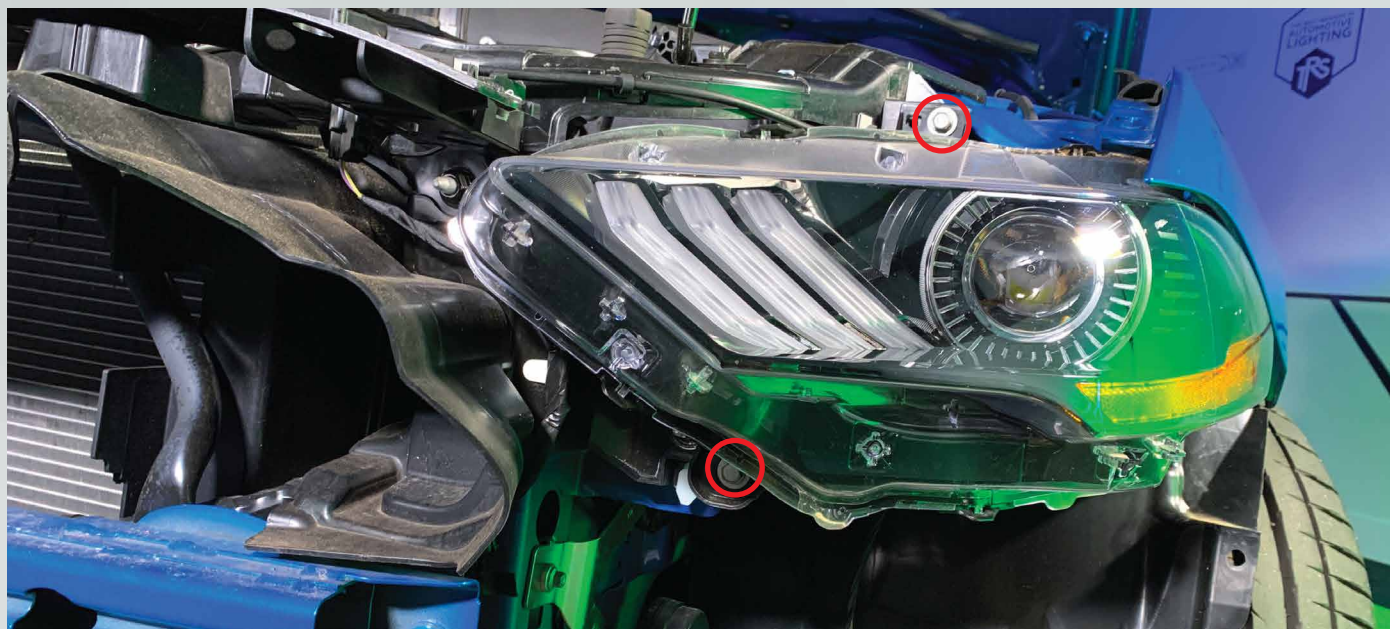


12. Unplug the headlight by pressing the release tab and sliding the connector off.

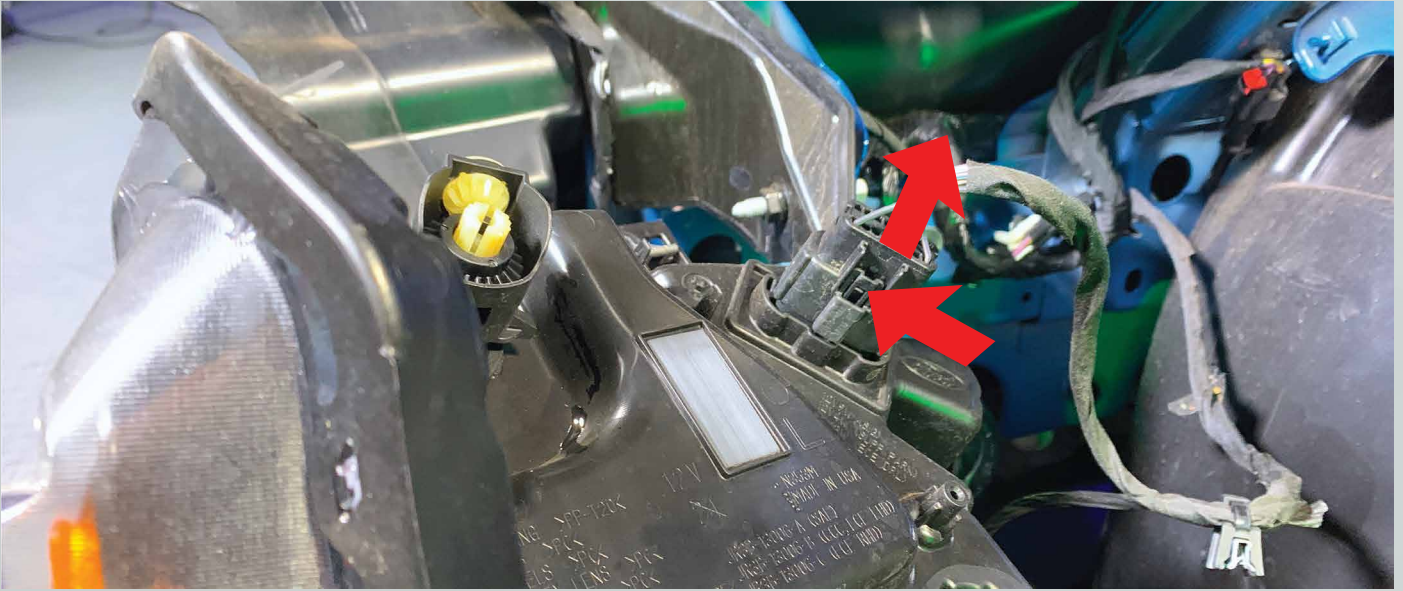

13. Repeat steps 10-12 on the other side of the car.

14. Grab an XB headlight and plug in the multipin connector into the car. Repeat on the other side of the car.

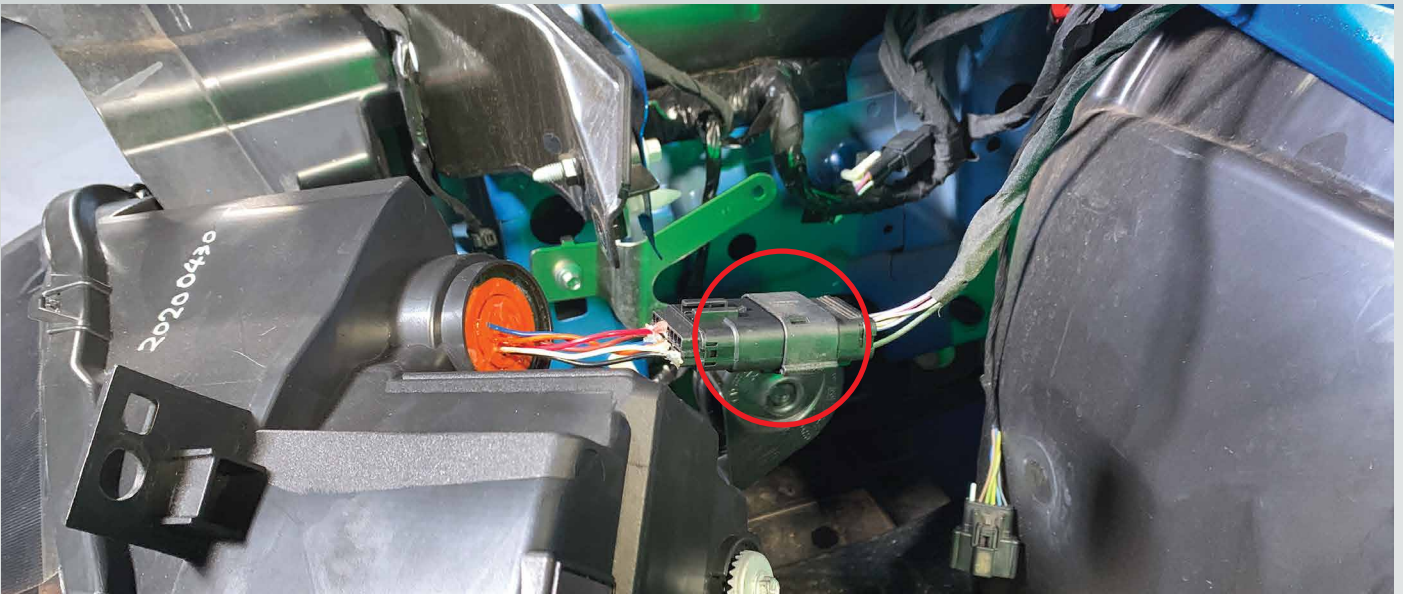


15. Turn the car on and test all of the functions to make sure everything works.

16. Reassemble the car in the reverse order that you took it apart.

17. To adjust the height of the headlight beam insert a philips head screwdriver into this slot and rotate it clockwise to make the beam go down and counter clockwise to make the beam go up.



- Please refer to the aiming standards below when adjusting your headlight beam.

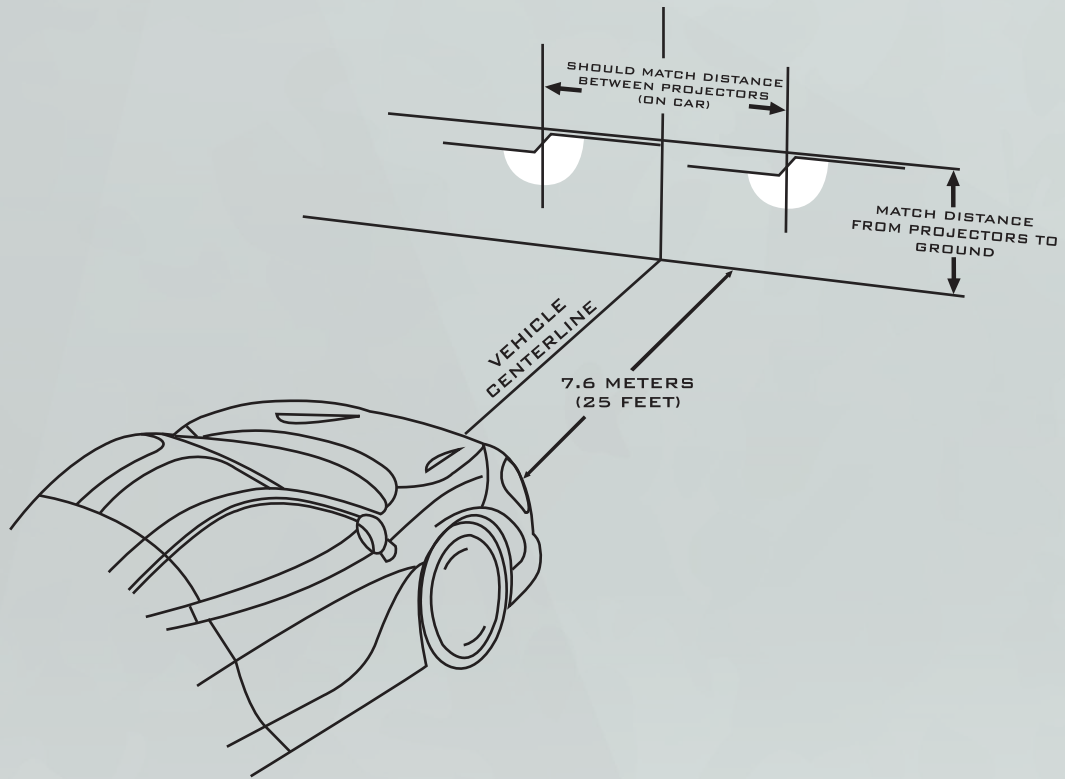

ENJOY YOUR NEW MORIMOTO XB HEADLIGHTS!

