

44433
11-13 Chrysler
300



44433
11-13 Chrysler
300


11-13 Chrysler 300
Sport Series Mesh Grille (overlay)
Install time: 30 Mins.

TOOLS REQUIRED:

Pliers
Socket Wrench

PARTS LIST:

(1) Sport Grille (9) 6/32 1/2" Machine Screws
(9) 6/32 Nylon Lock Nuts
(9) L-Brackets
(9) Threaded J-Hooks

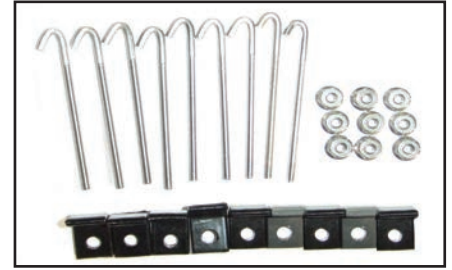

FOR OVERLAY

USE PG.2 IF YOU WOULD LIKE TO INSTALL THE GRILLE WITH THE INSERT METHOD

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.


Step 1

- Remove the Plastic Ribs from the Grille. (Fig. 1)

Step 2

- Place Sport Mesh over the Factory Grille. (Fig. 2)
- Insert Threaded J-Hooks on corners and middle through the Mesh Grille to latch on. (Fig. 3)
- Place L-Bracket behind Threaded J-Hook to Latch onto Factory Grille. (Fig. 4)
- Thread with 6/32 Nylon Lock Nut.

Installation Complete

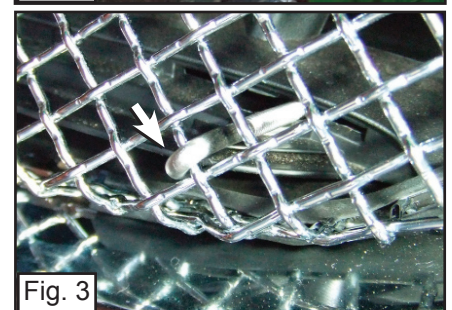



11-13 CHRYSLER 300C
Sport Series Mesh Grille (Insert)
Install time: 30 Mins.

TOOLS REQUIRED:

Plastic Prybar
10mm & 7mm Socket Wrench
3/16 Drillbit & Drill
Screwdriver

PARTS LIST:

(1) Sport Grille
(9) 6/32 Nylon Lock Nuts
(9) 6/32 1/2' Machine Screws

FOR INSERT





PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

Step 1 Factory Grille Shell Removal

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesnt come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.

Step 2 Factory Grille Removal

- Remove 2 Clips on the Bumper Support. (Fig. 8)

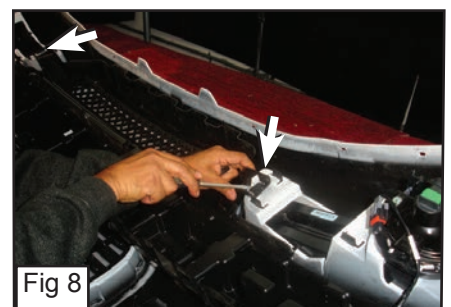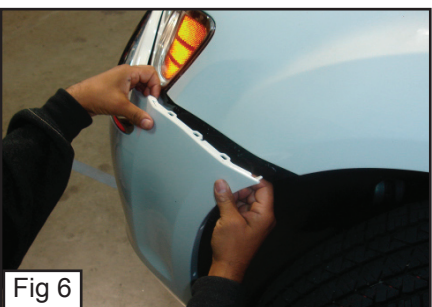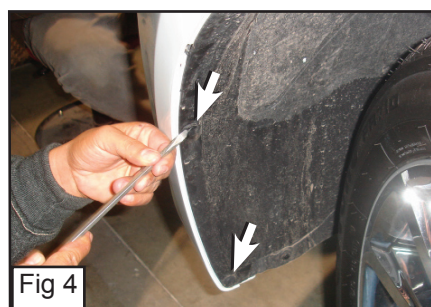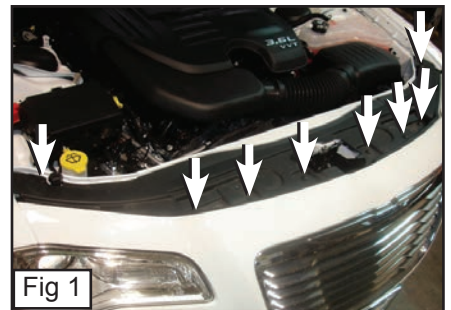

44433
11-13
Chrysler 300C



44433
11-13
Chrysler 300C

11-13 CHRYSLER 300C

Sport Series Mesh Grille

- Remove 2 Screws on the corners of the Grille Shell. (Fig. 9)
- Remove 11 Clips around the Grille Shell. (Fig. 10)
- Remove Factory Grille. (grille will come out forward.)

Step 3 Grille Installation

- Unclip the Factory Grille from around the Chrome Frame. (Fig. 11)
- Place Mesh Grille through the Chrome Frame. (Fig. 12)
- Hold in place the Mesh Grille so it wont move around (Do not put Mesh Grille too far out or too far in the Chrome Lip). (Fig. 13)
- Drill a 3/16 Hole through the Brackets on the Mesh Grille. (Fig. 14)
- Insert 1/2" Machine Screws through the Brackets and thread with 10/32 Nylon Lock Nuts. (Fig. 15)

Place Grille Back into Factory Grille Shell Opening.
Re-Assemble Bumper Support, Clips and bolts.

Installation Complete

