

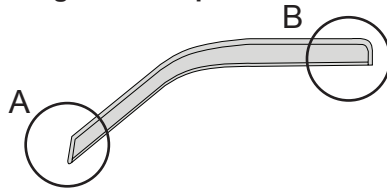


This product is designed to be placed on the outside rubber window channels of the door.

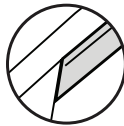


70°-100° F (Install temp.)

- 1 Buff the outside rubber window channels where the visor will mount with the Scotch Brite pad, then clean with an alcohol pad. Be sure to use Surface Prep on all windows before installing the first visor to prevent Surface Prep pad from drying out.
- 2 Remove tape line from rear end flange. Expose 2" of tape from each end of top flange.
- 3 Position the driver side visor on the previously prepared surface. The front and top flanges attach directly to the rubber channel on the outside of the door. The rear flange attaches to the vertical plastic cap.
- 4 The upper lip of the visor will slide under the rubber door seal. (See Close-up.)
- 5 Verify proper positioning, and gently press on exposed areas of tape to secure in place.
- 6 With the visor in its final position, remove remaining tape liner by pulling on free ends.
- 7 Apply pressure along flange edges to ensure adhesion and secure visor in place.

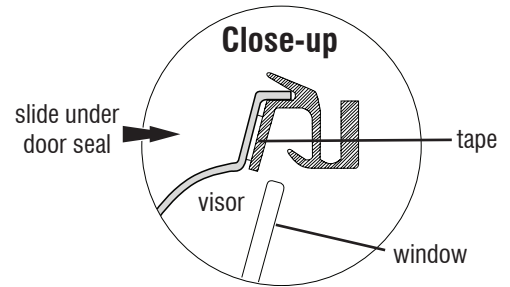


A

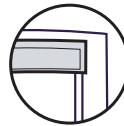

B



IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

This product is designed to be placed on the outside rubber window channels of the door.

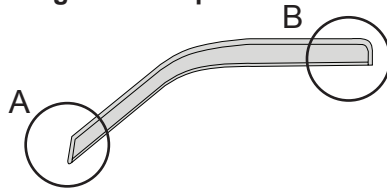


70°-100° F (Install temp.)

- 1 Buff the outside rubber window channels where the visor will mount with the Scotch Brite pad, then clean with an alcohol pad. Be sure to use Surface Prep on all windows before installing the first visor to prevent Surface Prep pad from drying out.
- 2 Remove tape line from rear end flange. Expose 2" of tape from each end of top flange.
- 3 Position the driver side visor on the previously prepared surface. The front and top flanges attach directly to the rubber channel on the outside of the door. The rear flange attaches to the vertical plastic cap.
- 4 The upper lip of the visor will slide under the rubber door seal. (See Close-up.)
- 5 Verify proper positioning, and gently press on exposed areas of tape to secure in place.
- 6 With the visor in its final position, remove remaining tape liner by pulling on free ends.
- 7 Apply pressure along flange edges to ensure adhesion and secure visor in place.

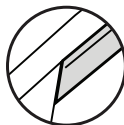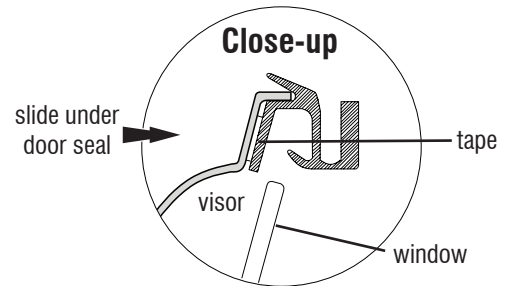

A

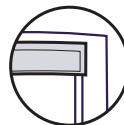

B

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219