



## FRONT TUBULAR DOOR

Part: J051FD



Fit: 2007 - Current

Jeep Wrangler JK



TO AVOID BEING SCRATCHED, PLEASE PROTECT THE SURFACE OF THE TAILGATE VENT COVER CAREFULLY.



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.




READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



PLEASE USE SAFETY GLASSES & ENSURE TO BLOCK VEHICLE MOVEMENT DURING INSTALLATION PROCESS



30-60 min



Cutting Not Required



Drilling Not Required



[support@trailfx.com](mailto:support@trailfx.com)



1 866 638 4870



POLISHED STAINLESS STEEL – LIMITED LIFETIME  
POWDER COATED BLACK – 3 YEARS

### FRONT TUBULAR DOOR INSTALLATION PARTS LIST

Qty	Part Description	Qty	Part Description
8	M8*25 Half Round Head Socket Hexagon Bolt	8	M8 Spring Washer
16	M8*16*1 Flat Washer	8	M8 Nuts

### PART LIST IMAGES



## INSTRUCTION PROCEDURE

**Step 1:** Assemble the doors as shown below.

**Step 2:** Remove the Factory installed Front door. Raise the TrailFx Front Tubular Door up into place and align the (2) holes on the frame with the holes on vehicle on the doors.

**Step 3:** Close the Door and Debugging Screws.


**Step 4:** Fasten Safety Belt in Doors.

**Step 5:** Install the OEM Vehicle bolts.

**Step 6:** Installation completed.

### A – Door Assembly

1. Assemble to Doors parts and the safety belt (4xM8\*25 bolts,8xM8 Flat washers, 4xM8 Spring washers, 4xM8 Nuts)

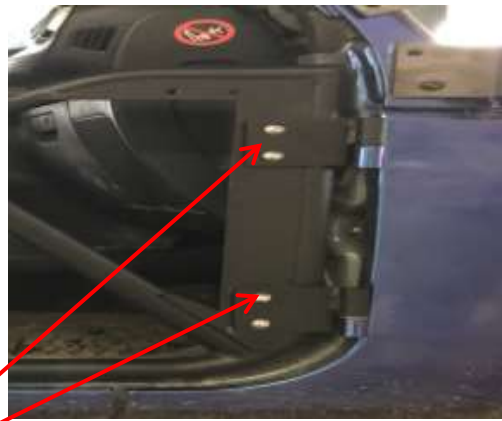

2. Front Door Installation as Illustrated below




3. Fix the door and Debugging screws.



4. Fasten Safety Belt in doors



**5. Install OEM Vehicle bolts**

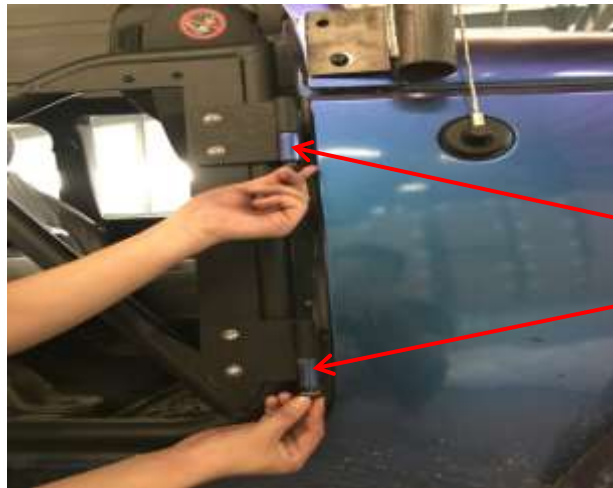

**6. Installation completed**



**PRODUCT CARE**

1. Periodically check the product to ensure all fasteners are tight and components are intact.
2. Regular waxing is recommended to protect the finish of the product.
3. **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and Can scratch the finish leading to corrosion
4. Aluminum polish may be used to polish small scratches and scuffs for **Stainless Steel finish.**
5. Mild soap may be used to clean the product for both **Stainless Steel and Black finish.**

Check out these other FX-Products!!

www.FX-Products.com

**FAQ's**

1. **Hardware's are not of correct size.**  
*GMC / Chevrolet 2006 & up, please ensure that holes are not partially covered with any plastic grommet or rust? If it is, please remove the plastic grommet & rust from the thread holes & re-try the installation.*
2. **Mounting Bracket are not getting Installed properly.**  
*In some cases Illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.*
3. **Products are thumping / rattling after installation.**  
*Please ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.*
4. **Missing / Excess Hardware.**  
*Recheck hardware count as per the part list.*
5. **Product not installing properly.**  
*Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.*