



Hood Protector 5421H



FIT: 13-16

FORD ESCAPE



PHILLIPS SCREW DRIVER REQUIRED FOR INSTALLATION



30-60 min



CUTTING NOT
REQUIRED



DRILLING NOT
REQUIRED



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



support@trailfx.com



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



1-866-638-4870



LIMITED LIFETIME WARRANTY

Important Safety Information

Before driving, ensure that the hood shield is properly secured to vehicle.
Do not use automatic "brush style" washes as hood protectors may accidentally be pulled off the vehicle.
Do not use cleaning solvents of any kind on the acrylic surface of the hood protector to avoid accidental damage.
Periodically check the hood protector to ensure it remains securely fastened to the vehicle.

NOTE: Actual product may vary from illustration.

Qty	Description	Qty	Description
01	Hood Protector	01	Hardware Kit
01	Alcohol Pad		

Tools Required



Car Wash Supplies



Clear Towel



Alcohol
Pad x2




Adhesive Promoter

Preparation Before Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle to remove any dirt or grime from the area where the hood protector will be attached and dry thoroughly with a clean towel.

INSTALLATION STEPS

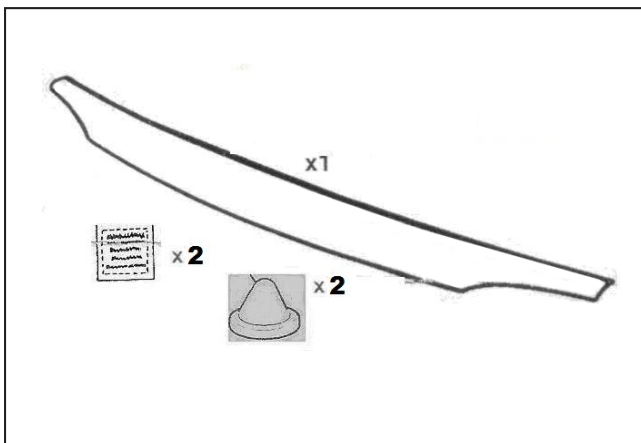

1

Thoroughly wash the bottom of the front edge of the hood where the double sided tape will adhere. Once the area is dry, wipe down with supplied alcohol pad.

2

Peel back 2 inches of the protective film from each side of the tape. Lightly apply the adhesion promoter to the exposed tape area and let dry.

3

Align the hood shield to the center of the hood. Ensure the 2 inches of protective tape film are reachable and press the hood shield into place at the exposed area. Confirm placement is correct and slowly remove the remaining tape film.

4

Apply pressure to the taped area for a minimum of 60 seconds for best adhesion.

5

Use the supplied alcohol wipe to clean the hood area where the bumps stops are to be installed. Remove the tape liner from each bump stop. Lightly apply adhesion promoter to the tape area and let dry for approximately one minute. Press bump stop into place and hold for sixty second. Repeat process for second bump stop.

PRODUCT CARE

Periodically check the hood protector to ensure all fasteners are tight and the hood protector is securely fastened to the vehicle.

Wash with regular soap and water. Use of any soap, polish, or wax that contains an abrasive could lead to accidental damage.



FAQ's

1. **Mounting Brackets are not Installing properly.**
In some cases illustration images shown in instruction sheets may not be exactly the same depending on vehicle application. Double check all installation hardware before installation as clips may look similar but could be different and effect installation.
2. **Missing Contents.**
Re-check count as per the contents list / double check the box for missing items.
3. **Product not installing properly.**
Verify the make, model, year, and sub-model (if applicable) of your vehicle is listed as an application. Re-check all installation steps to ensure all steps were followed.

Check out these other TrailFX Products!!

www.TrailFX.com



WINDOW VENTS



STEP BARS



BED LINER



FENDER FLARES

LKQ Specialty Products Group (LKQ) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. LKQ disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, LKQ may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. LKQ's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.