


# **F30LL1**

# 3.0" Front Lift Leveling Kit

Fit: 2004 - 2008 2009 - Current Ford F150 2 & 4WD Ford F150 2WD







REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



35" x 11.5"



support@trailfx.com



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



60-120 min




844-717-LIFT (5438)



Use the proper tools and safety equipment to perform all work. Torque all fasteners to proper specifications and double check work. Align your vehicle after installation.

PARTS LIST:			
Qty	Part Description	Qty	Part Description
6	Nuts 10mm X 1.25 mm		

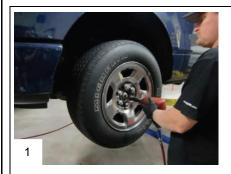

Lift vehicle securely and remove wheels/tires.



Remove lower sway bar end link hardware.



Loosen upper ball joint nut, but do not remove.



Loosen upper strut mount nuts.



Carefully strike spindle as shown to separate ball joint.



Pull down and remove upper ball joint nut.

Page 1 of 3 Rev 060615



Loosen lower strut bolt/nut and remove.



Remove top strut mount nuts and remove assembly.



Attach strut extension spacer with OE hardware and tighten.



Use provided hardware to re-attach top of strut to vehicle.



Reconnect lower strut mount and torque to spec.



Use jack and pry bar to reattach upper ball joint to spindle.



Tighten upper ball joint and torque to spec.



Reconnect lower sway bar end links and torque to spec.

Install wheels and torque to spec measure and align.

15



## **FINAL CHECKS & ADJUSTMENTS**



#### **Post Installation Check:**

Once the vehicle is lowered to the ground, check all parts which have rubber or urethane components to insure proper torque.
Torque wheels to factory specs.
Move vehicle backwards and forwards a short distance to allow suspension components to adjust.
Turn the front wheels completely left then right and verify adequate tire, wheel, brake line, and ABS wire clearance.
Test and inspect steering, brake and suspension components for tightness and proper operation.
Inspect brakes hoses and ABS lines for adequate slack at full extension.
Test drive vehicle and re-check the torque of all fasteners and re-torque wheels on vehicle. Readjust headlamps.
NOTE: Failure to perform the post inspection checks may result in vehicle component damage and/or personal injury or death to driver and/or passengers.

#### **Vehicle Handling Warning:**

- Vehicles with larger tires and wheels will handle differently than stock vehicles.
- > Take time to familiarize yourself with the handling of your vehicle

#### Wheel Alignment/Headlamp Adjustment:

- ✓ It is necessary to have a proper and professional wheel alignment performed by a certified alignment technician.
- ✓ Align the vehicle to factory specifications.
- ✓ It is recommended that your vehicle alignment be checked after any off-road driving.
- ✓ In addition to your vehicle alignment, for your safety and others, it is necessary to check and adjust your vehicle headlamps for proper aim and alignment.

# **Vehicle Re-Torque and Safety Inspection:**

Upon completion of all services and adjustments performed on your vehicle, and within 50 miles of driving, check to ensure all fasteners and hardware are properly torqued to specification as noted in the vehicles factory service manual.

# Check out these other TrailFX Products!!

www.TrailFX.com









Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.

Page **3** of **3** Rev 060615