



T25LL2 2.5" Front Lift Leveling Kit



2007 – Current

Toyota Tundra 2 & 4WD



REMOVE CONTENTS FROM BOX.
VERIFY ALL PARTS ARE PRESENT.



33" x 12.5"



support@trailfx.com



READ INSTRUCTIONS CAREFULLY
BEFORE STARTING INSTALLATION.



60-120 min



844-717-LIFT (5438)



Use the proper tools and safety equipment to perform all work. Torque all fasteners to proper specifications and double check work. Align your vehicle after installation.

NOTE: Position truck on a flat surface and lift vehicle by the frame so that the front wheels are off the ground. Use a floor jack and jack stands or a two post lift if available.

PARTS LIST:

Qty	Part Description	Qty	Part Description
8	10mm x 1.25mm Nuts		




1

Remove the skid plate. Some models may have two skid plates. A 12mm socket is needed.




2

Starting on the driver side, remove the five lug nuts and the wheel.

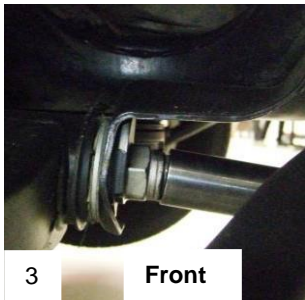

3

Front

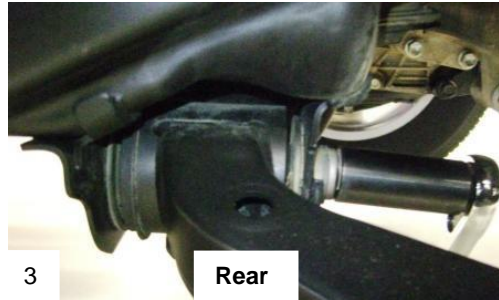

3

Rear

Using a 24mm socket, loosen but don't remove the driver side lower control arm bolts. This will allow the lower control arm to move freely.

DO NOT REMOVE ALIGNMENT CAMS.



4

Using a 19mm socket, loosen and remove the sway bar end link bolt on the lower control arm.



5 Lower strut nut

Using a 22mm socket, loosen and remove the lower strut mounting nut and bolt from lower control arm.



6 Lower strut mounting bolt



7

Using a 14mm wrench, loosen but do not remove the four upper strut mounting nuts.



8



8

Loosen and remove the two 22mm bolts that connect the lower ball joint to the spindle. Please take caution as the lower control arm will swing down as soon as you remove the lower ball joint bolts. Holding the strut with one hand, remove the four 14mm upper strut mounting nuts. Remove the strut, being careful not to damage the CV Boot on 4WD models.



8




9

Install the TrailFx strut extension and torque to factory specs.




10

Reinstall strut into vehicle and install the new nuts provided, but do not tighten. Using a jack, raise the lower control arm and guide both the lower strut mount and the sway bar end link into their respective pockets. Install the lower strut mounting bolt and nut, torque to factory specs. Use thread locker if necessary.

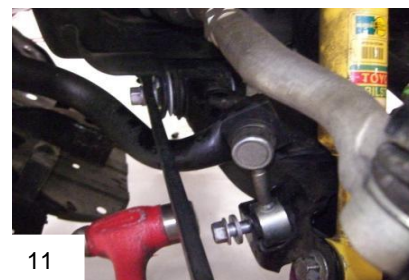

11

Use of a pry bar and hammer may be need to align mounting holes for the end link bolt. Install 19mm bolt and torque to factory specs.

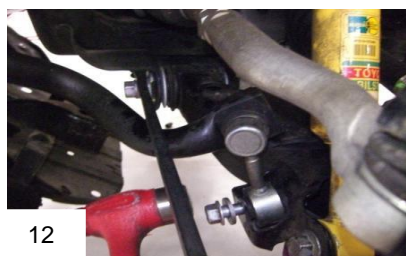

12

Install the two 22mm lower ball joint bolts starting with the rear bolt first, as it is easier to line up with the spindle. Torque to factory specs, use thread locker where necessary. Tighten the four 14mm upper strut mounting bolts and torque to factory specs. Put the wheel back on and torque to 85-90 ft/lbs. With vehicle on the ground tighten the lower control arm bolts and torque to factory specs. Use thread locker where necessary.

**FINAL CHECKS & ADJUSTMENTS****Post Installation Check:**

- Once the vehicle is lowered to the ground, check all parts which have rubber or urethane components to insure proper torque.
- Torque wheels to factory specs.
- Move vehicle backwards and forwards a short distance to allow suspension components to adjust.
- Turn the front wheels completely left then right and verify adequate tire, wheel, brake line, and ABS wire clearance.
- Test and inspect steering, brake and suspension components for tightness and proper operation.
- Inspect brakes hoses and ABS lines for adequate slack at full extension.
- Test drive vehicle and re-check the torque of all fasteners and re-torque wheels on vehicle.

NOTE: Failure to perform the post inspection checks may result in vehicle component damage and/or personal injury or death to driver and/or passengers.

Wheel Alignment/Headlamp Adjustment:

- ✓ It is necessary to have a proper and professional wheel alignment performed by a certified alignment technician.
- ✓ Align the vehicle to factory specifications.
- ✓ It is recommended that your vehicle alignment be checked after any off-road driving.
- ✓ In addition to your vehicle alignment, for your safety and others, it is necessary to check and adjust your vehicle headlamps for proper aim and alignment.

Vehicle Re-Torque and Safety Inspection:

Upon completion of all services and adjustments performed on your vehicle, and within 50 miles of driving, check to ensure all fasteners and hardware are properly torqued to specification as noted in the vehicles factory service manual.

Check out these other TrailFX Products!!

www.TrailFX.com

**HOOP STEPS****HD GRILLE GUARDS****WINCHES****LED LIGHTS**

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.