



# TOW MIRROR FSD99MCP



1999-2007  
2000-2005

Ford Super Duty  
Ford Excursion



DO NOT OVER-TIGHTEN THE MOUNTING SCREWS. OVER-TIGHTENING THE MOUNTING SCREWS MAY RESULT IN DAMAGE TO MOUNTING PLATE OR HARDWARE.



60-180 min



Cutting Not Required



Drilling Not Required



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



support@trailfx.com



1 866 638 4870



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



Limited Lifetime Warranty


### PARTS LIST

SL.No	Part Description	SL.No	Part Description
1	Drivers Side Mirror	2	Passenger Side Mirror




### TOOLS NEEDED

Ratchet and extensions (A)	10mm Deep Socket (C)
7mm socket (B)	Screw Driver (D)

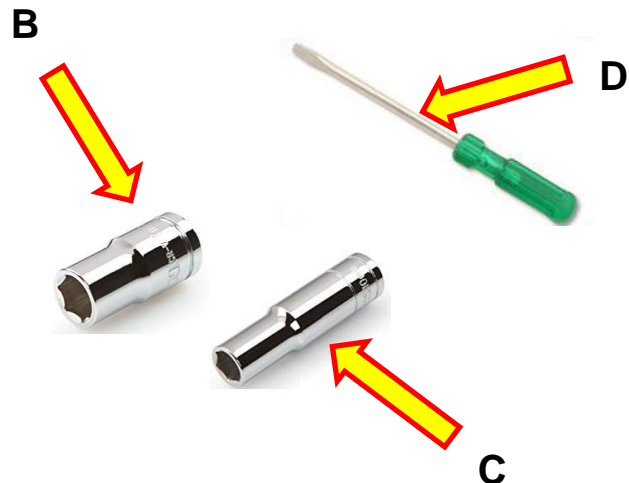

### Installation Instructions

1. Using a screw driver pop out the mirror switch panel. Insert the screw driver in the notch of panel and pop out the plastic panel. Refer below images.

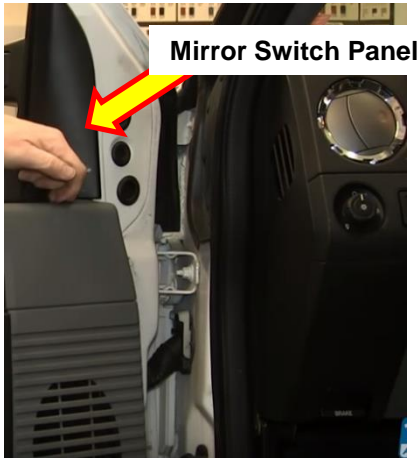


2. Use a trim panel tool or flat edge screwdriver to pop trim panel clips out from the slots in the door. See below images.


Pull here



3. Peel back the dust shield to reveal two 10mm bolt locations. Remove the two rubber plugs to reveal two additional bolt locations. See below images.

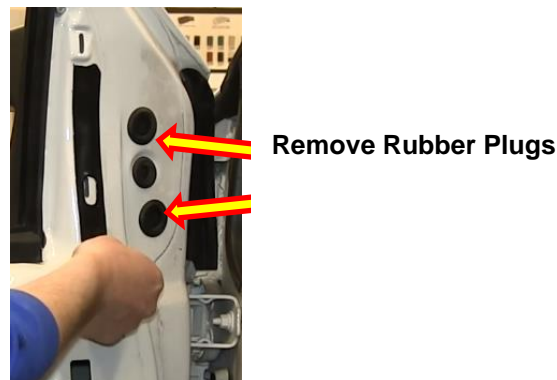

4. Remove all four nuts using a 10mm socket and ratchet. See below image.

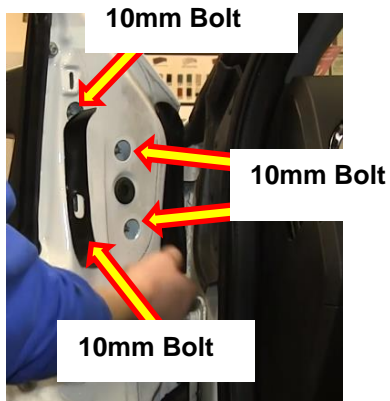

Socket and Ratchet Set

**NOTE:** Ensure one person holds the mirror from the outside when loosening the nuts to prevent the mirror from falling.

5. Slide the mirror studs of the new TrailFX tow mirror into the holes in door.
6. Re-install the washers and nuts using a 10mm socket and ratchet.
7. After installation, check the tow mirrors to make sure they are securely attached to the vehicle.

**PRODUCT CARE**

1. Periodically check the product to ensure all fasteners are tightened and components are intact.
2. Regular waxing is recommended to protect the finish of the product.
3. **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion, ensure the cloth used for wiping is clean and soft.

**FAQ's**

1. **Tow mirrors are loose after installation.**  
*Please ensure that all required mounting brackets / hardware's are installed & tightened correctly.*
2. **Missing / Excess Hardware.**  
*Re-check hardware count as per the part list.*

Check out these other TrailFX Products!!

www.TrailFX.com



FULL FRONT REPLACEMENT BUMPER



REAR REPLACEMENT BUMPER



3.5 INCH OVAL BULL BAR



6" OVAL BENT STEP BAR

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.