

Jeep Product Part No. J053T

Jeep Wrangler JL Fits: 2018-Current





REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.







60-180 min

Cutting Not Required

Drilling Is Optional



support@trailfx.com



1 866 638 4870



6mm Nylon Lock Nuts

POLISHED STAINLESS STEEL - LIMITED LIFETIME

POWDER COATED BLACK - 3 YEARS



Qty

1

1

6

6


DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM 45 TO 65 FOOT POUND.

Part Description

8-1.25mm x 35mm Hex Bolts

8mm Lock Washers



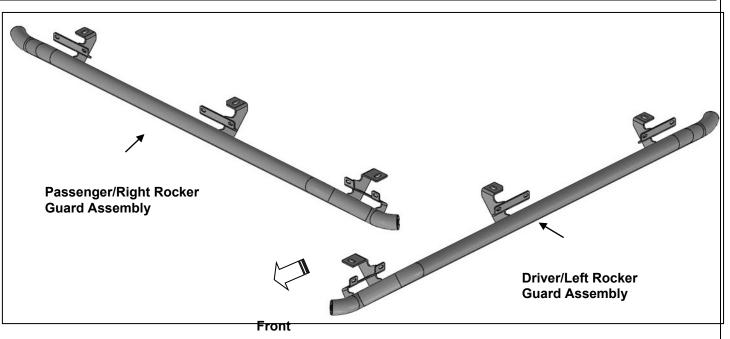

12


PROCEDURE:


- REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. FACTORY INSTALLED OR AFTERMARKET "ROCK RAILS." SIDE STEPS OR RUNNING BOARDS MUST BE REMOVED. ASSISTANCE IS HIGHLY RECOMMENDED.
- 2. Start installation on the driver side of the vehicle. Locate the (3) pairs of holes in the pinch weld. Directly behind each pair of holes, locate the 8mm threaded hole in the floor of the vehicle, (Figures 1—3). NOTE: Threaded holes may be covered with undercoating. Scrape off excess undercoating to provide a flat surface for brackets.


Page 1 of 4 Rev 101718

- 3. With assistance, attach the Rocker Guard to the <u>back</u> of the pinch weld using the included (6) 6mm x 25mm Hex Bolts, (12) 6mm Flat Washers and (6) 6mm Nylon Lock Nuts, (Figures 4—9). Leave hardware loose at this time.
- **4.** Attach the mounting tabs on the Rocker Guard to the (3) threaded holes in the floor with the included (3) 8mm x 35mm Hex Bolts, (3) 8mm Lock Washers and (3) 8mm Flat Washers, (Figures 4—9).
- **5.** Adjust the Rocker Guard and tighten all hardware.
- **6.** Repeat **Steps 2—5** for passenger/right side Rocker Guard installation.
- **7.** Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Driver Side Installation Pictured

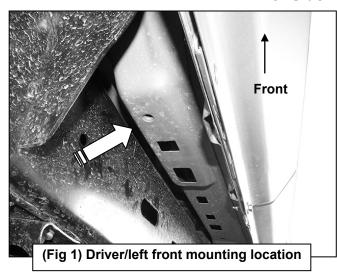


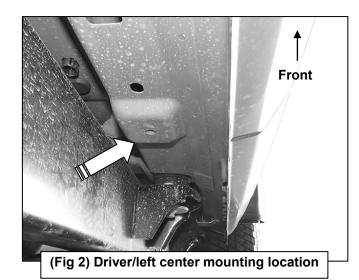


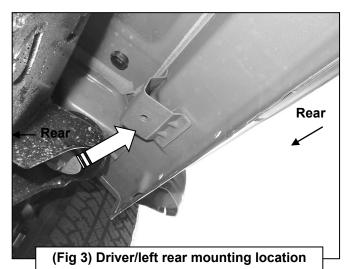

(2) 6mm Hex Bolts (4) 6mm Flat Washers


(2) 6mm Nylon Lock Nuts

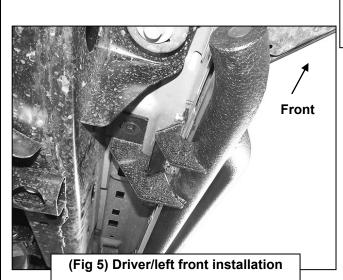

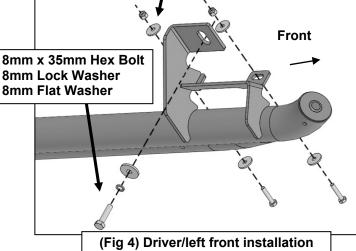

Page 2 of 4 Rev 101718

Driver Side Installation Pictured

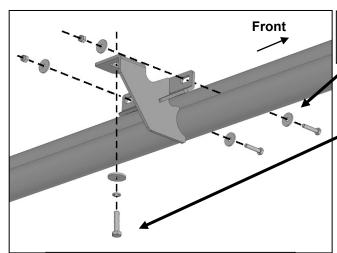

(Fig 6) Driver/left center installation

- (2) 6mm Hex Bolts
- (4) 6mm Flat Washers
- (2) 6mm Nylon Lock Nuts

8mm x 35mm Hex Bolt 8mm Lock Washer 8mm Flat Washer



(Fig 7) Driver/left center installation

(2) 6mm Hex Bolts
(4) 6mm Flat Washers
(2) 6mm Nylon Lock Nuts


Rear

8mr
8mr

(Fig 8) Driver/left rear installation



8mm x 35mm Hex Bolt 8mm Lock Washer 8mm Flat Washer

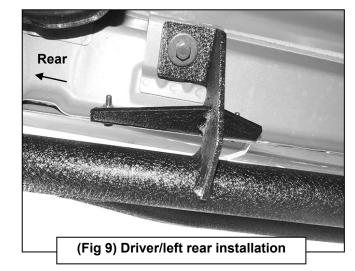


Page 3 of 4 Rev 101718

1	Passenger / Right 'Rear' Bracket marked "PR"
2	Driver / Left 'Rear' Bracket marked "DR"
3	Passenger / Right 'Center' Bracket marked "PC"
4	Driver / Left 'Center' Bracket marked "DC"
5	Passenger / Right 'Front' Bracket marked "PF"
6	Driver / Left 'Front' Bracket marked "DF"

Note:

- This guide is to identify the parts and not a reference for part count.
- > For part count, refer Parts List.
- > Product / Bracket image is representative and actual design may vary.

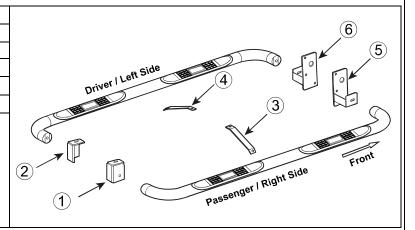

PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- Regular waxing is recommended to protect the finish of the product.
- Use ONLY Non-Abrasive automotive wax. Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
- · Aluminum polish may be used to polish small scratches and scuffs for Stainless Steel finish.
- Mild soap may be used to clean the product for both Stainless Steel and Black finish.

FAQ's

1. Hardware's are not of correct size.

In GMC / Chevrolet truck model 2006 & up, customer needs to reuse the factory body bolts to install the bracket. If your vehicle is not GMC / Chevrolet 2006 & up, ensure that holes are not partially covered with any plastic grommet or rust? If it is, remove the plastic grommet & rust from the thread holes & re-try the installation.

2. Mounting Bracket are not getting Installed properly.

In some cases Illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.

3. Products are thumping / rattling after installation.

Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.

4. Side Bar is not aligning with vehicle / Step Pads are not aligning with vehicle doors.

Side bar may be interchanged or mounting brackets are not installed at the correct position in the vehicle. Refer Parts identification guide.

5. Missing / Excess Hardware.

Recheck hardware count as per the part list.

6. Product not installing properly.

Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.

Check out these other TrailFX Products!!

www.TrailFX.com



Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.

Page 4 of 4 Rev 101718